

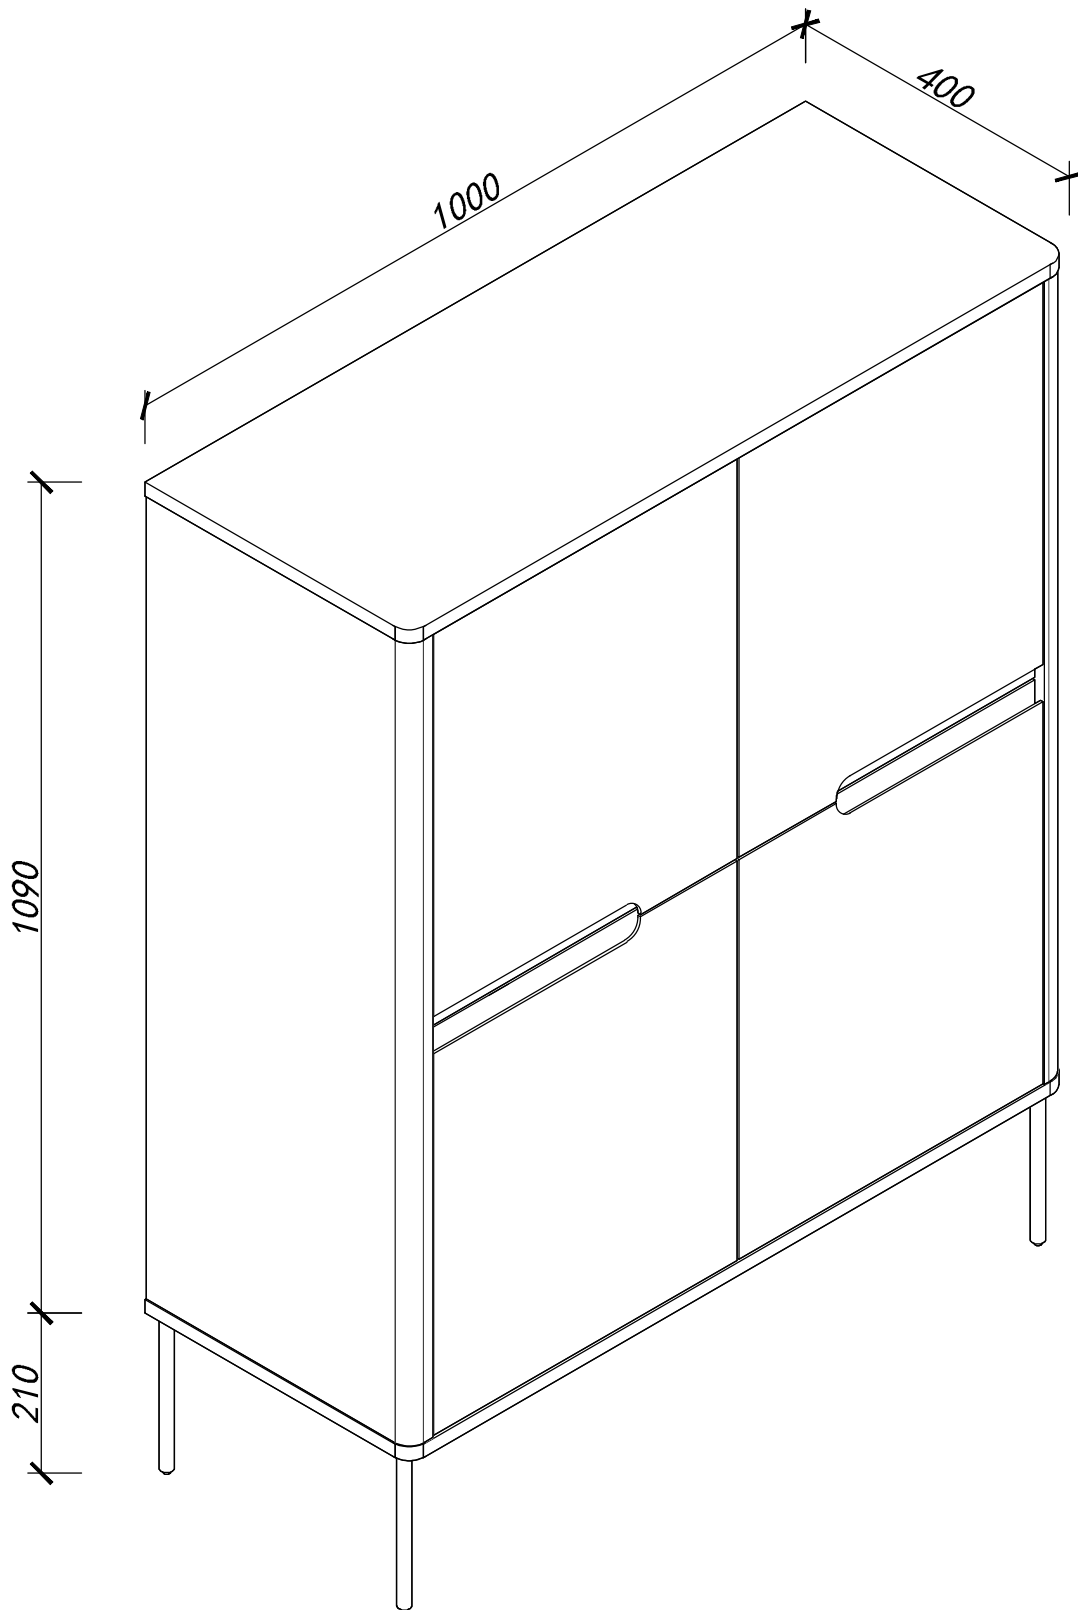
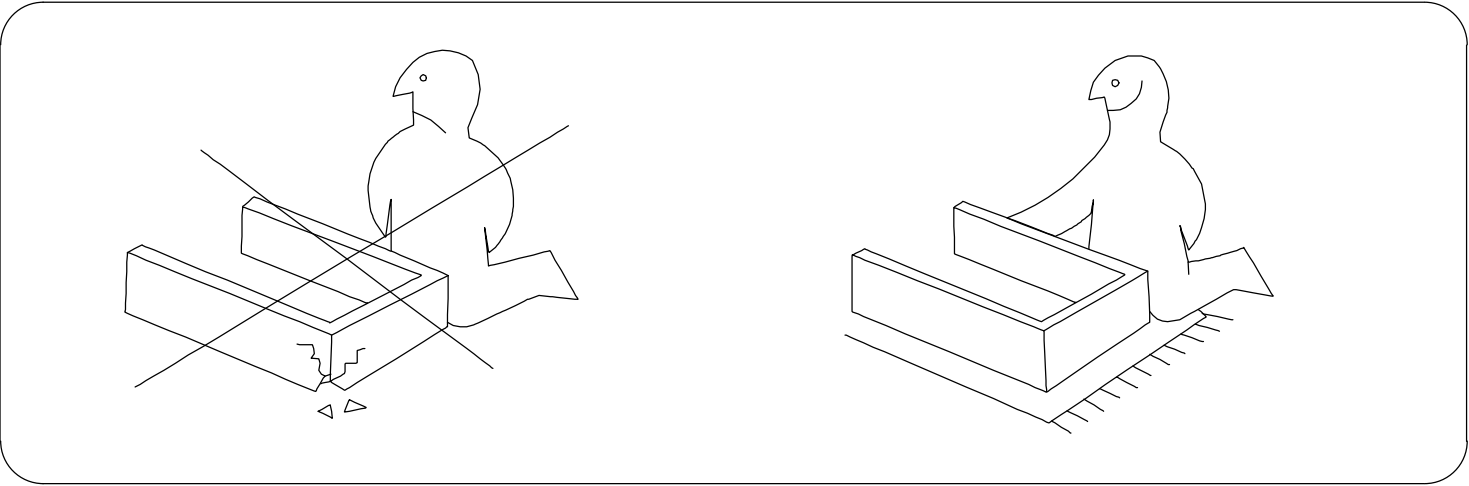


sømcasa


Assembly Instruction

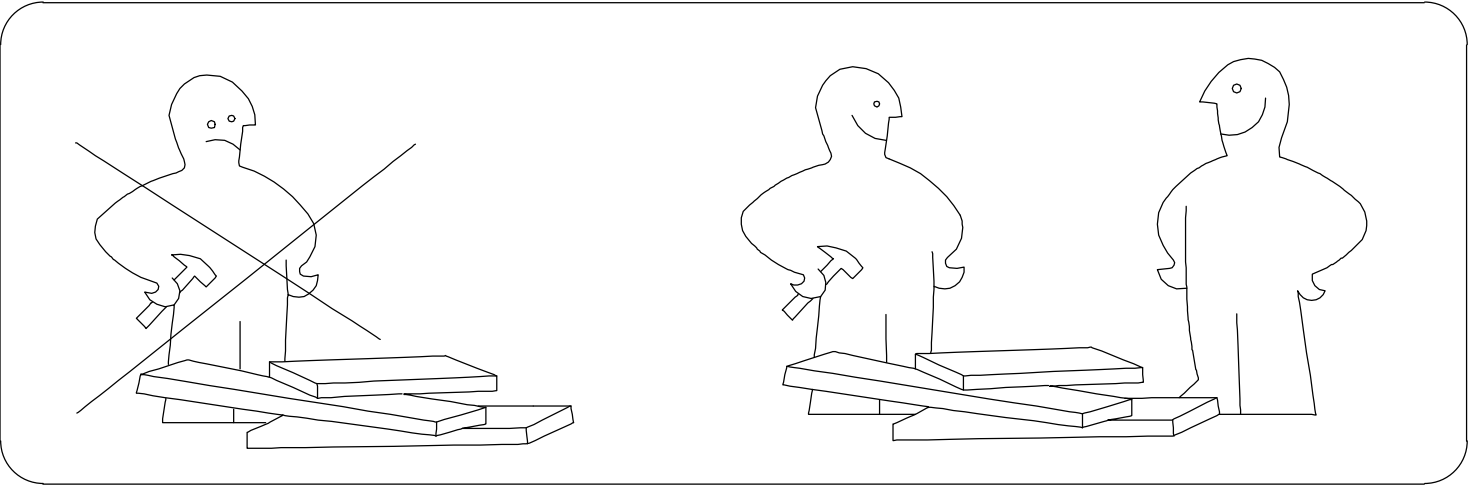

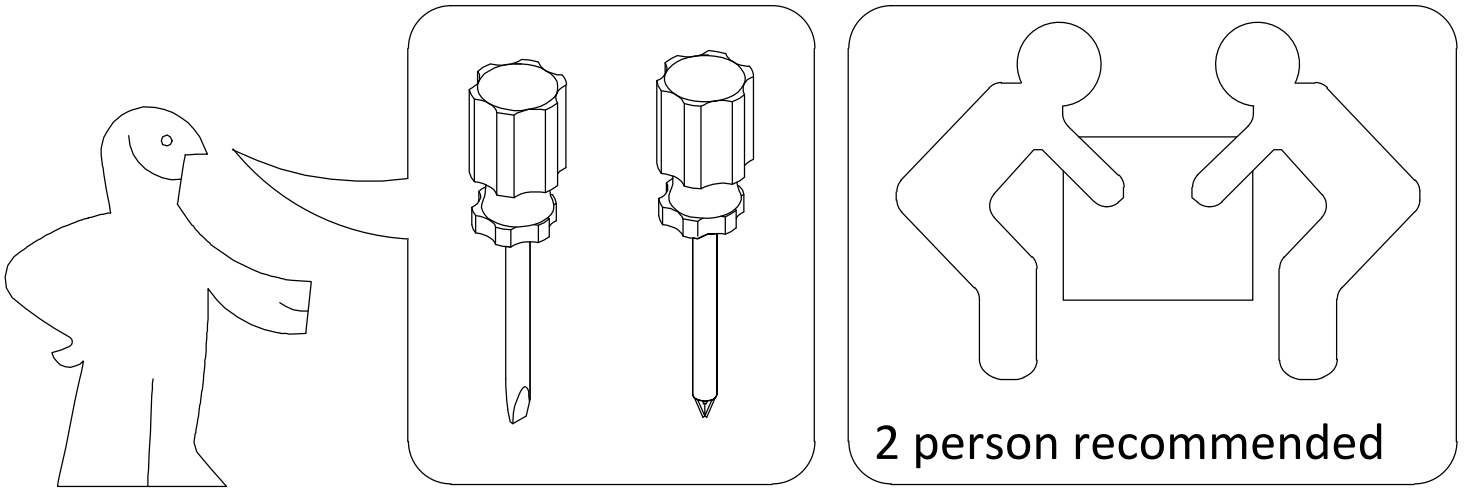

Panel No	Panel Sizes	Quantity
1	1000*400*18	1
2	1000*400*18	1
3	1054*399*36	1
4	1054*399*36	1
5	1054*380*16	1

Panel No	Panel Sizes	Quantity
6	455*379*16	2
7A/B	529*465*5	4
8	452*350*16	4
9	524*460*18	2
10	524*460*18	2

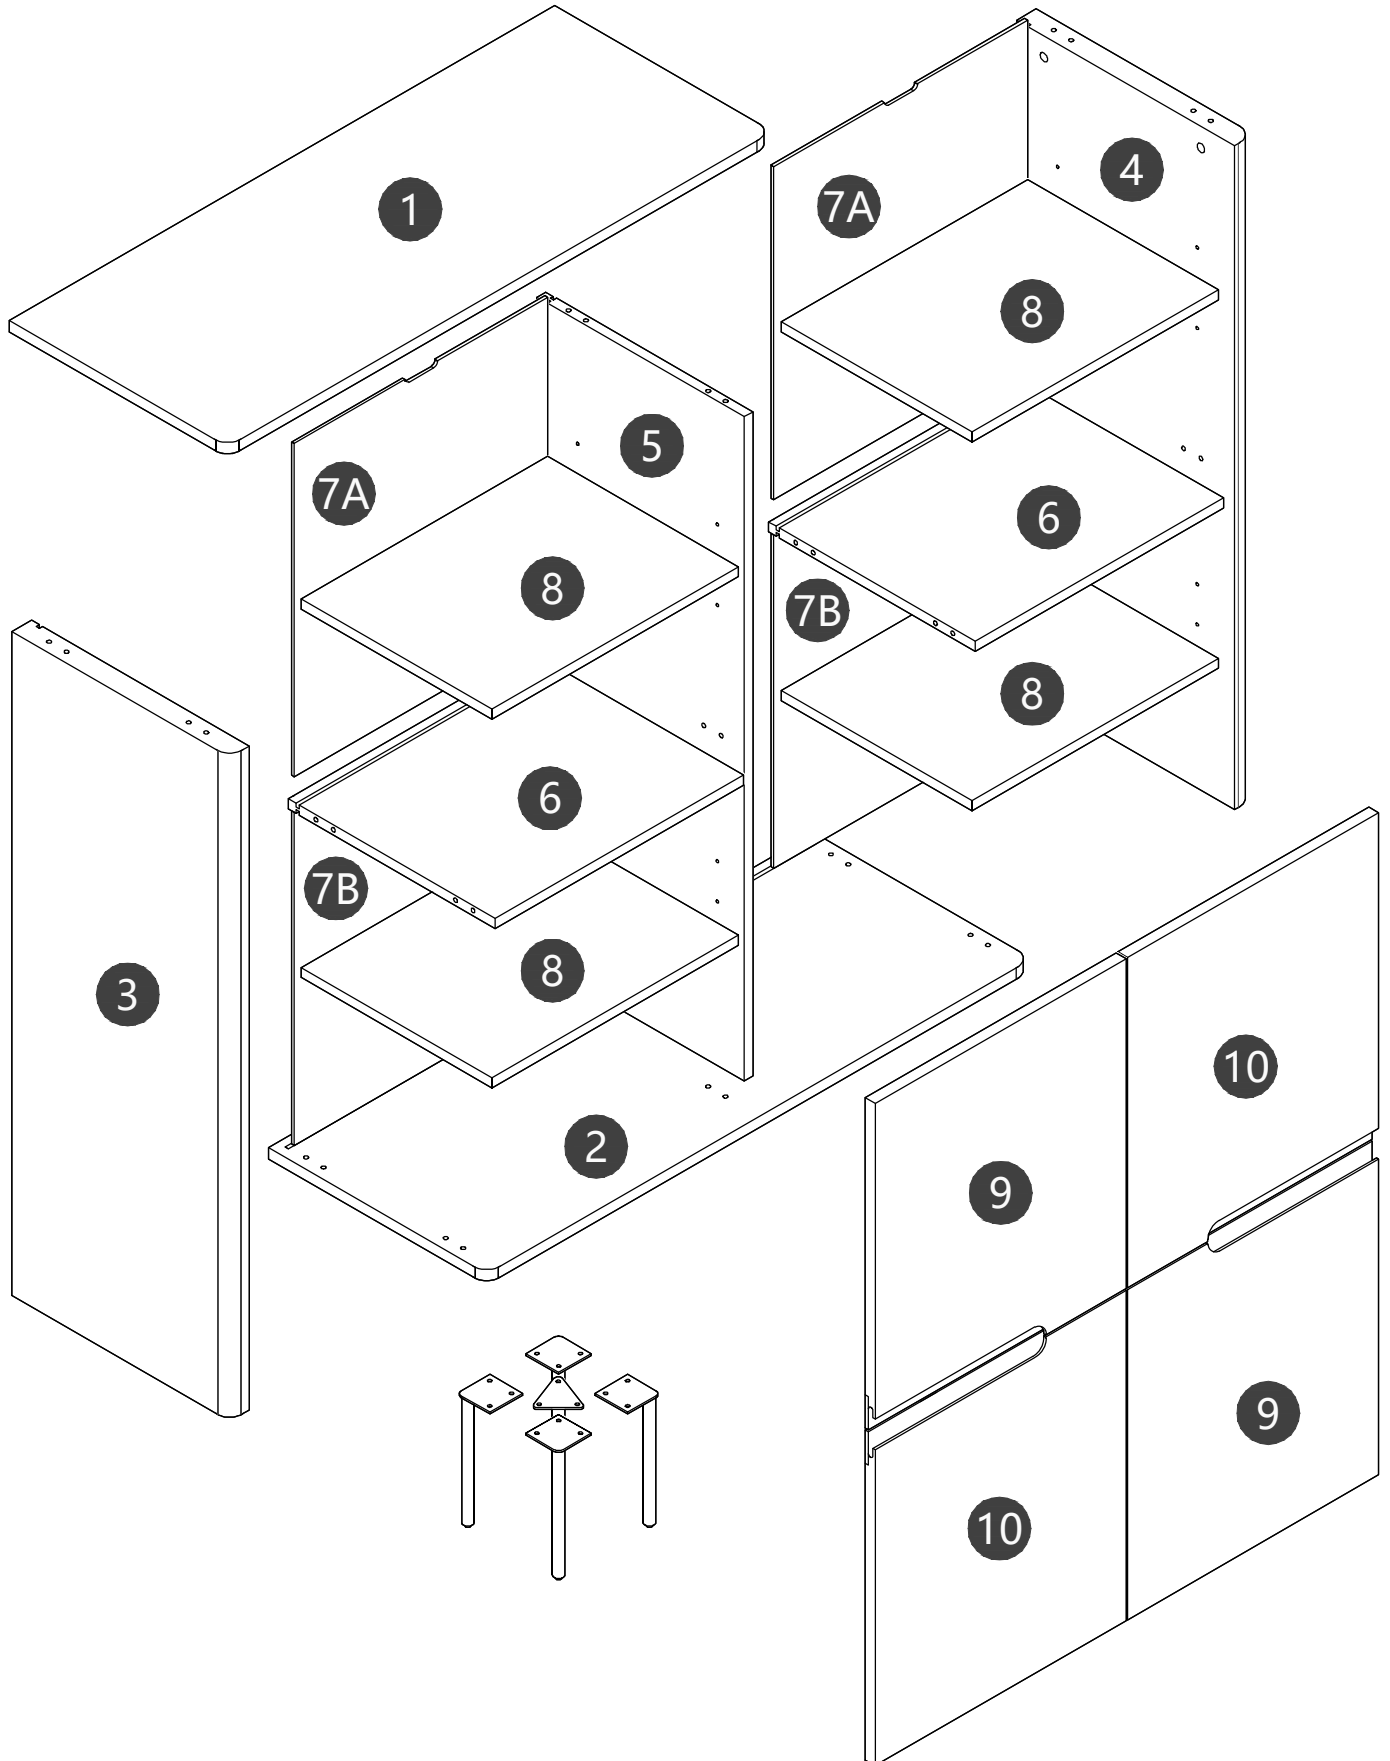


Fittings




M6*40

A=14



Φ8*30

B=20

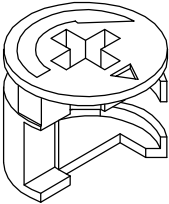


Φ15*12

C=14




Φ21


D=14

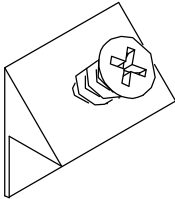

E=16

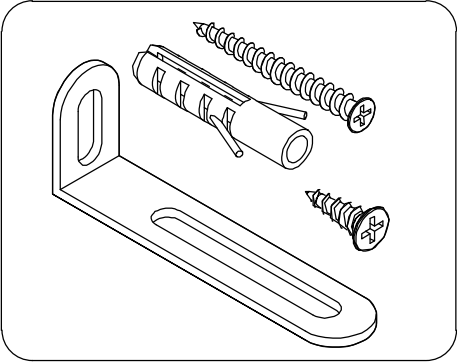

F=2




M6*16

G=15




M4


H=1

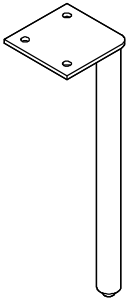

J1=4




J2=1

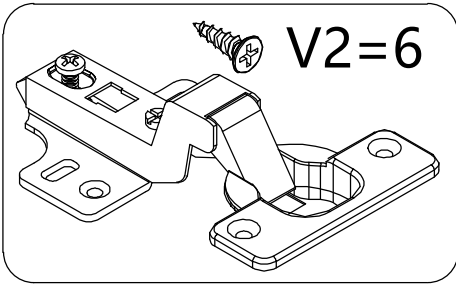


V2=6

I3=8

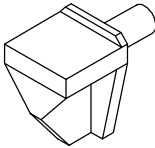

L=16

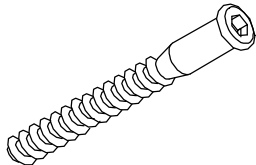


Φ7*50

Q=6



M4


Z1=15




M4

Z2=15


STEP 1

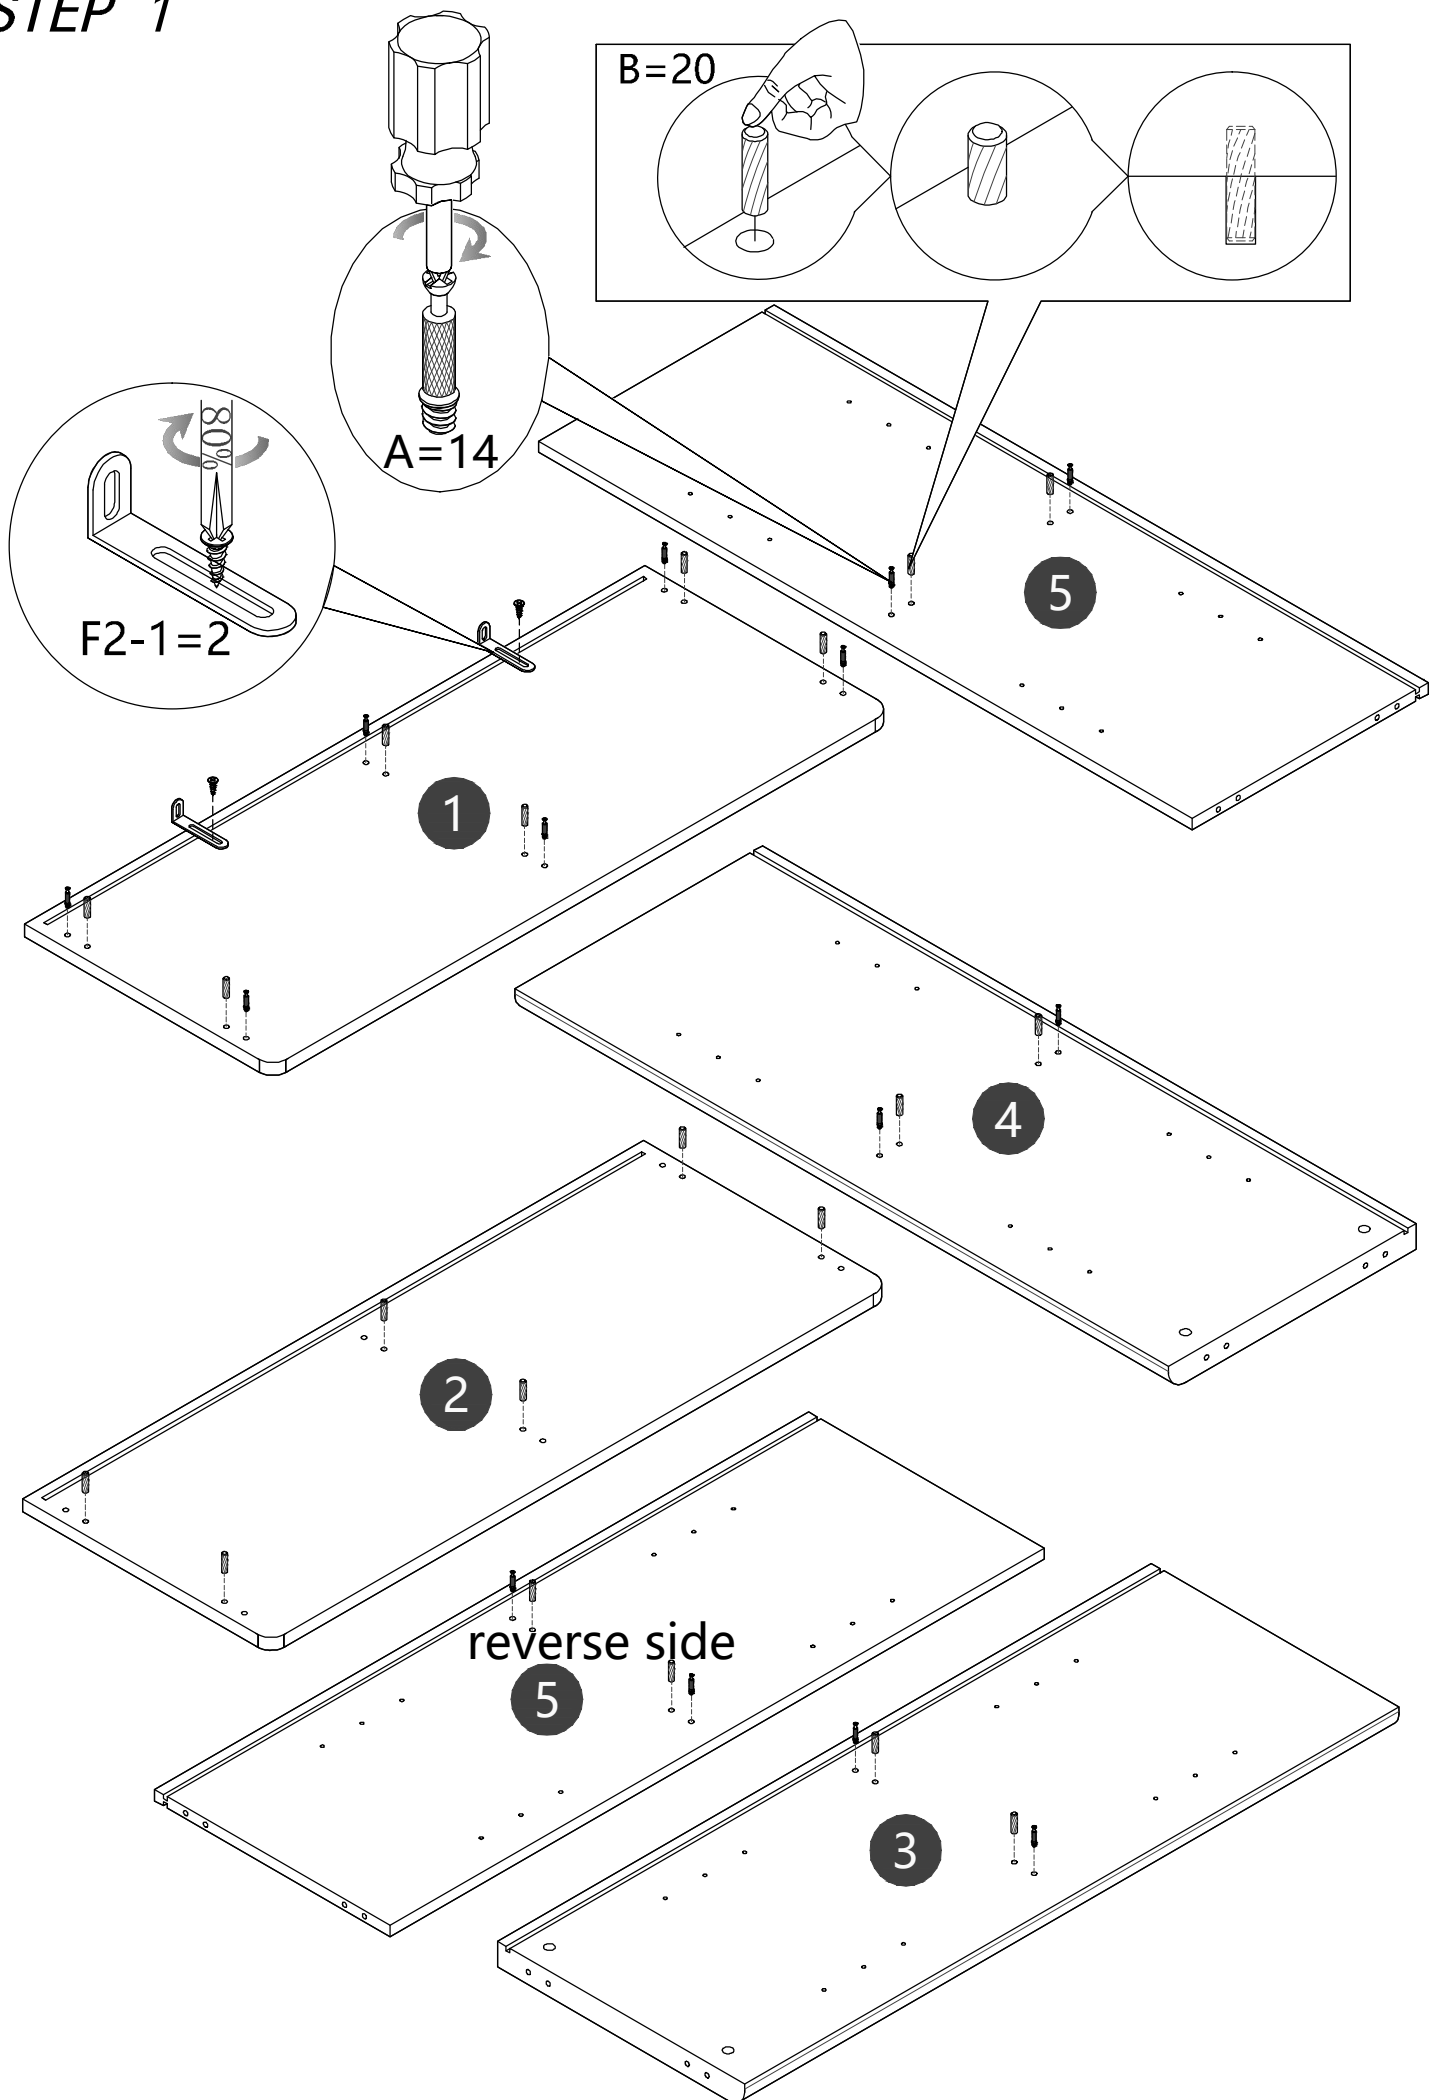


STEP 2

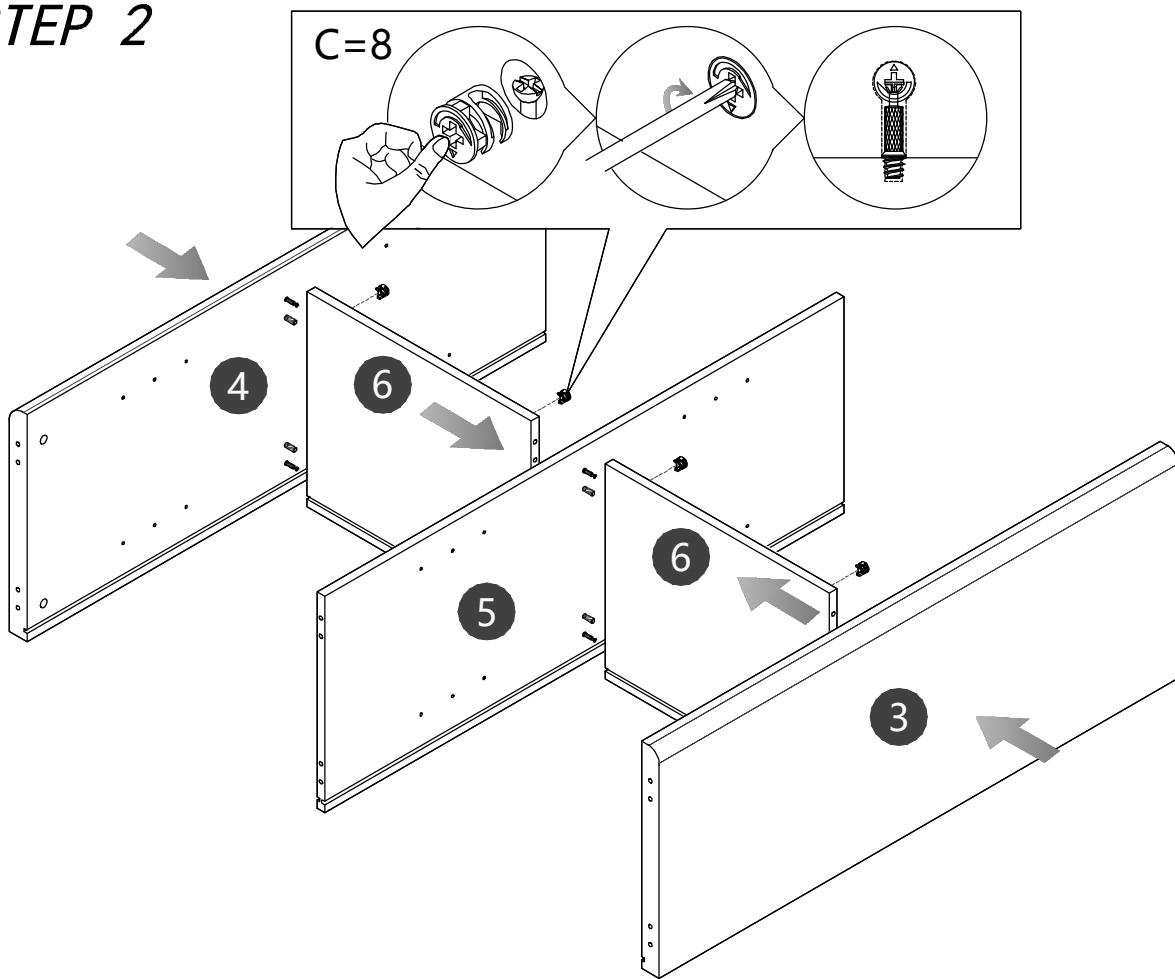


STEP 3

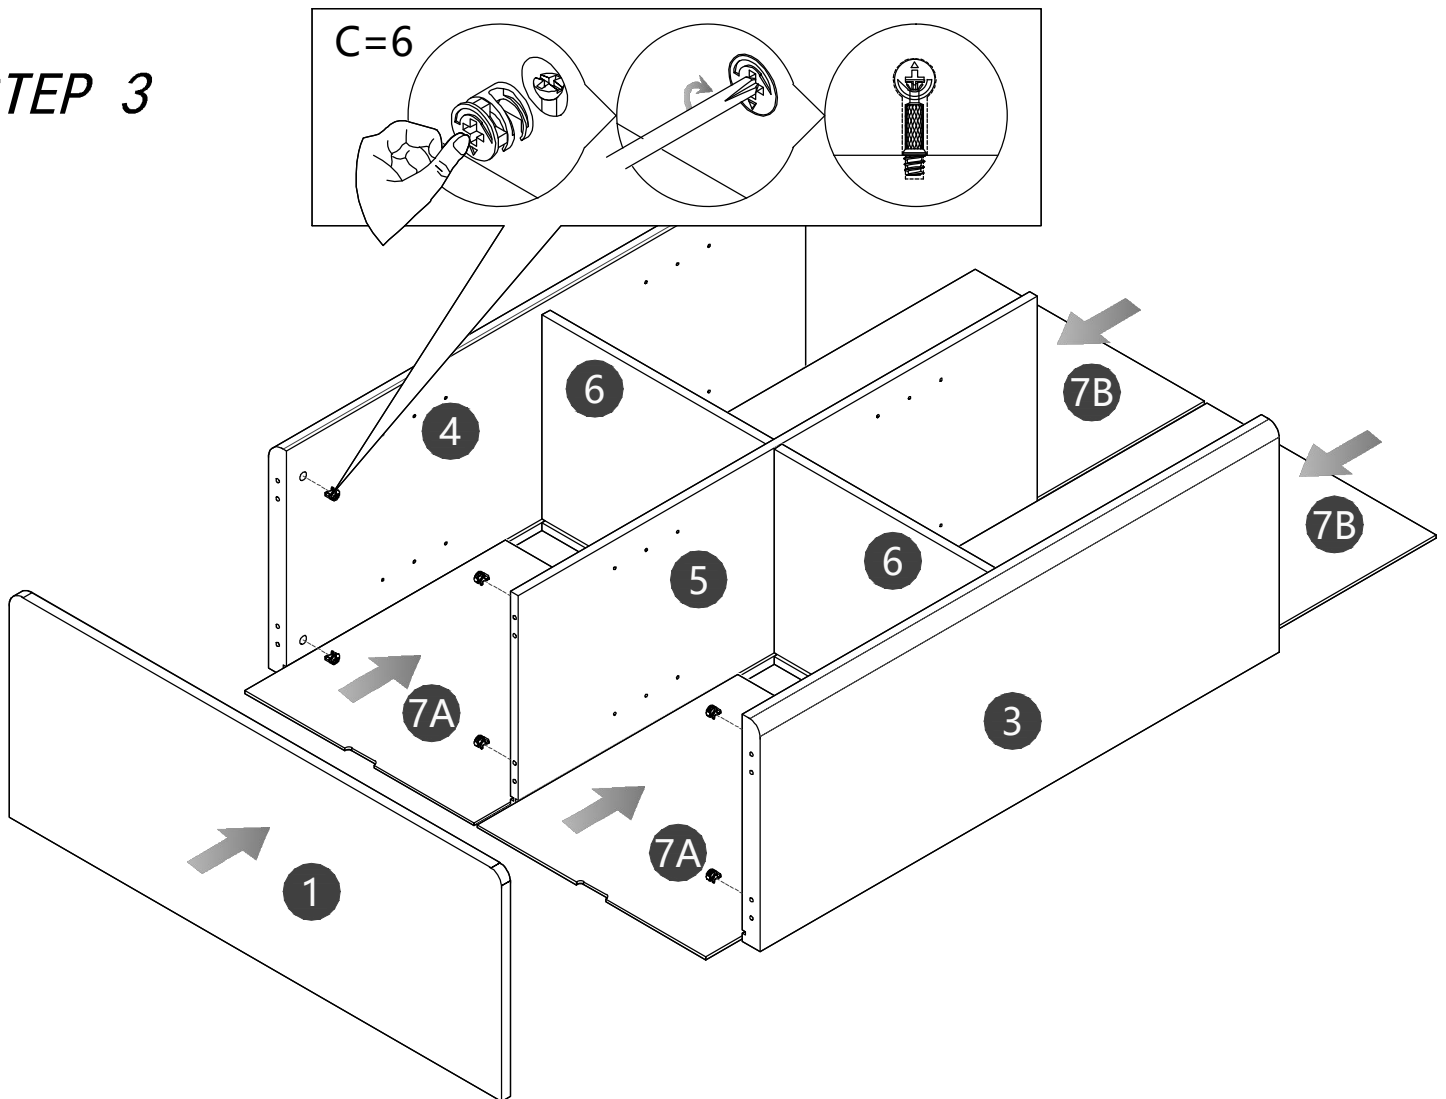


STEP 4

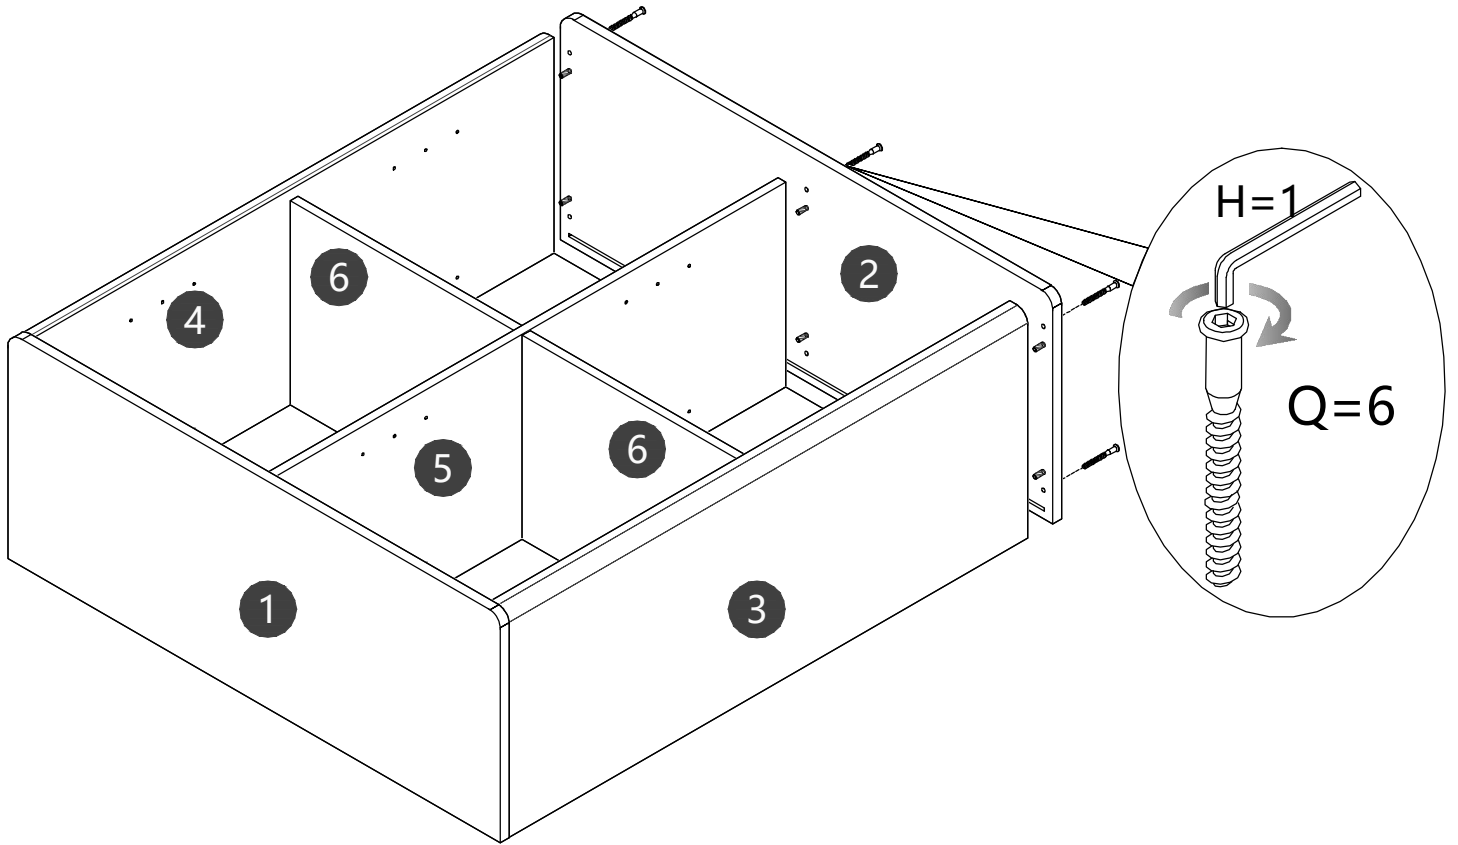


STEP 5

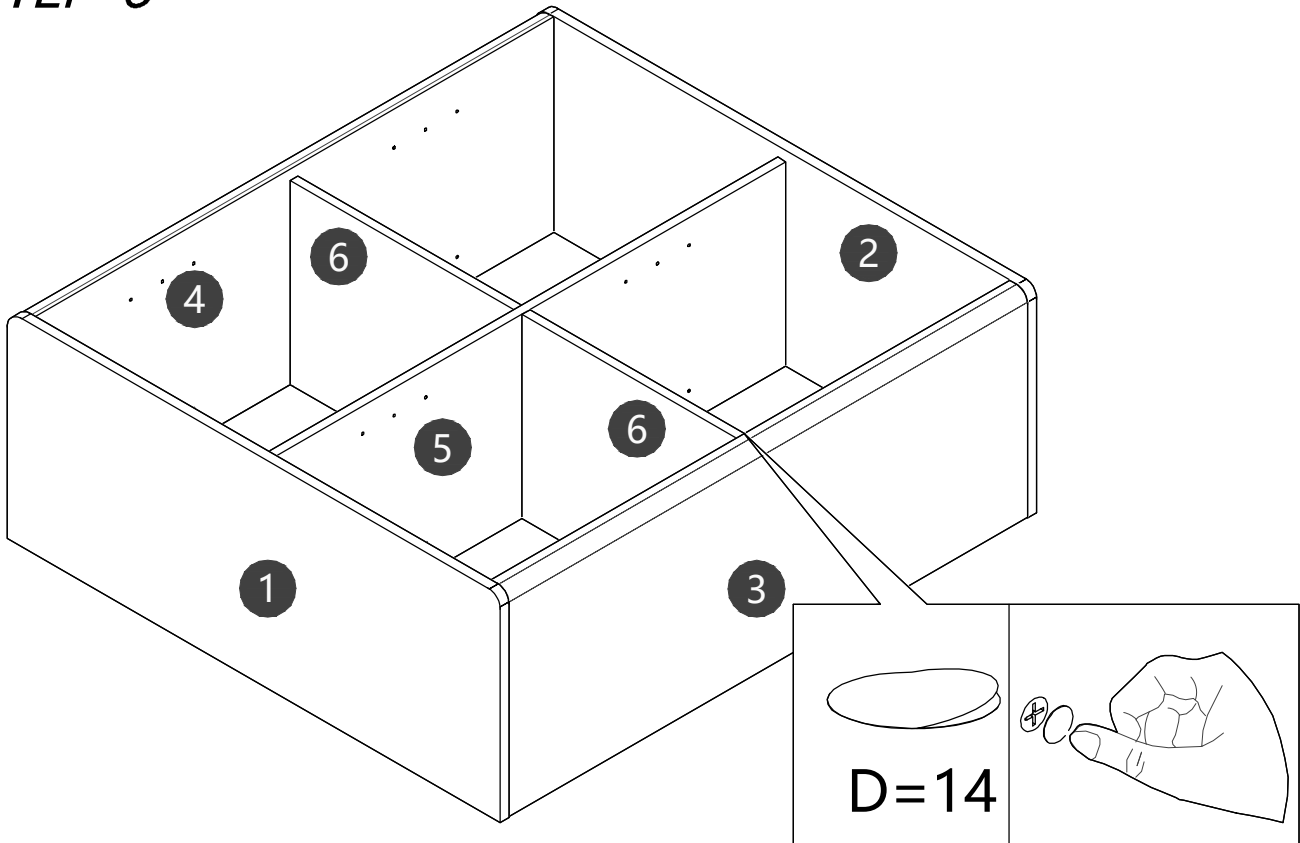


STEP 6

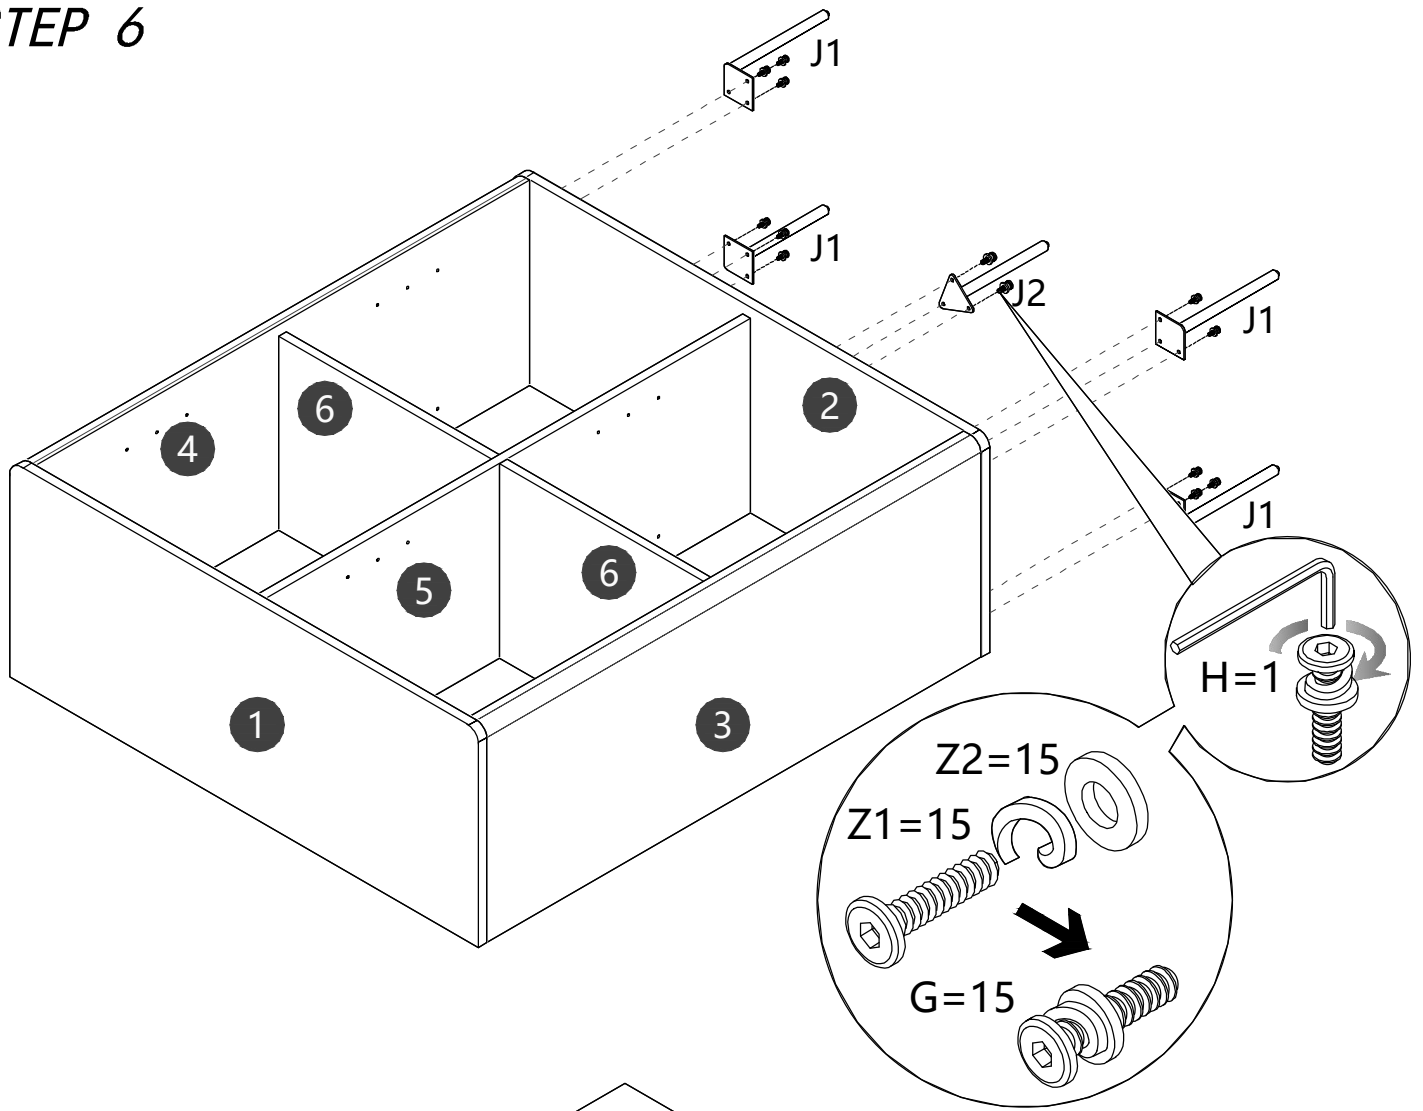


STEP 7

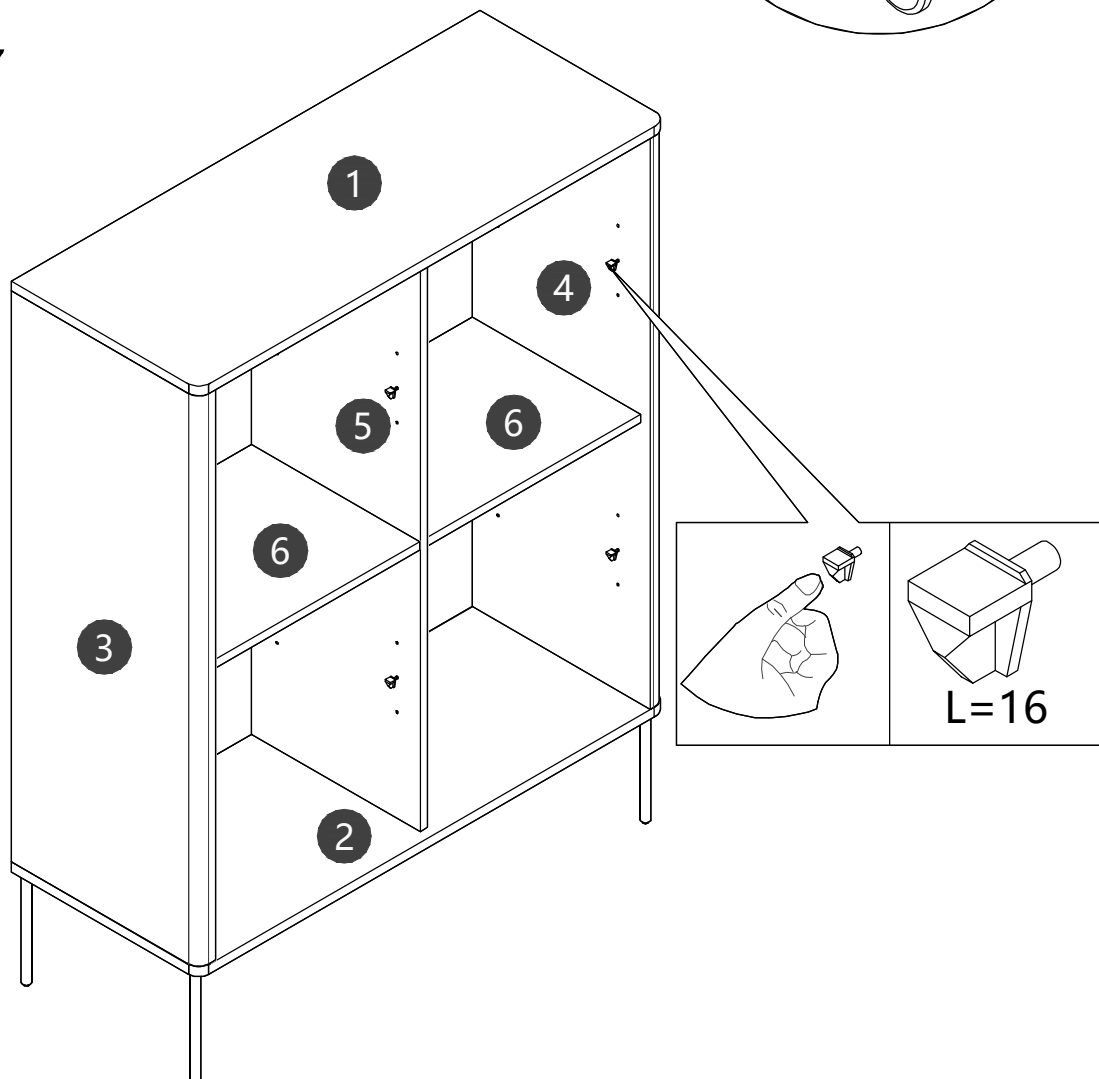


STEP 8

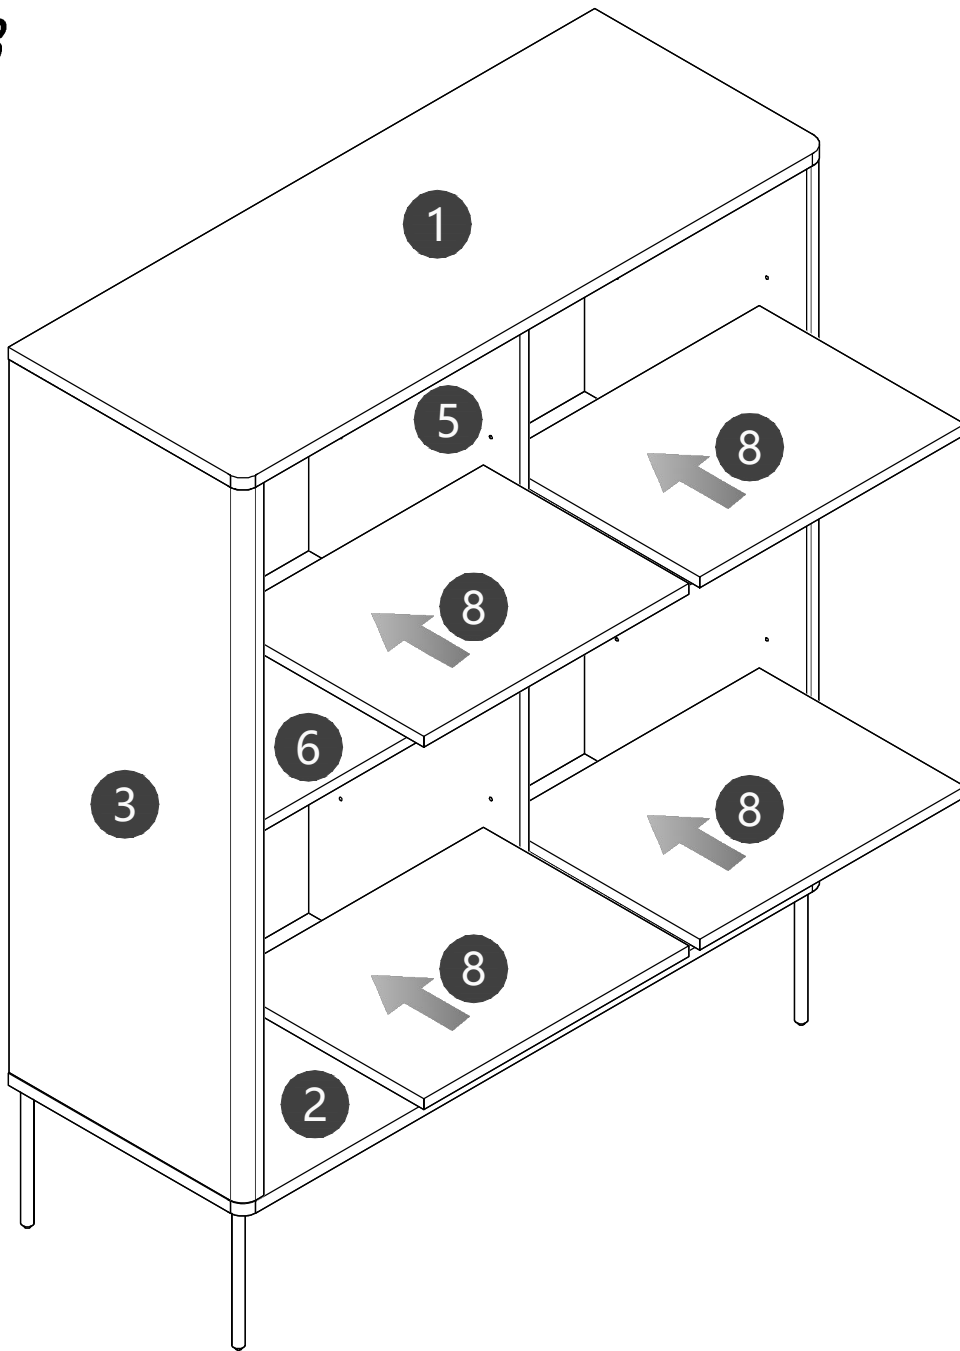





STEP 9

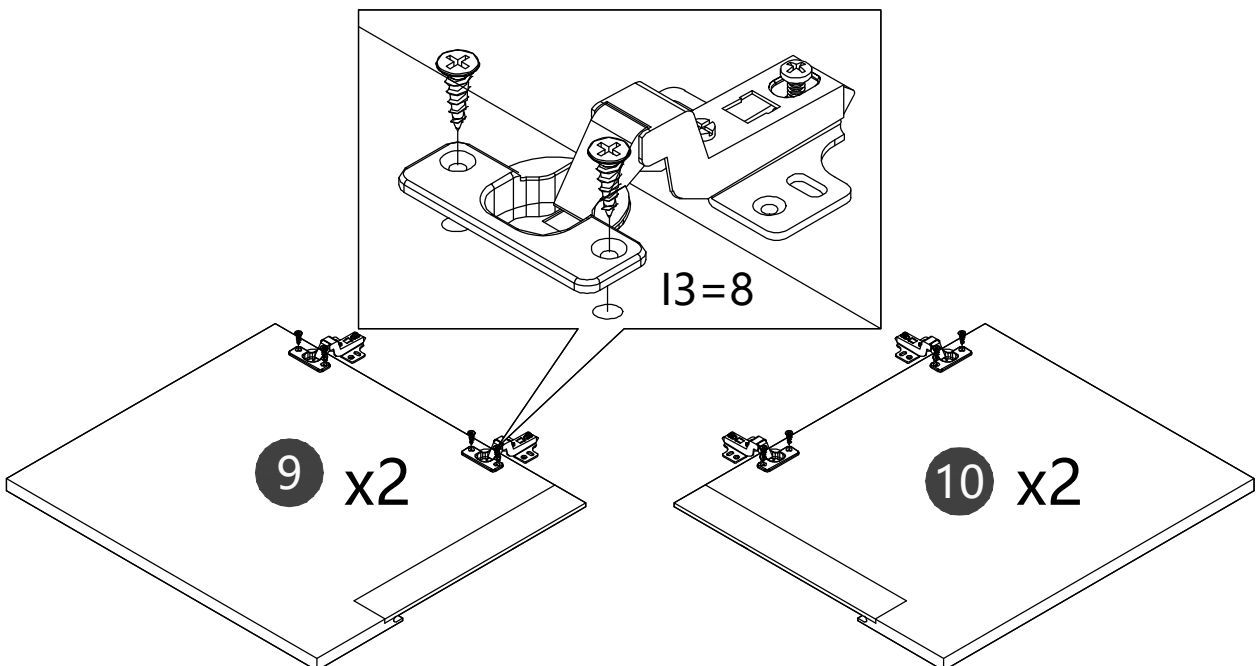


STEP 10

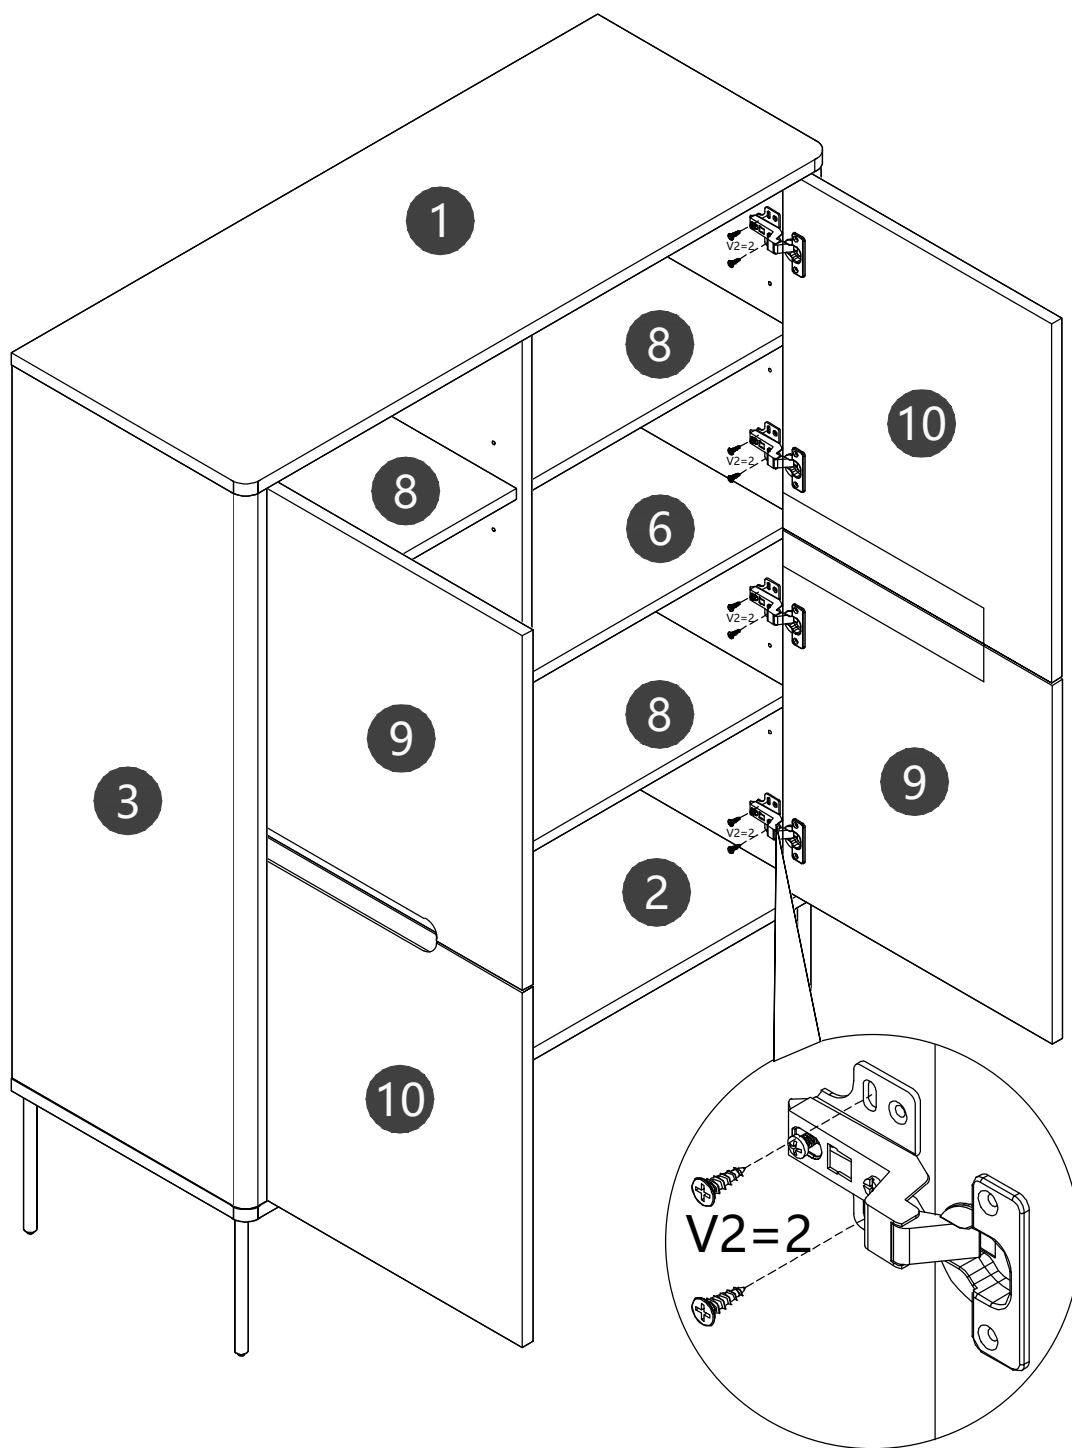


STEP 11

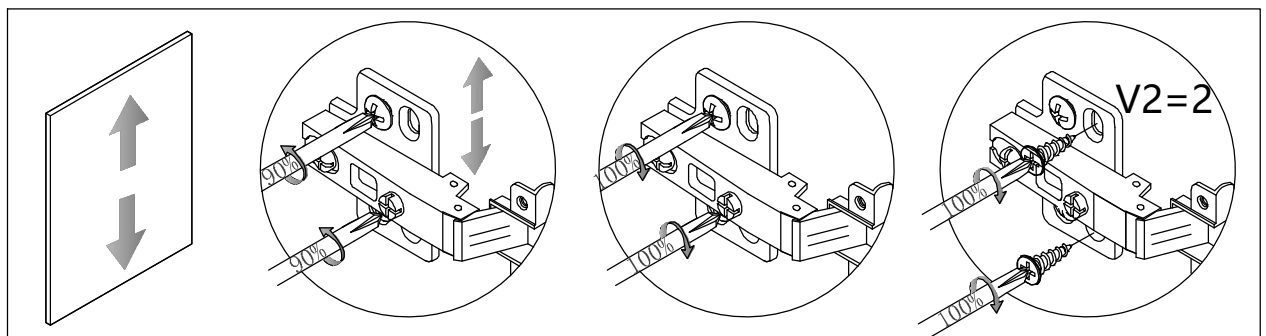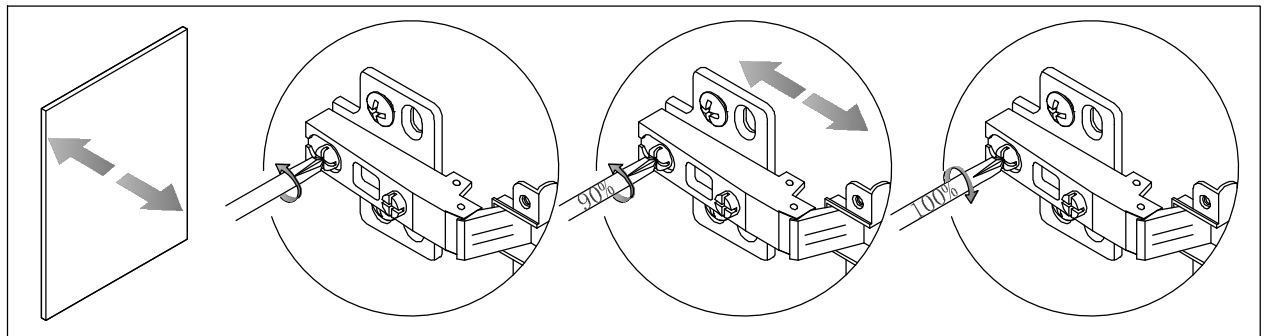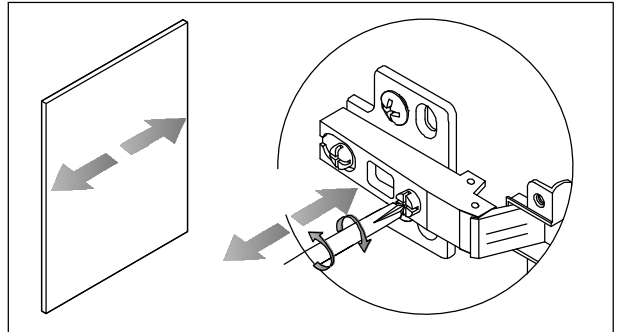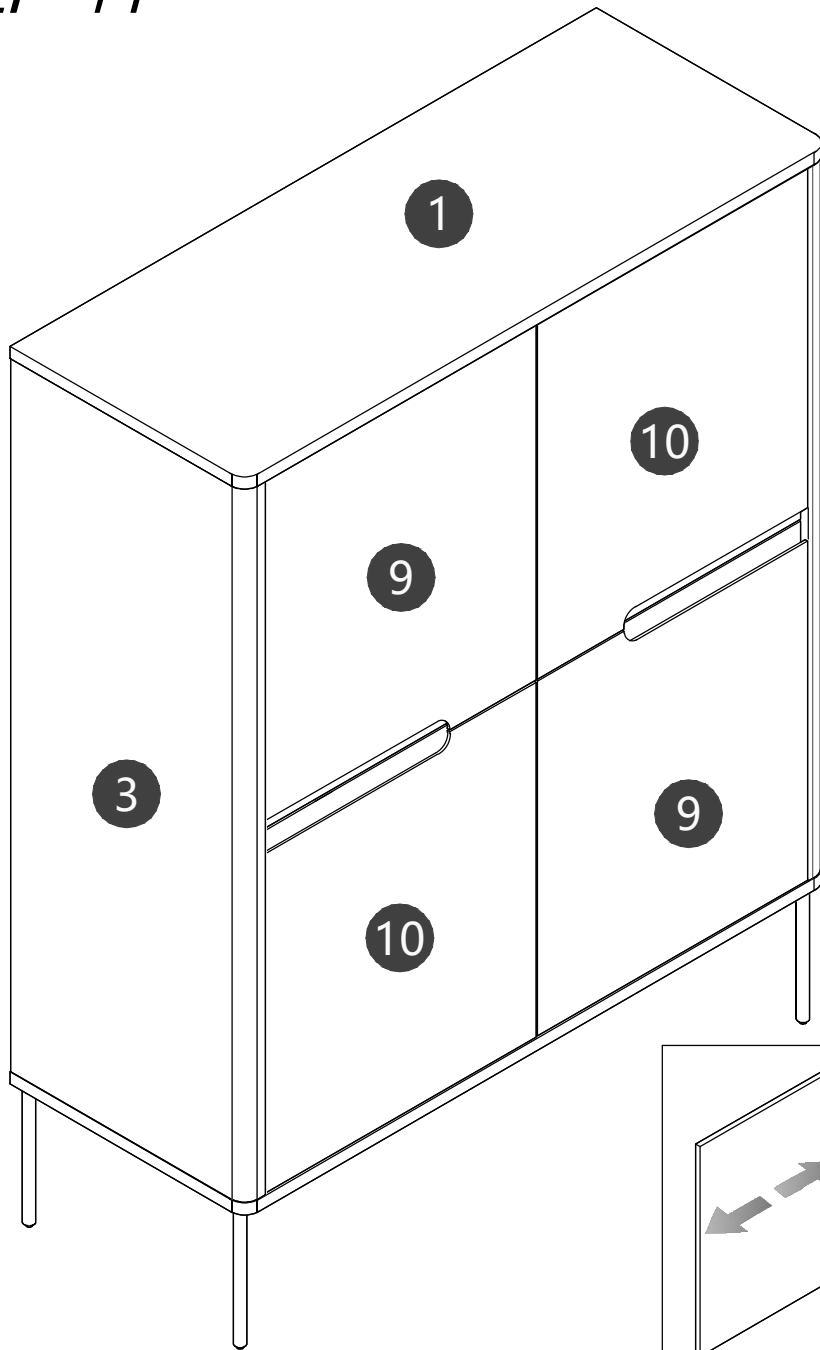


STEP 12

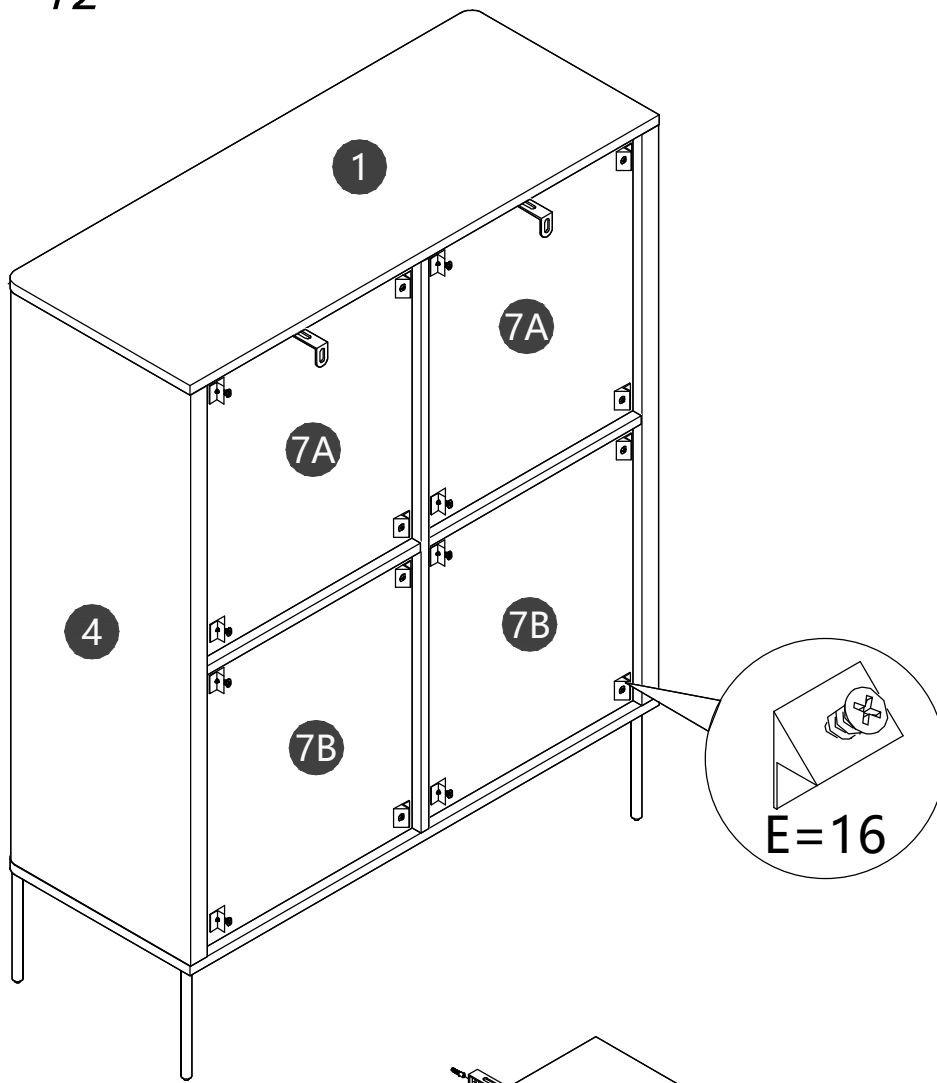

STEP 13

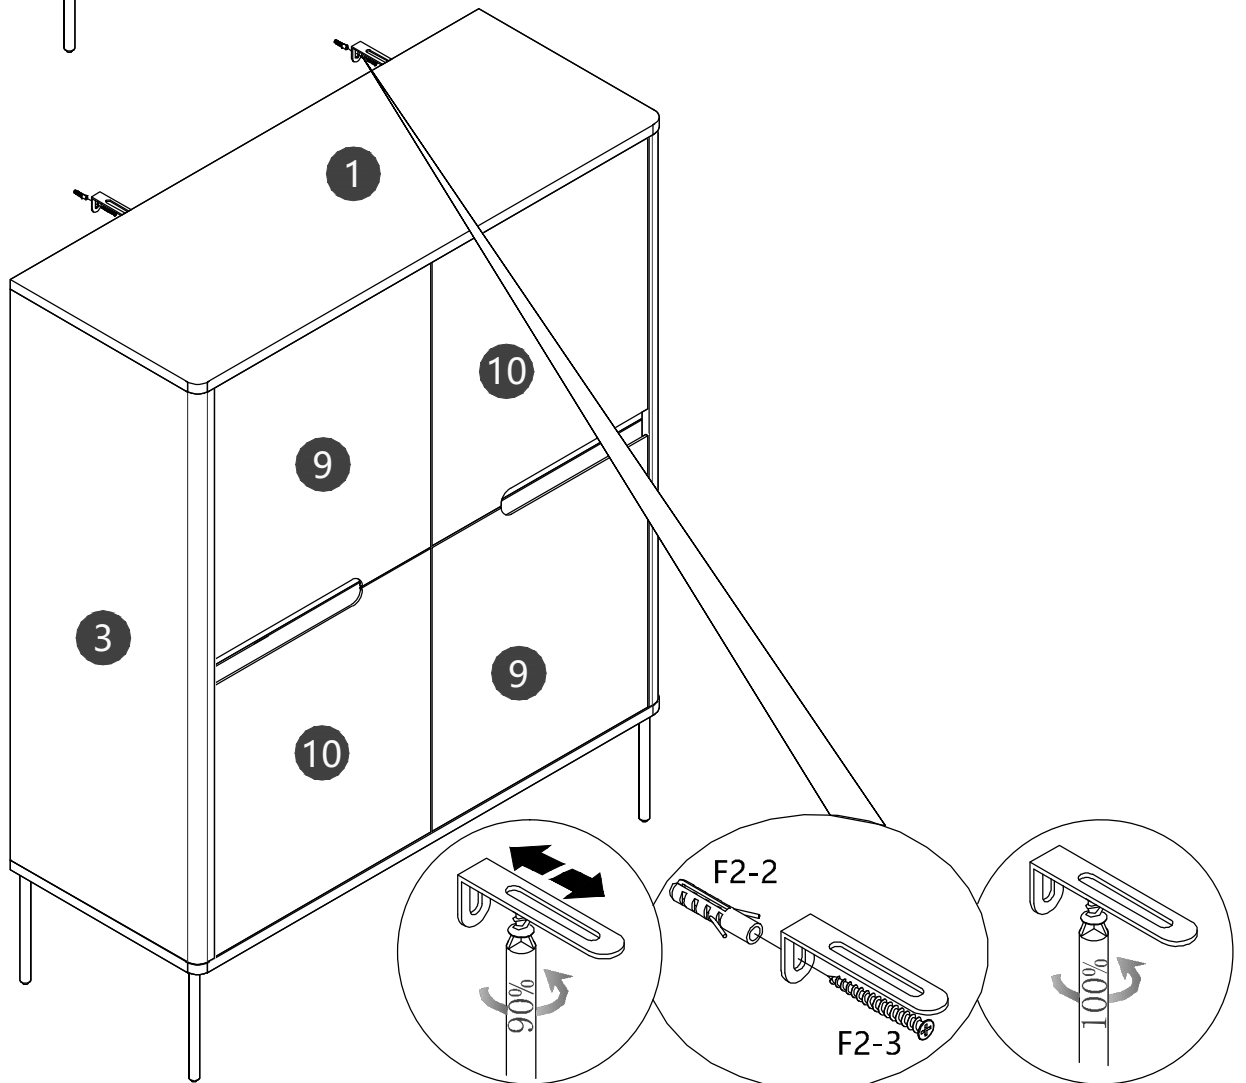

STEP 14

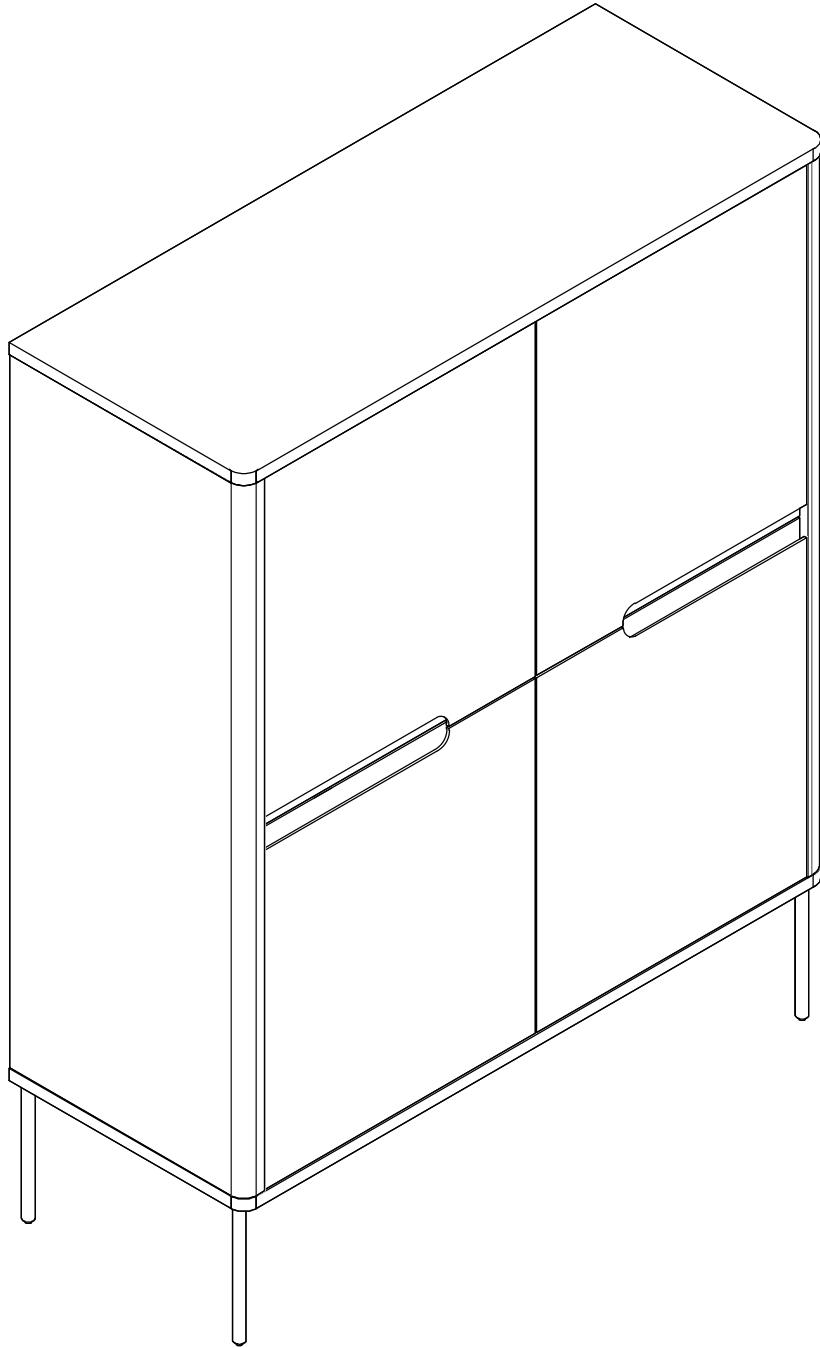

Finish