

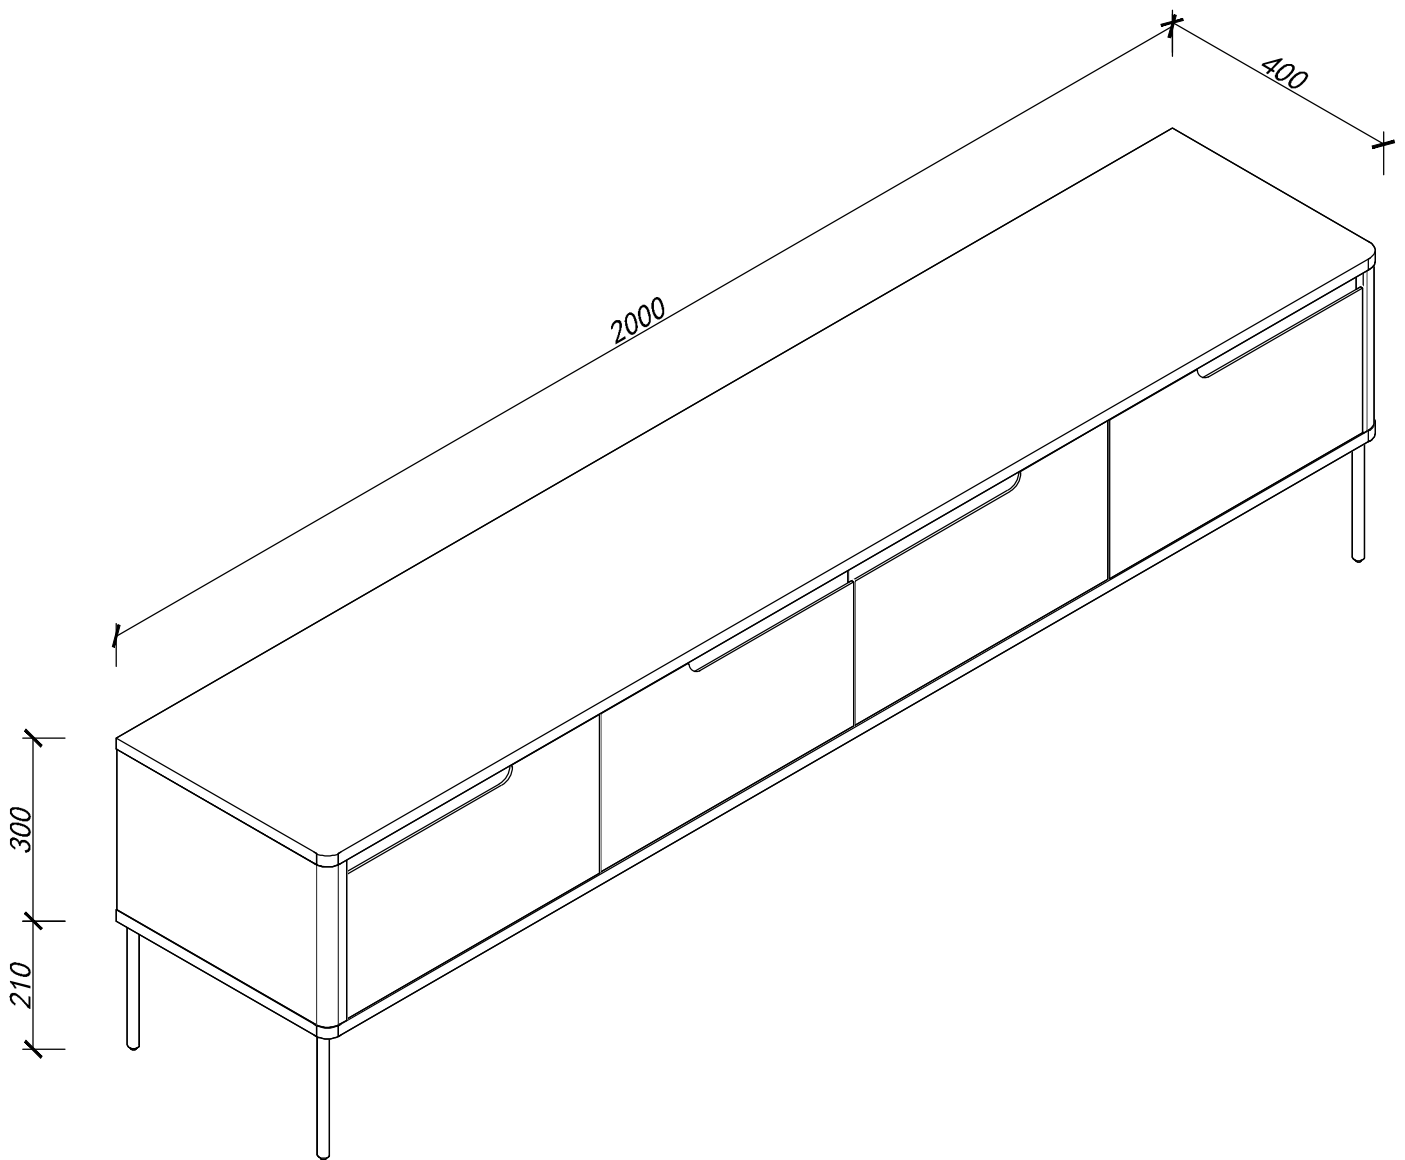
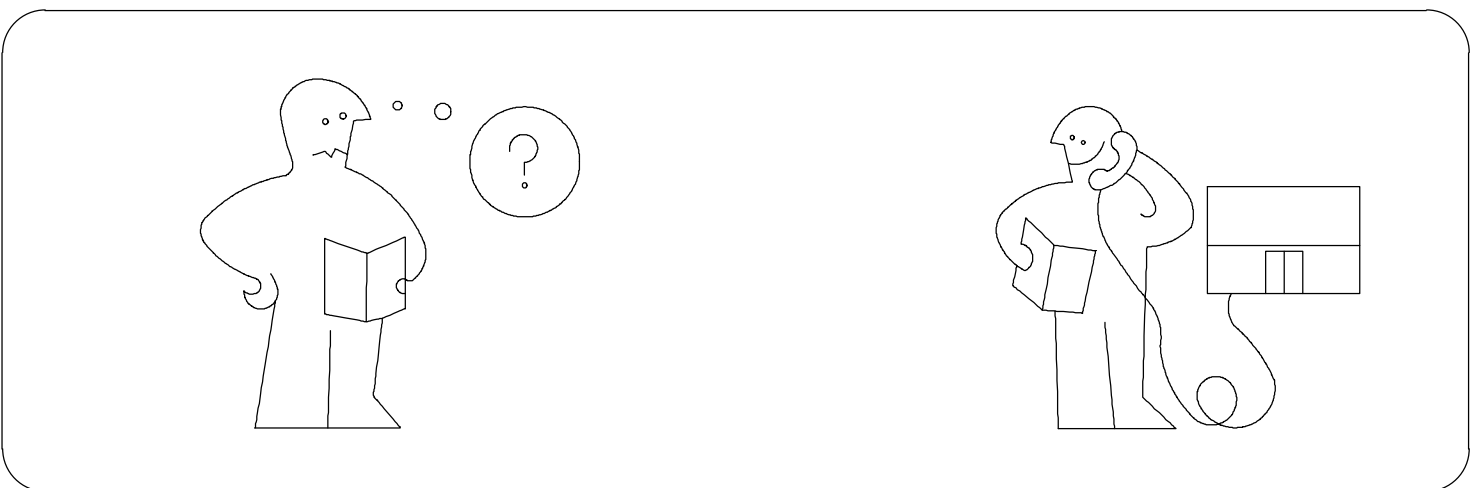
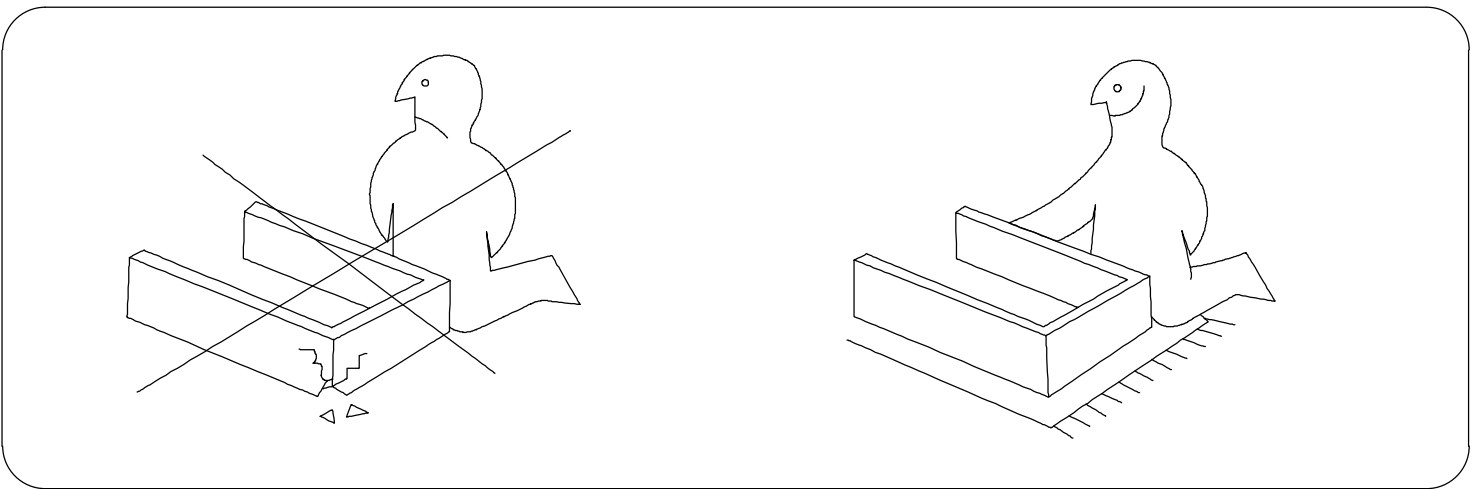


sømcasa


Assembly Instruction

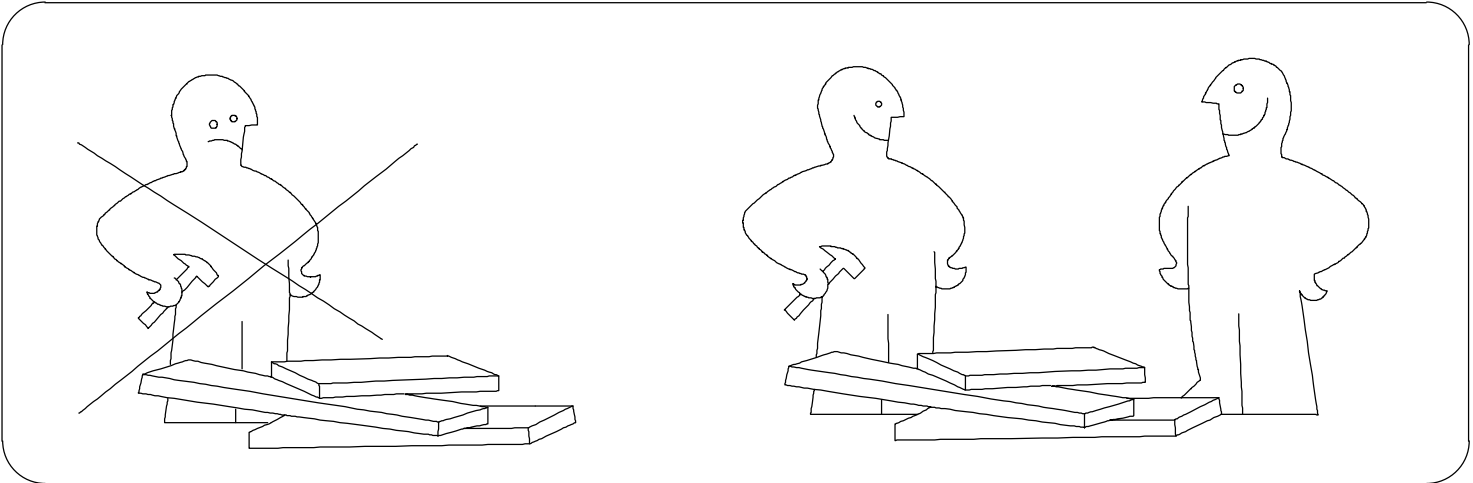

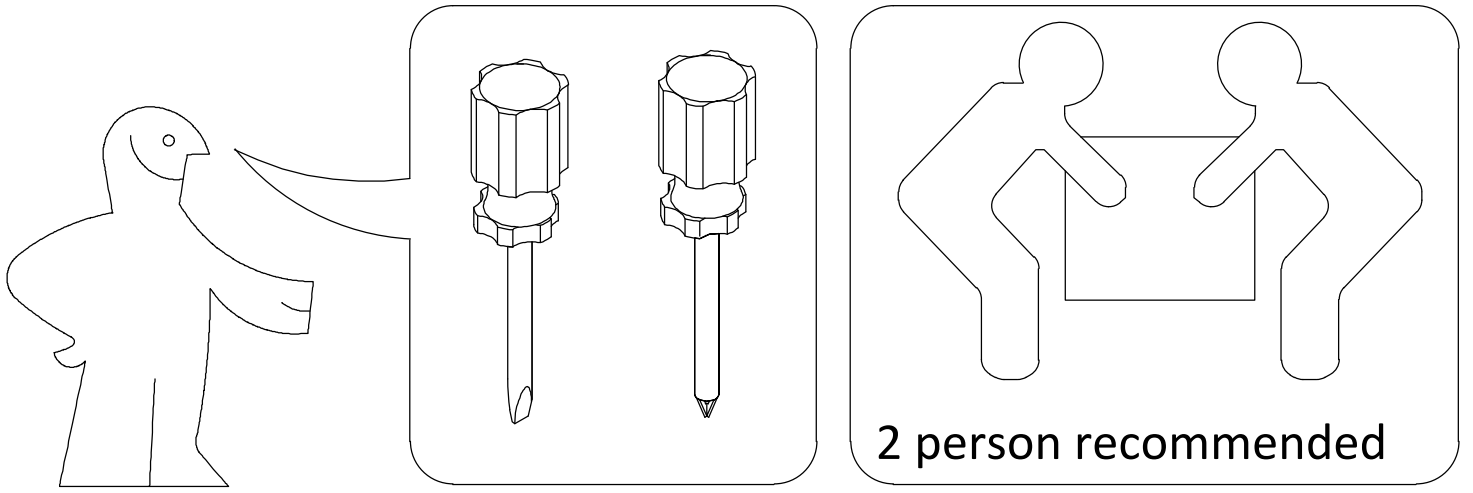

Panel No	Panel Sizes	Quantity
1	2000*400*18	1
2	2000*400*18	1
3	264*399*36	1
4	264*399*36	1
5	264*360*16	1
6	264*360*16	1
7	264*360*16	1

Panel No	Panel Sizes	Quantity
8	1936*274*5	1
9	471*350*16	2
10	462*350*16	2
11	479*260*18	1
12	479*260*18	1
13	479*260*18	1
14	479*260*18	1

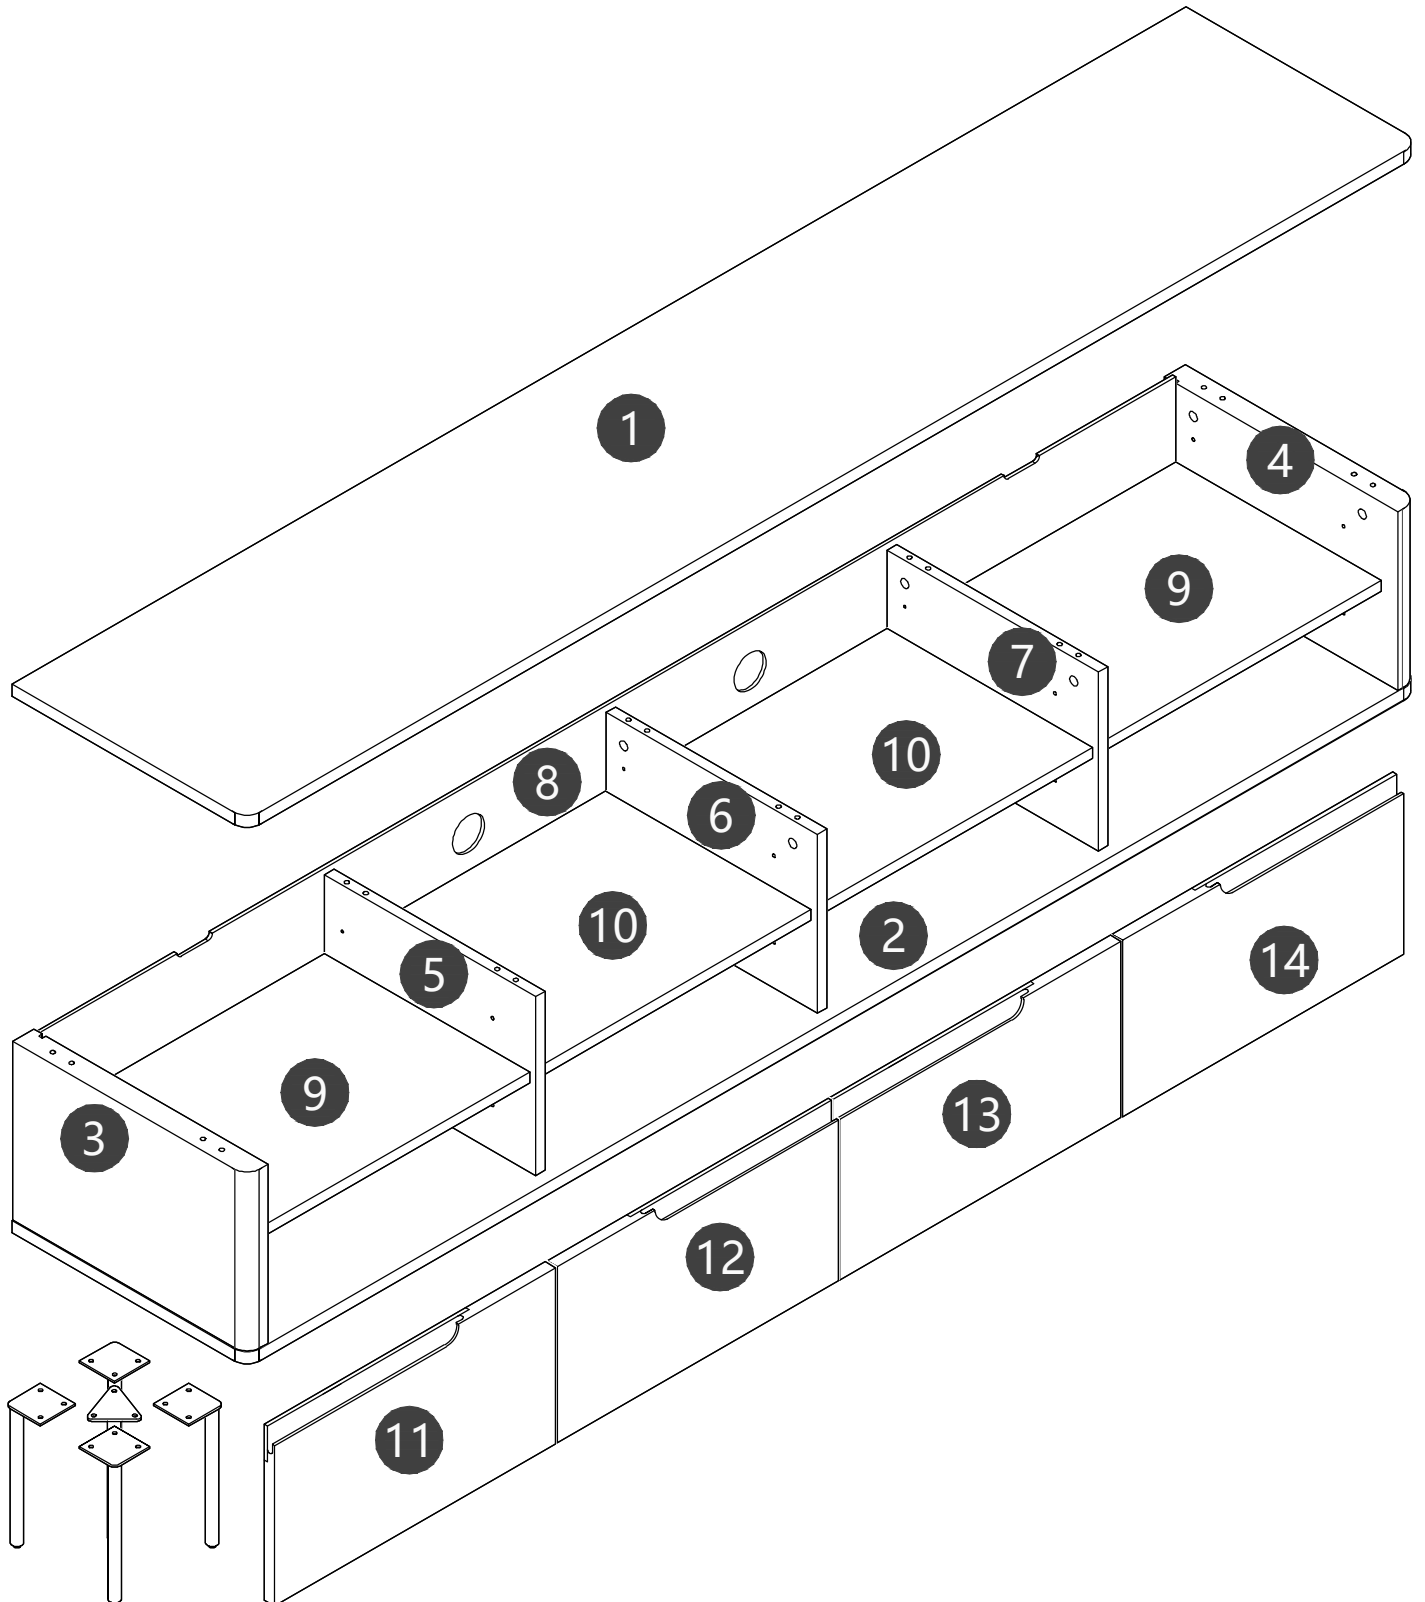


Fittings




M6*40

A=10



Φ8*30

B=20

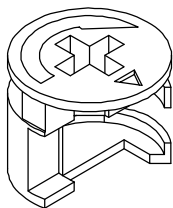


Φ15*12

C=10




Φ21


D=10

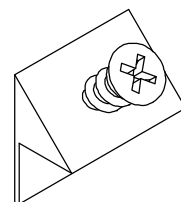

E=12

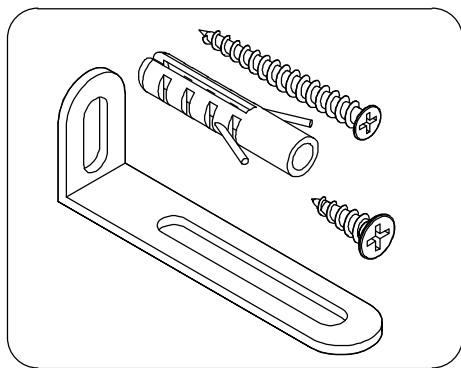


F=2




M6*16

G=15

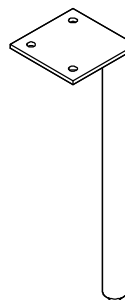

J1=4




J2=1




M4

H=1

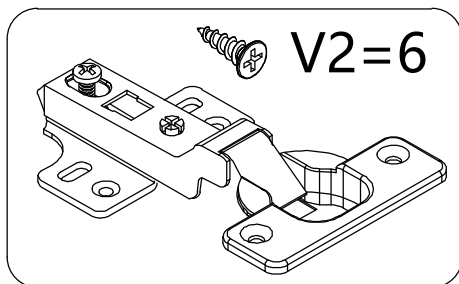


V2=6

I2=4

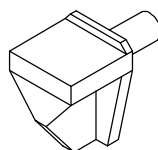


L=16

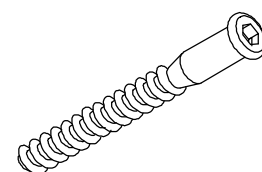

Φ7*50

Q=10

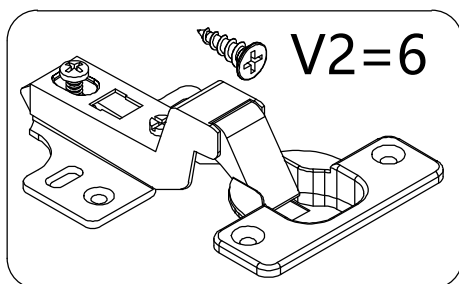

V2=6

I3=4



M4


Z1=15




M4

Z2=15


STEP 1

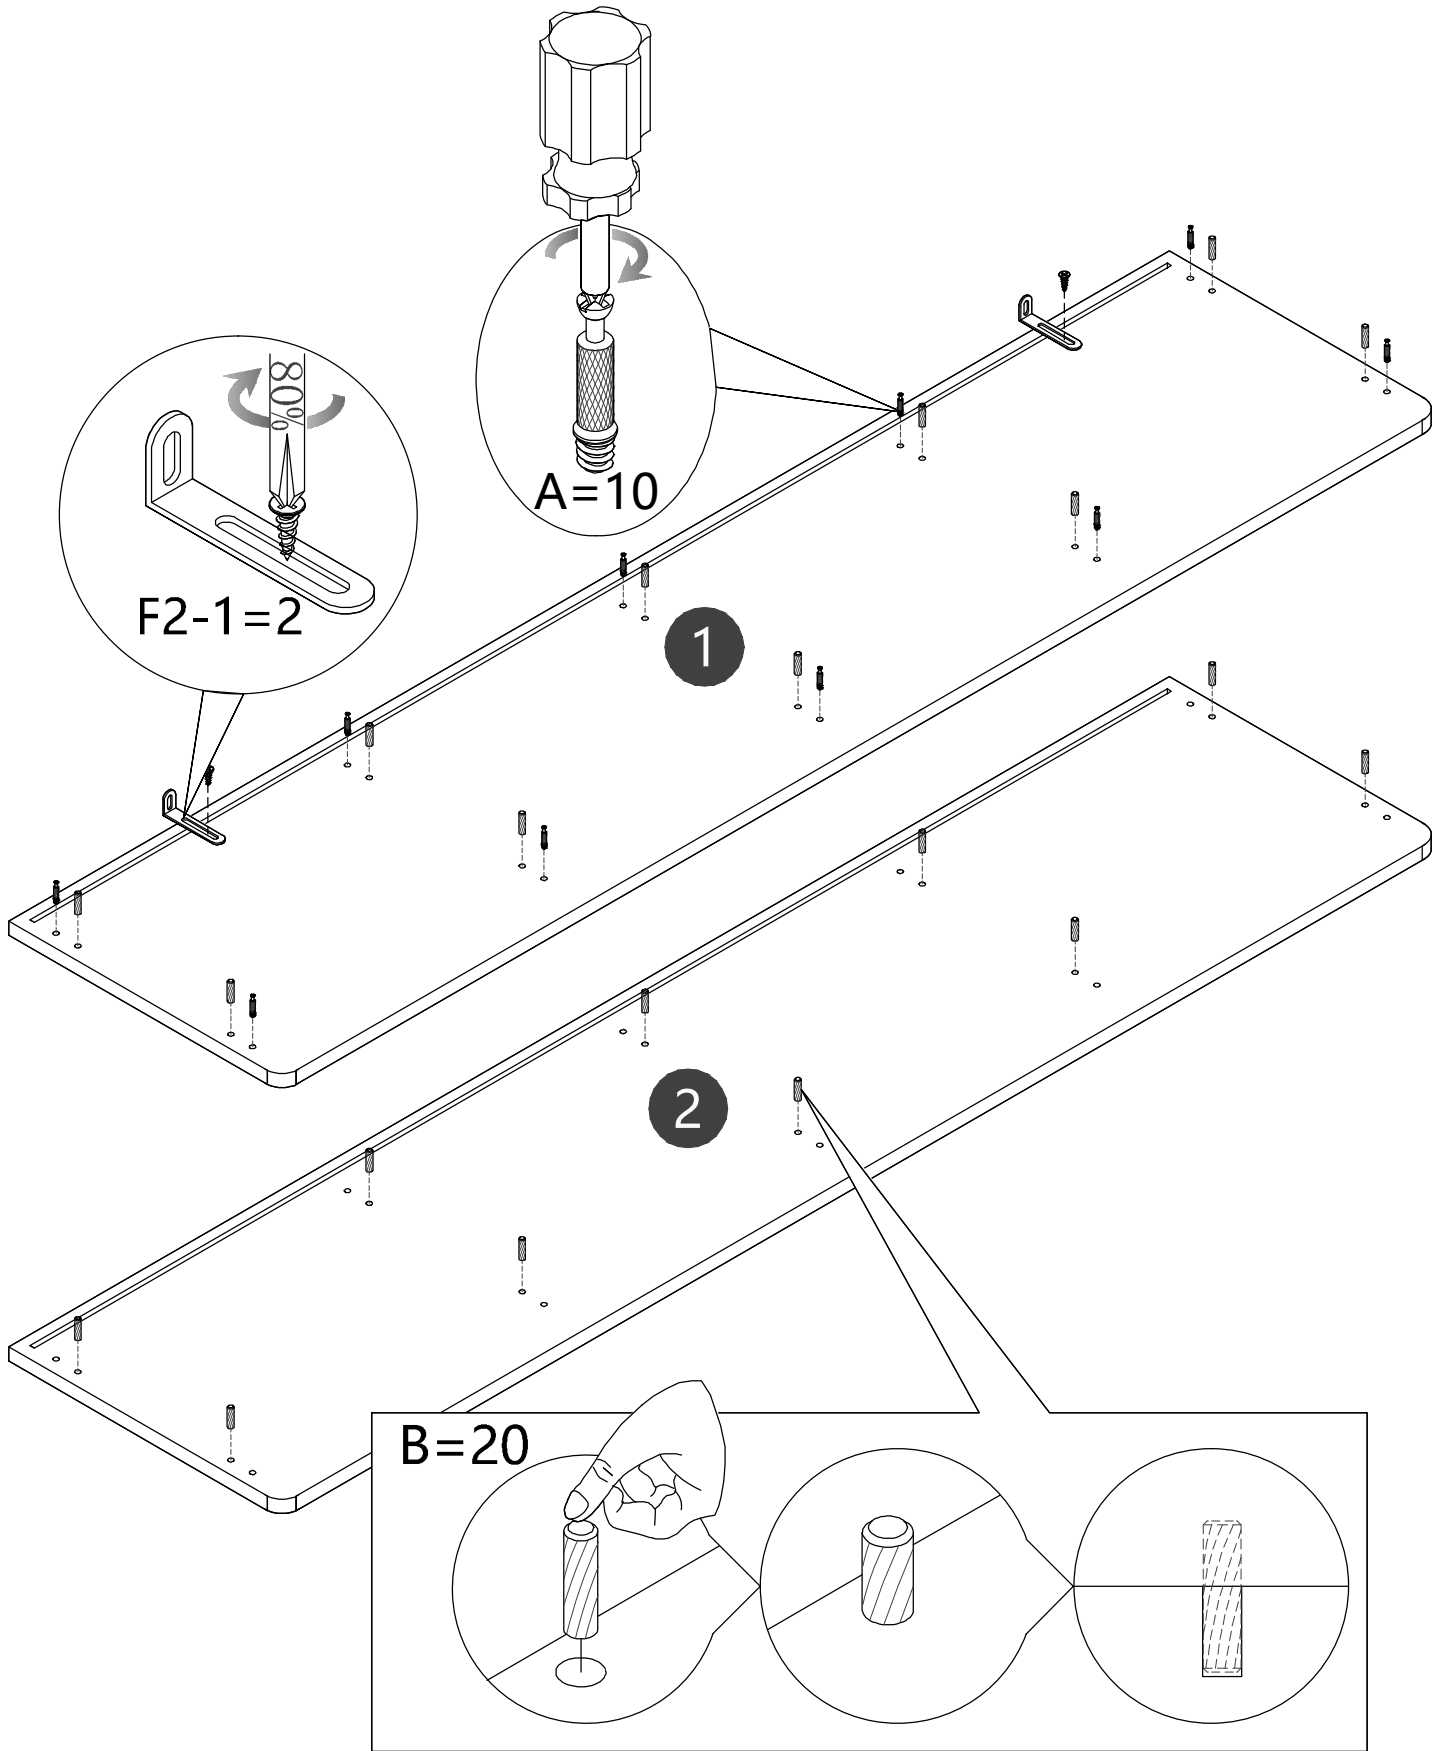


STEP 2

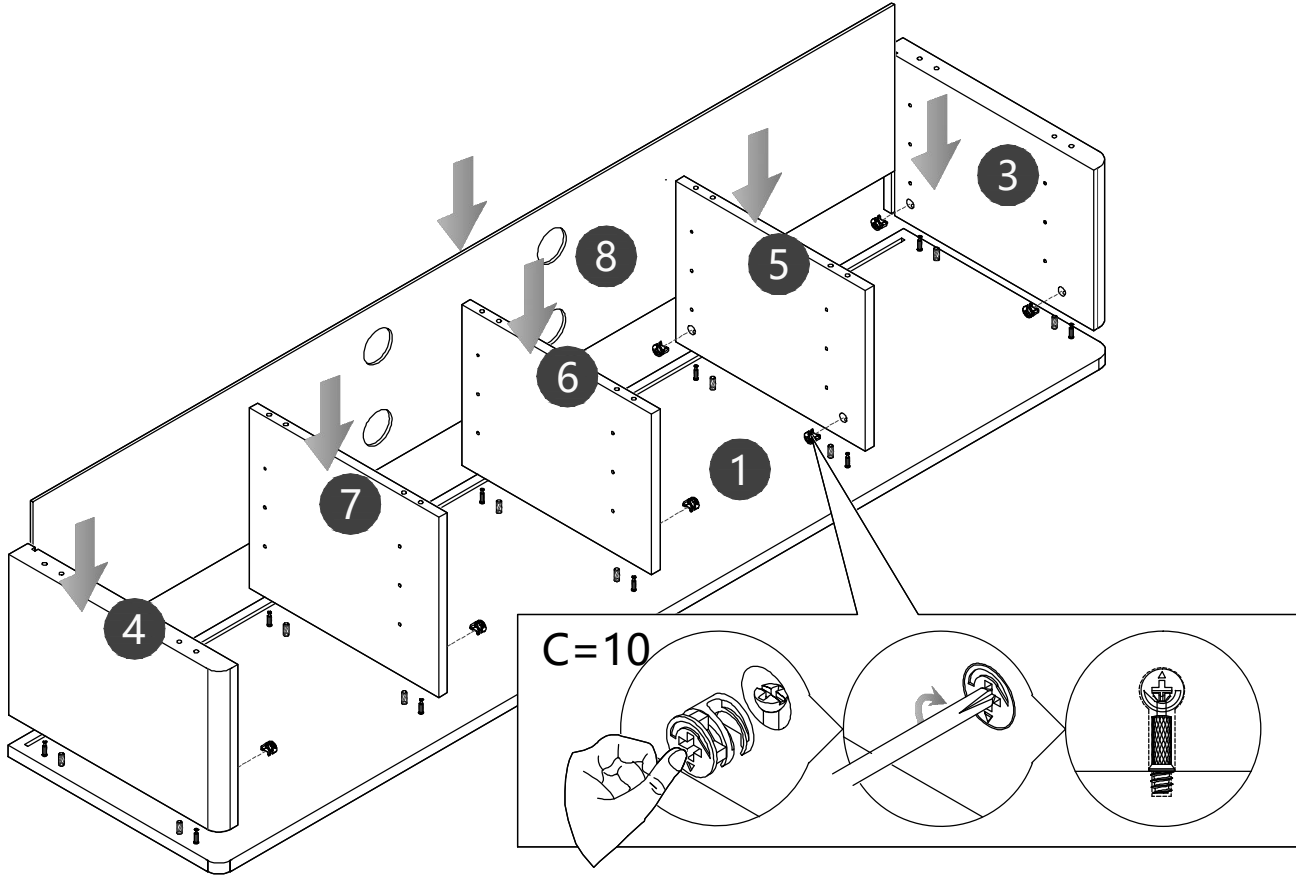


STEP 3

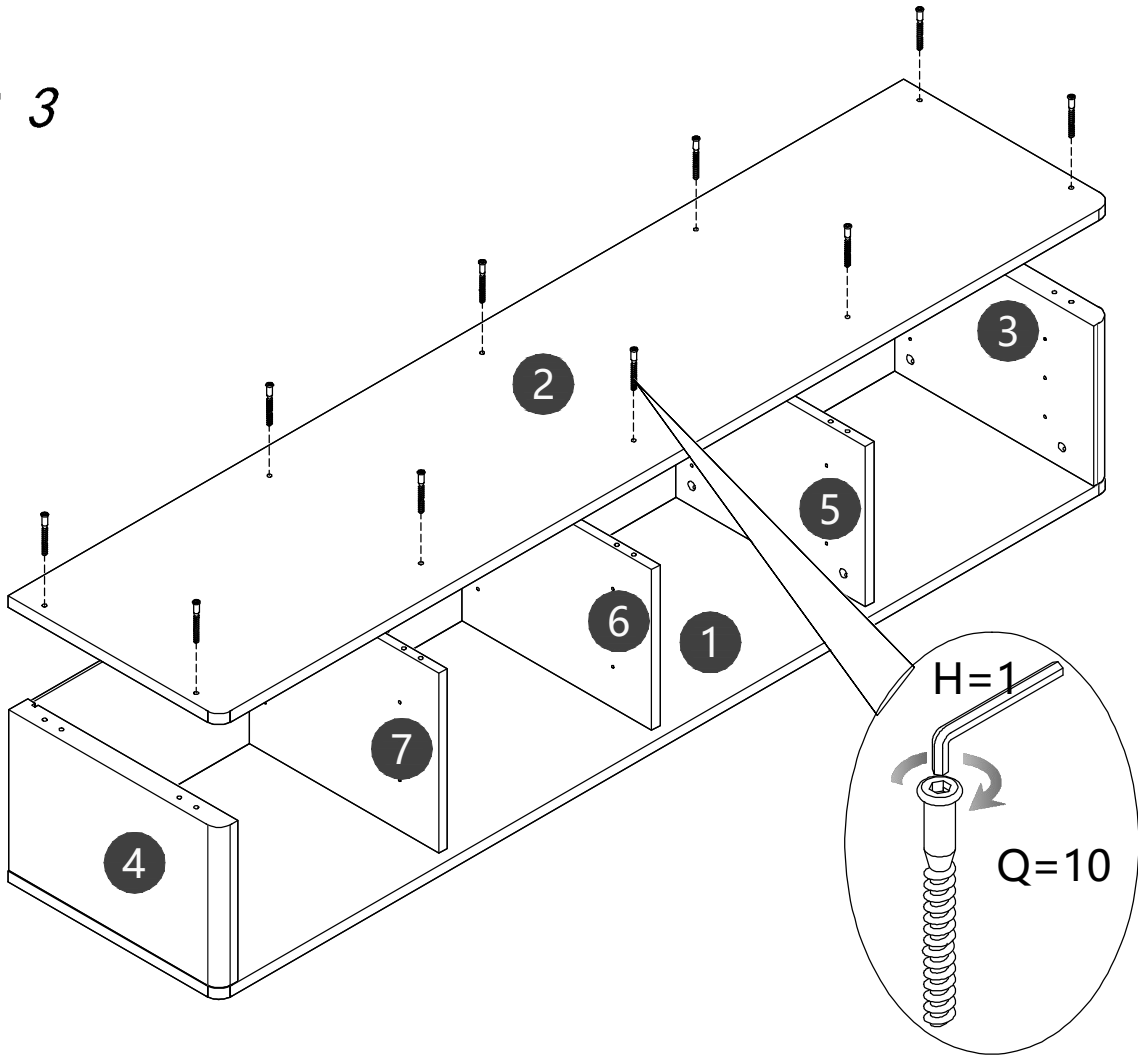


STEP 4

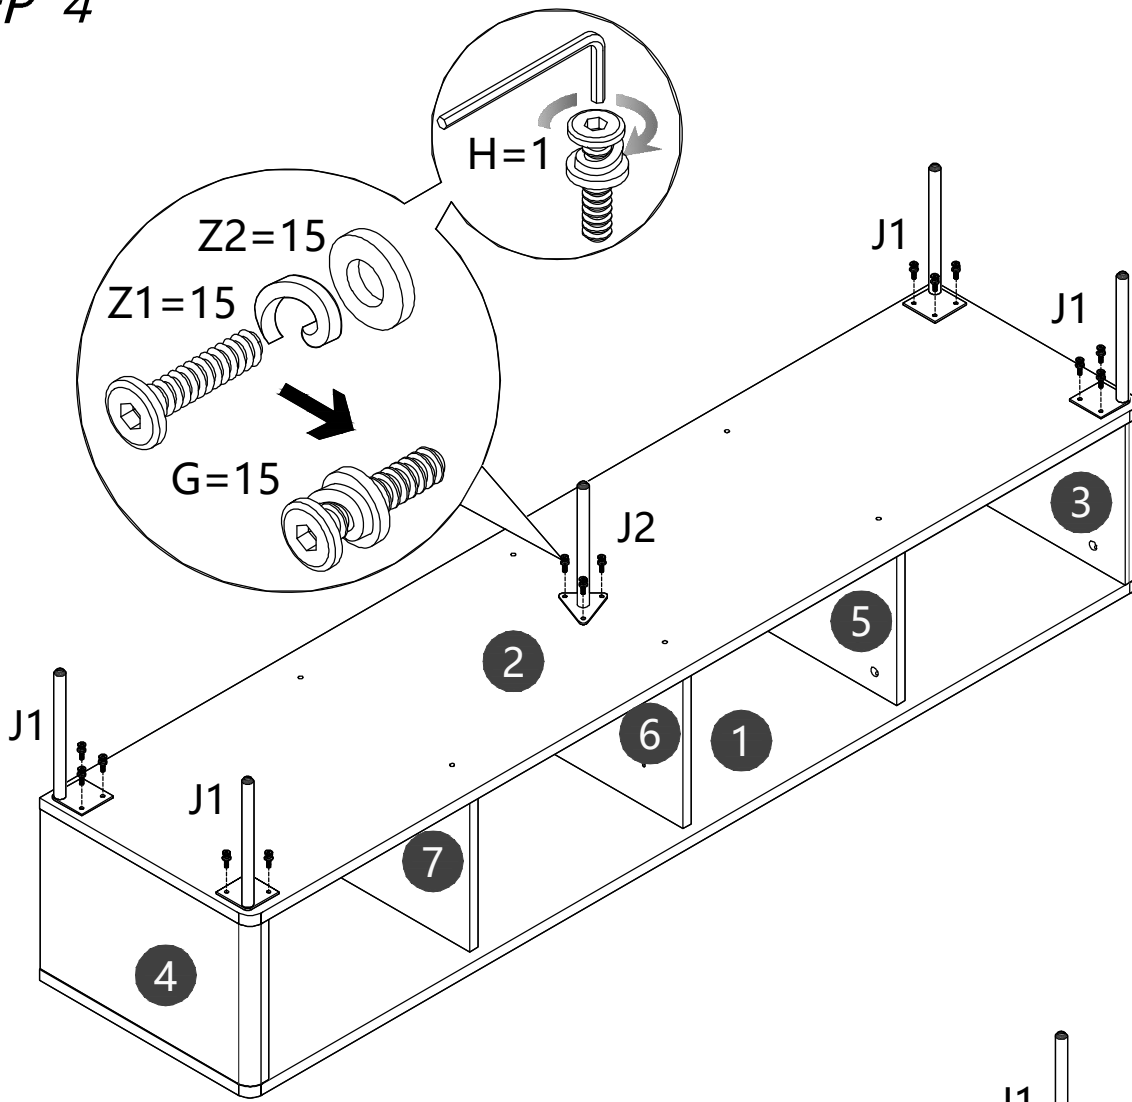


STEP 5

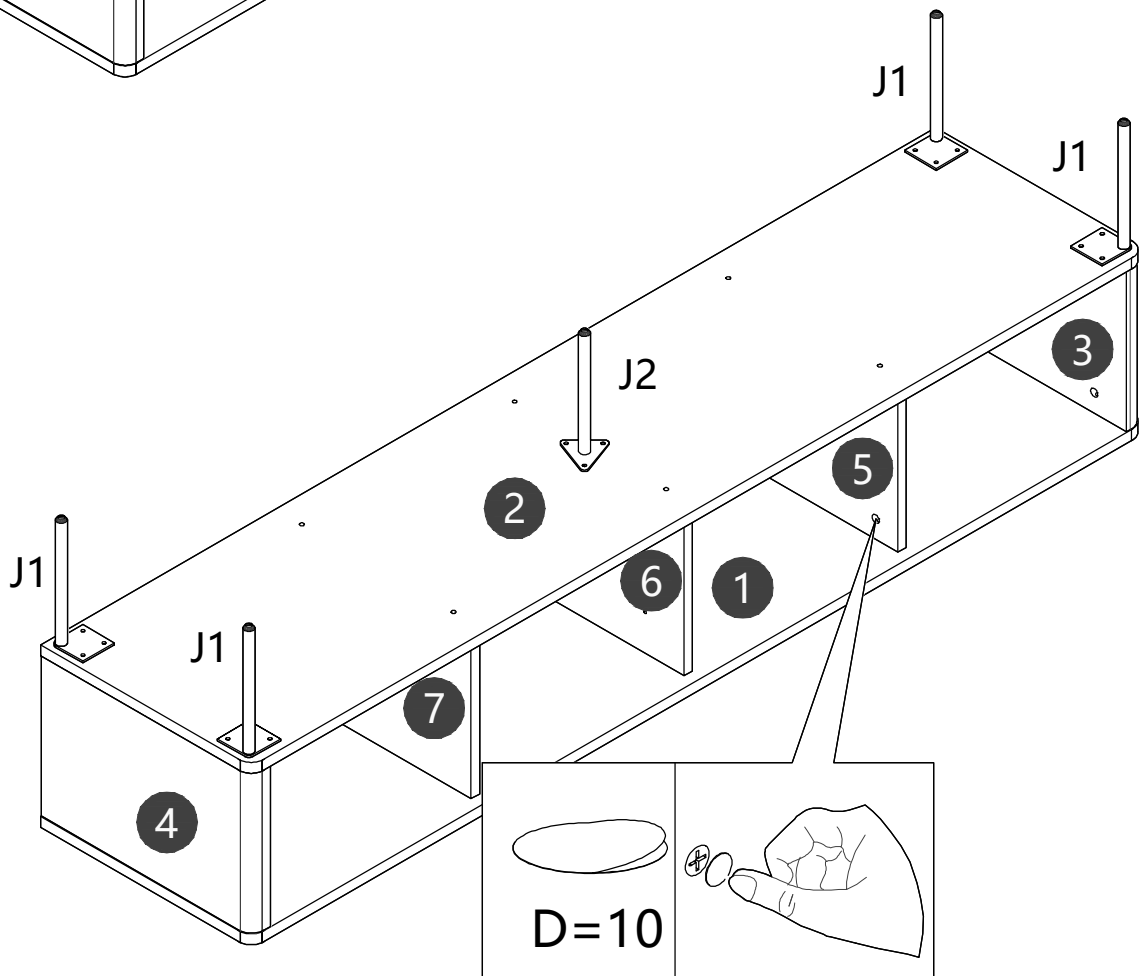


STEP 6

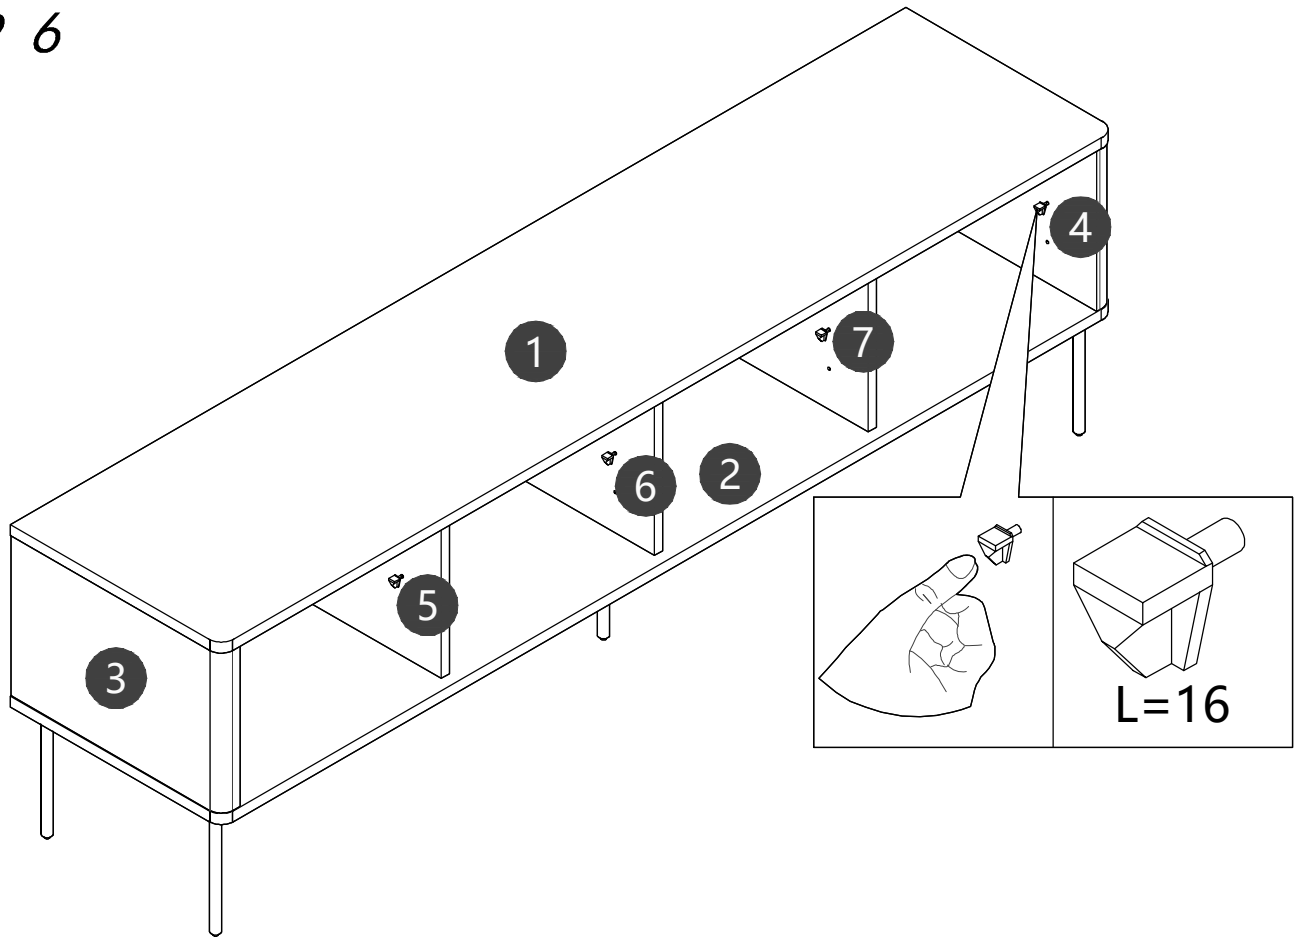


STEP 7

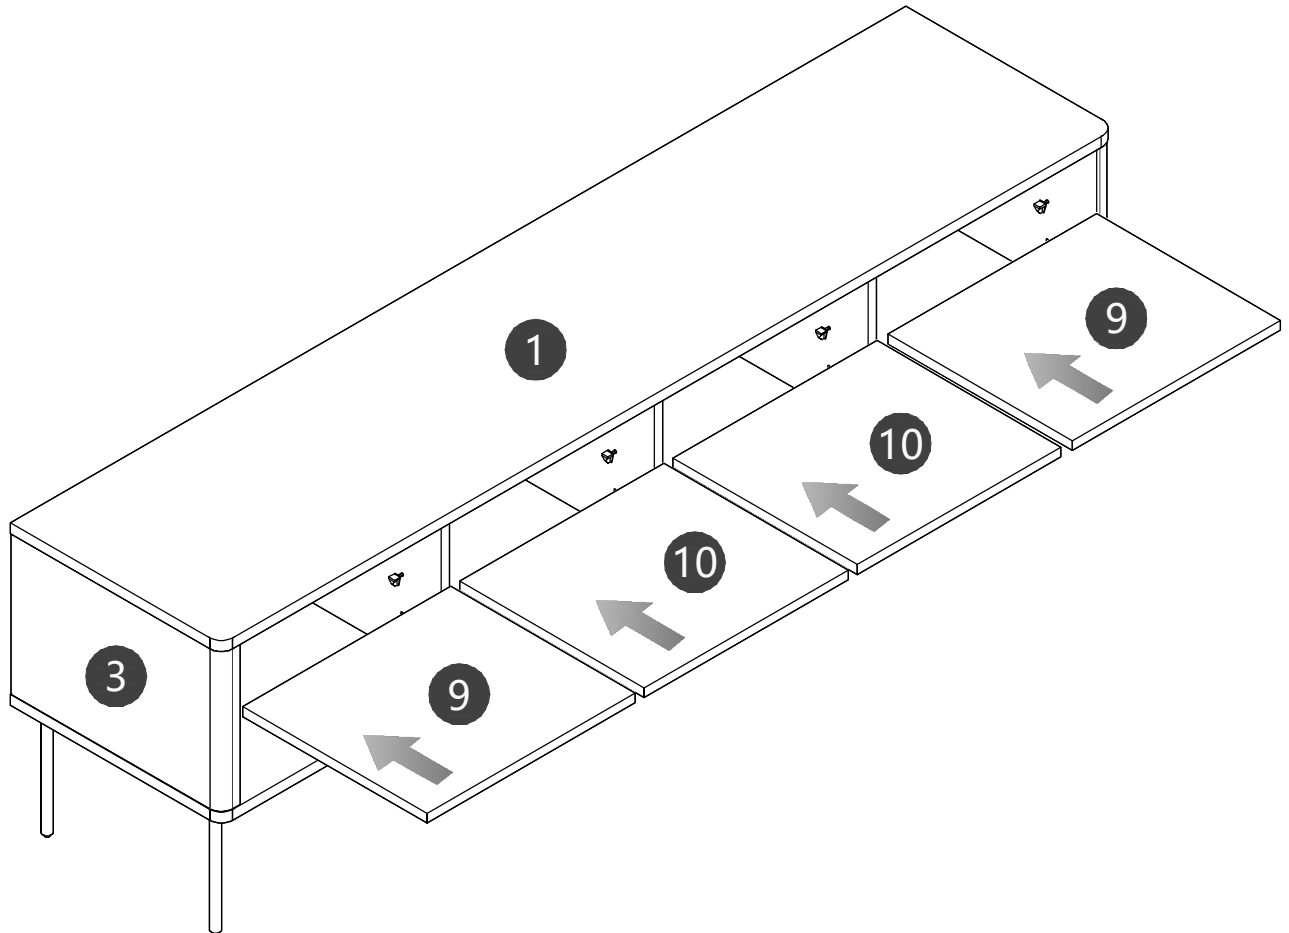





STEP 8

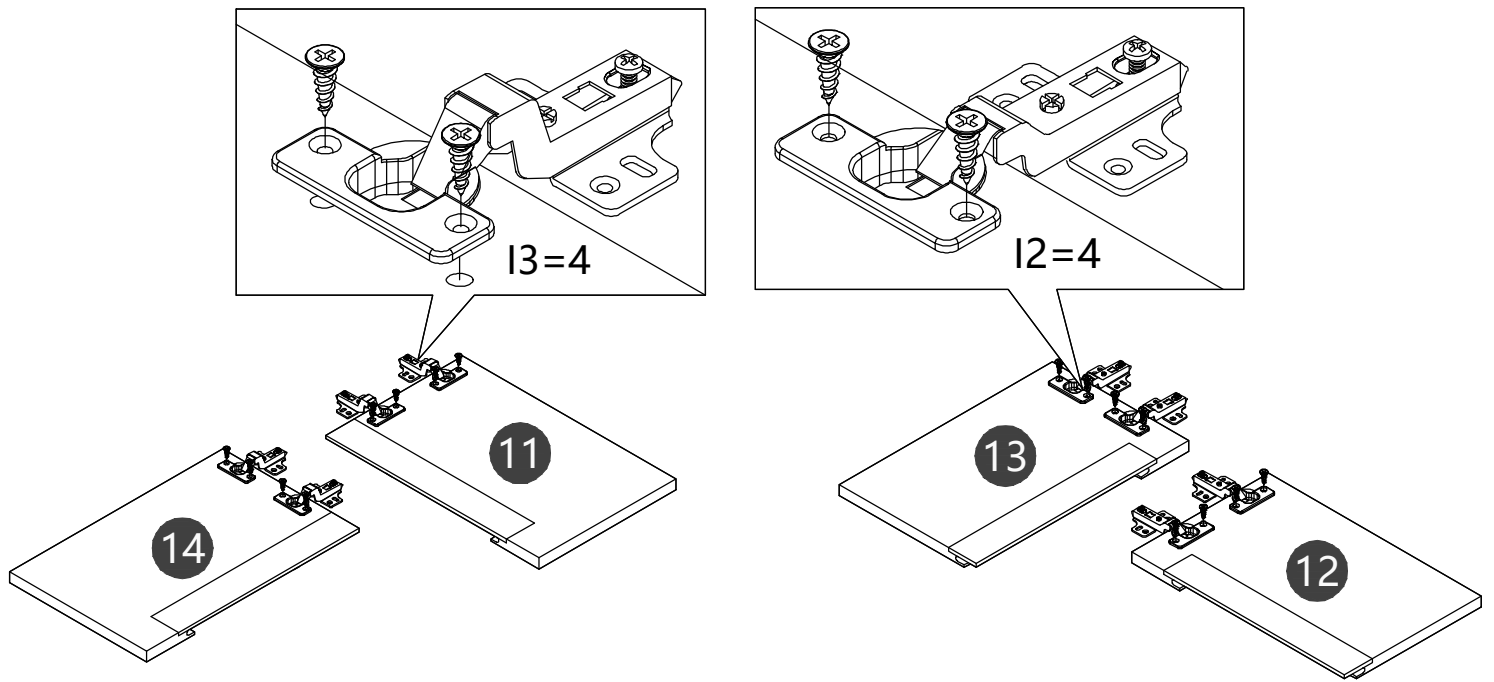


STEP 9

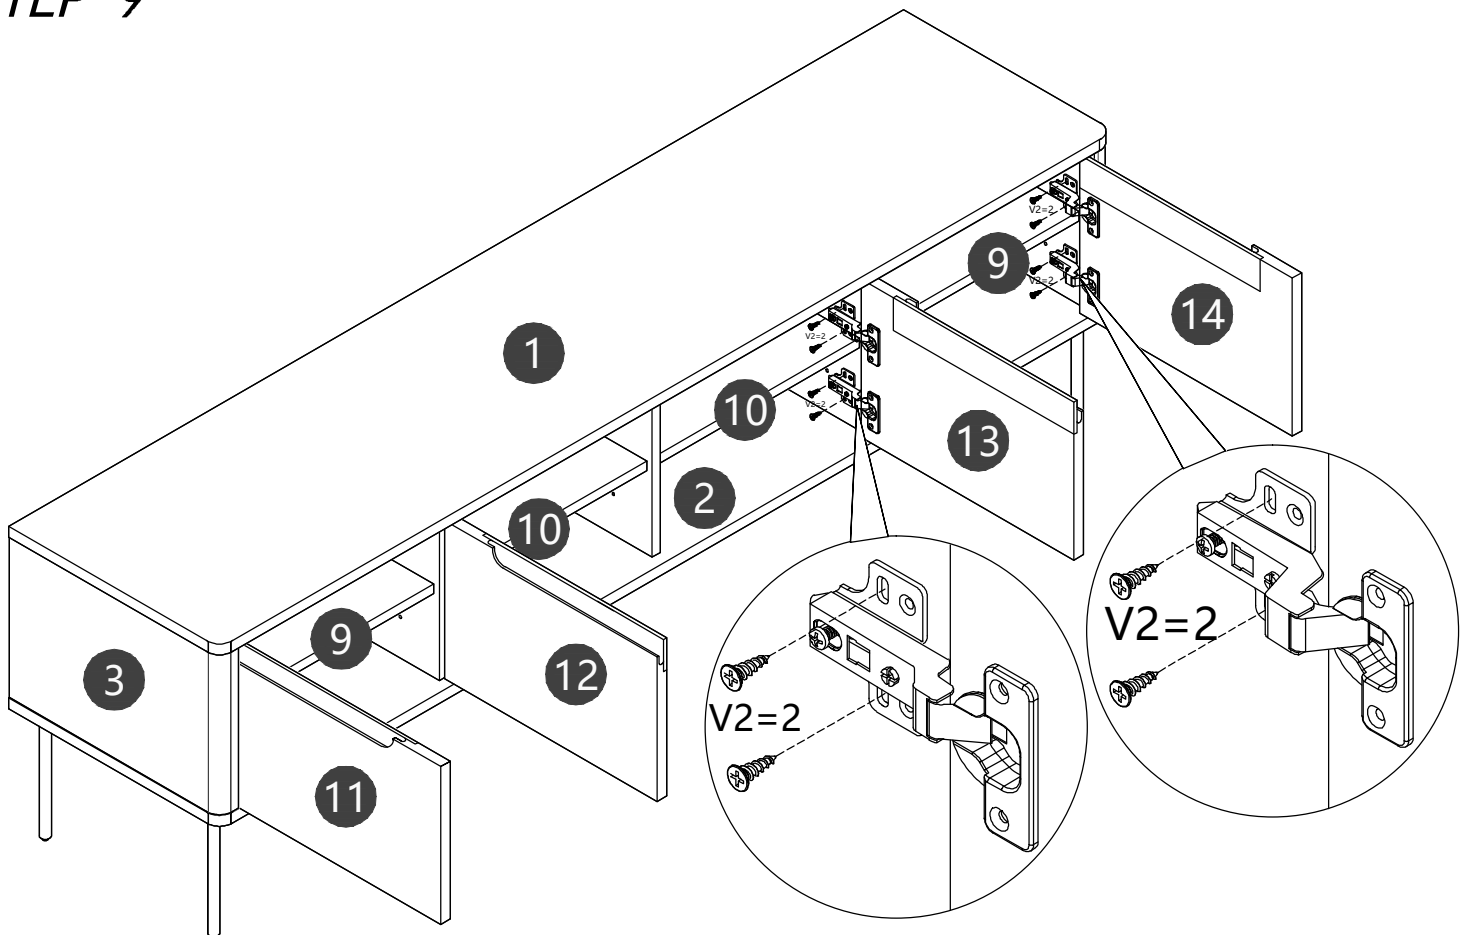


STEP 10

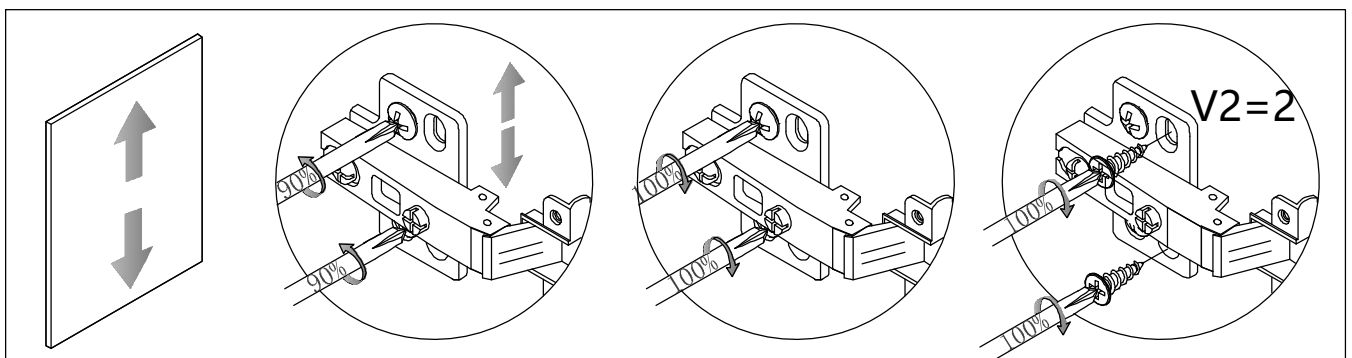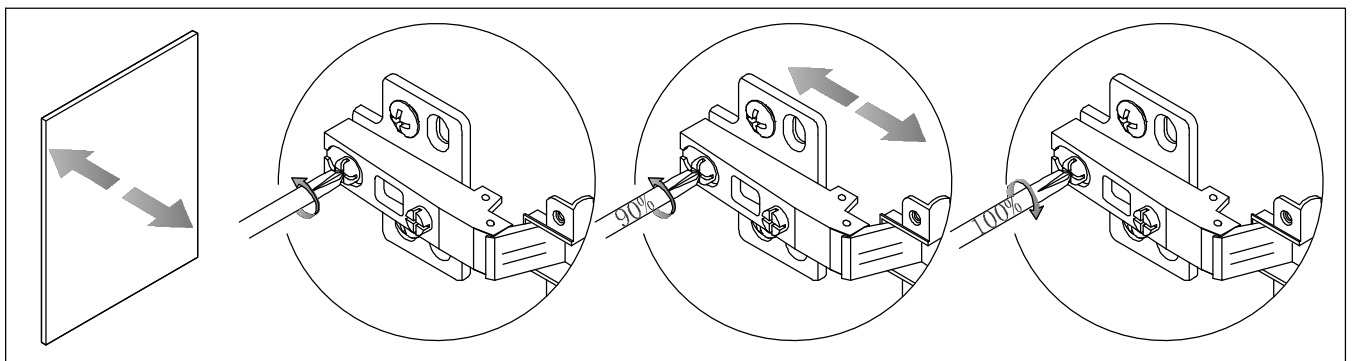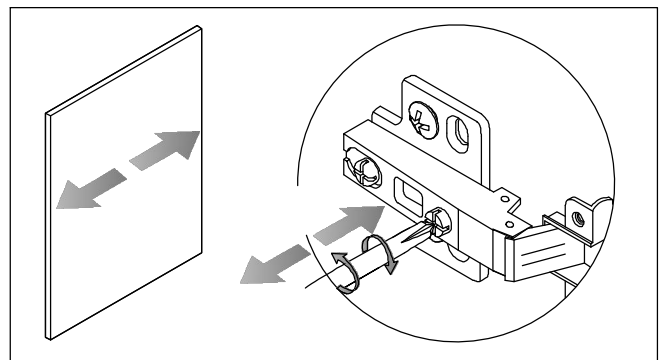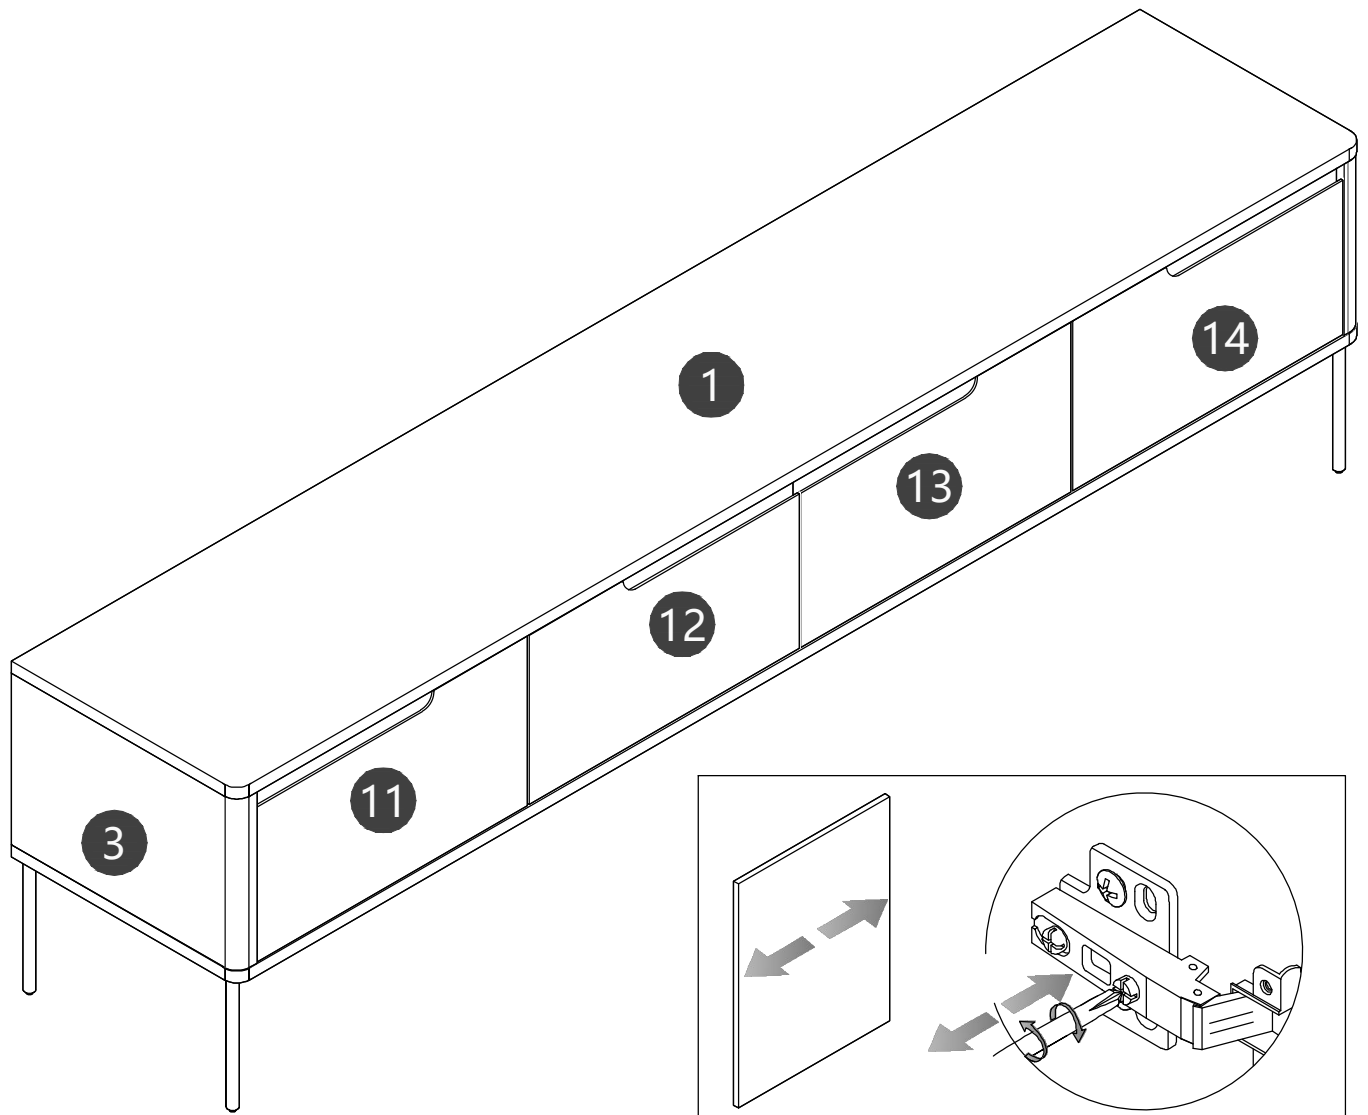


STEP 11

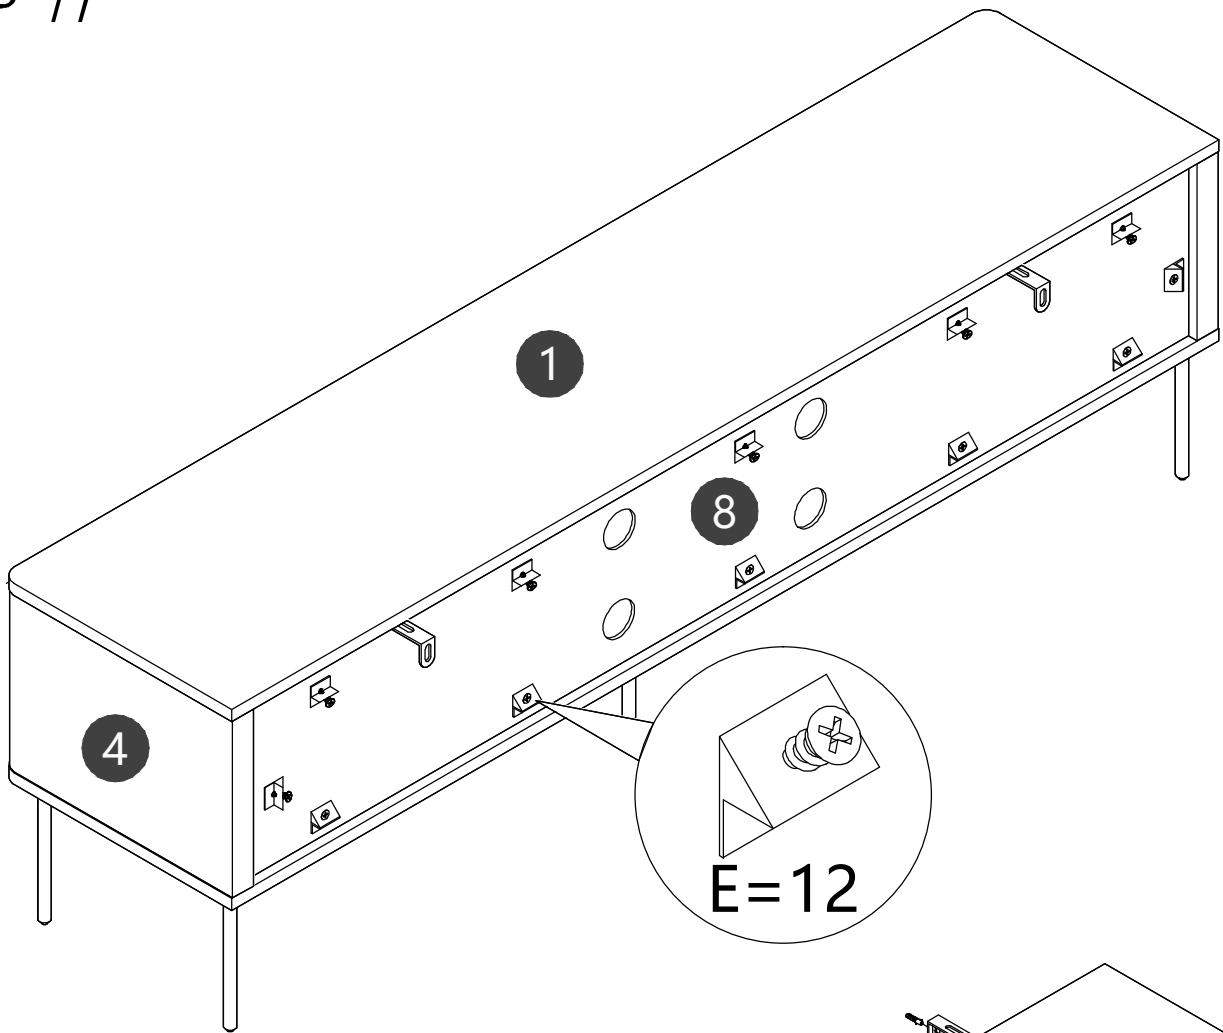

STEP 12

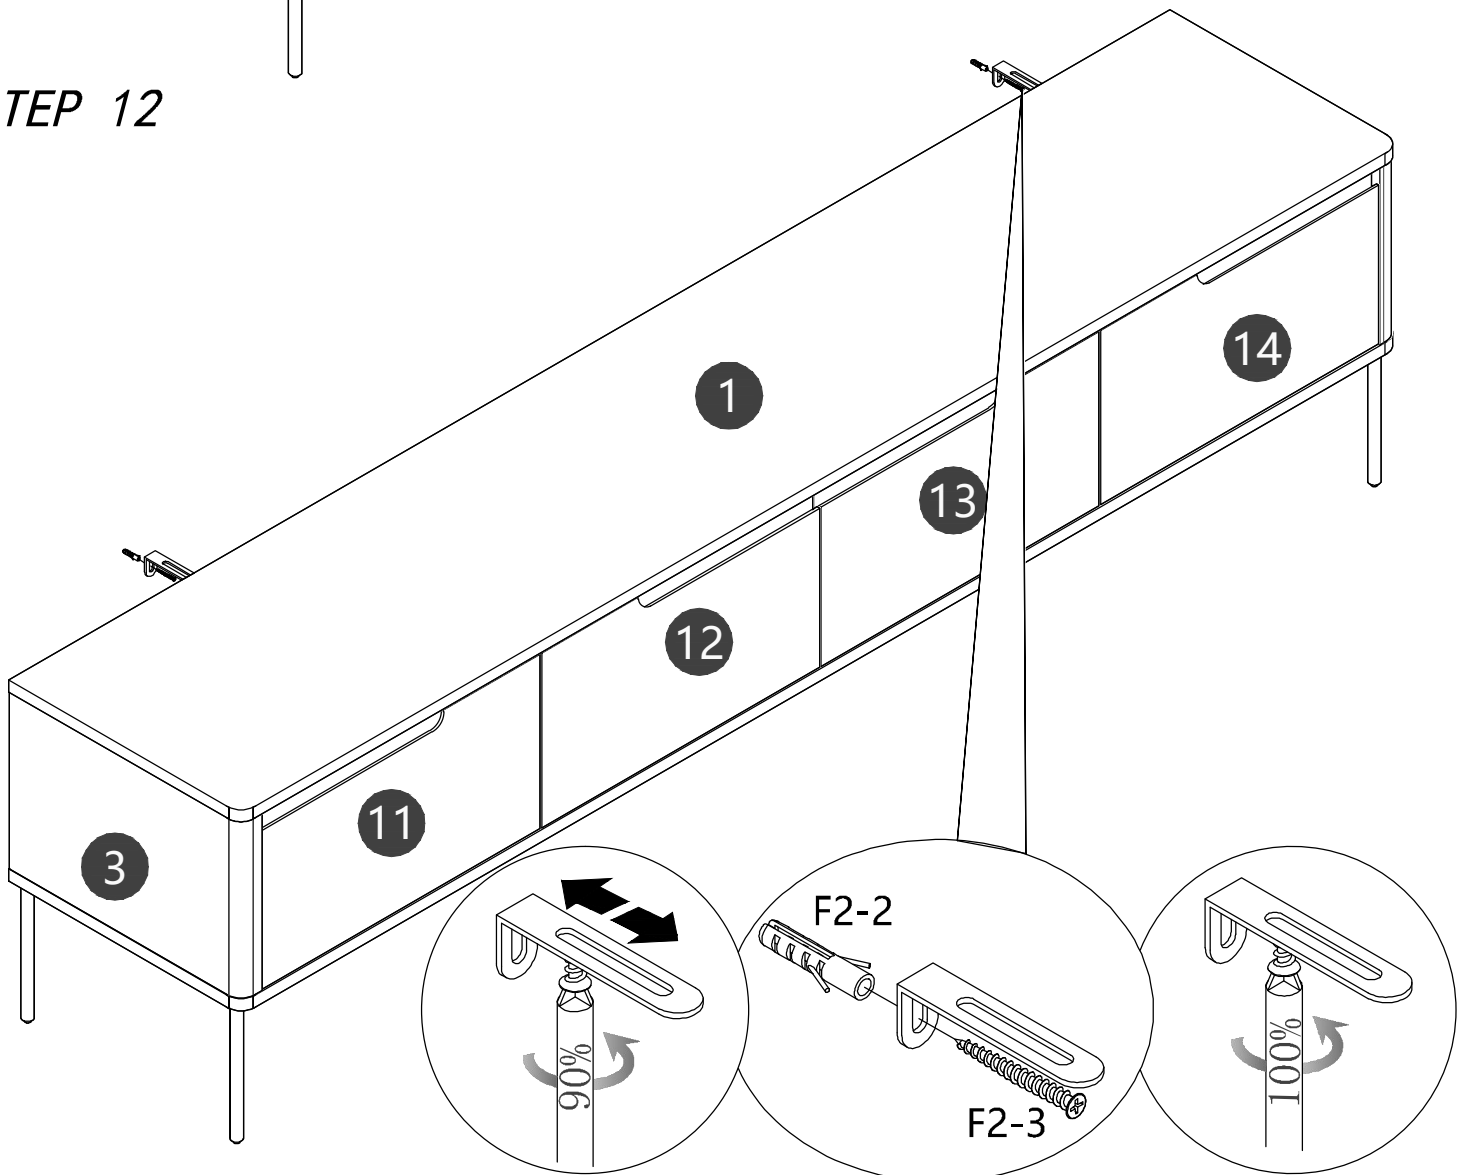

STEP 13

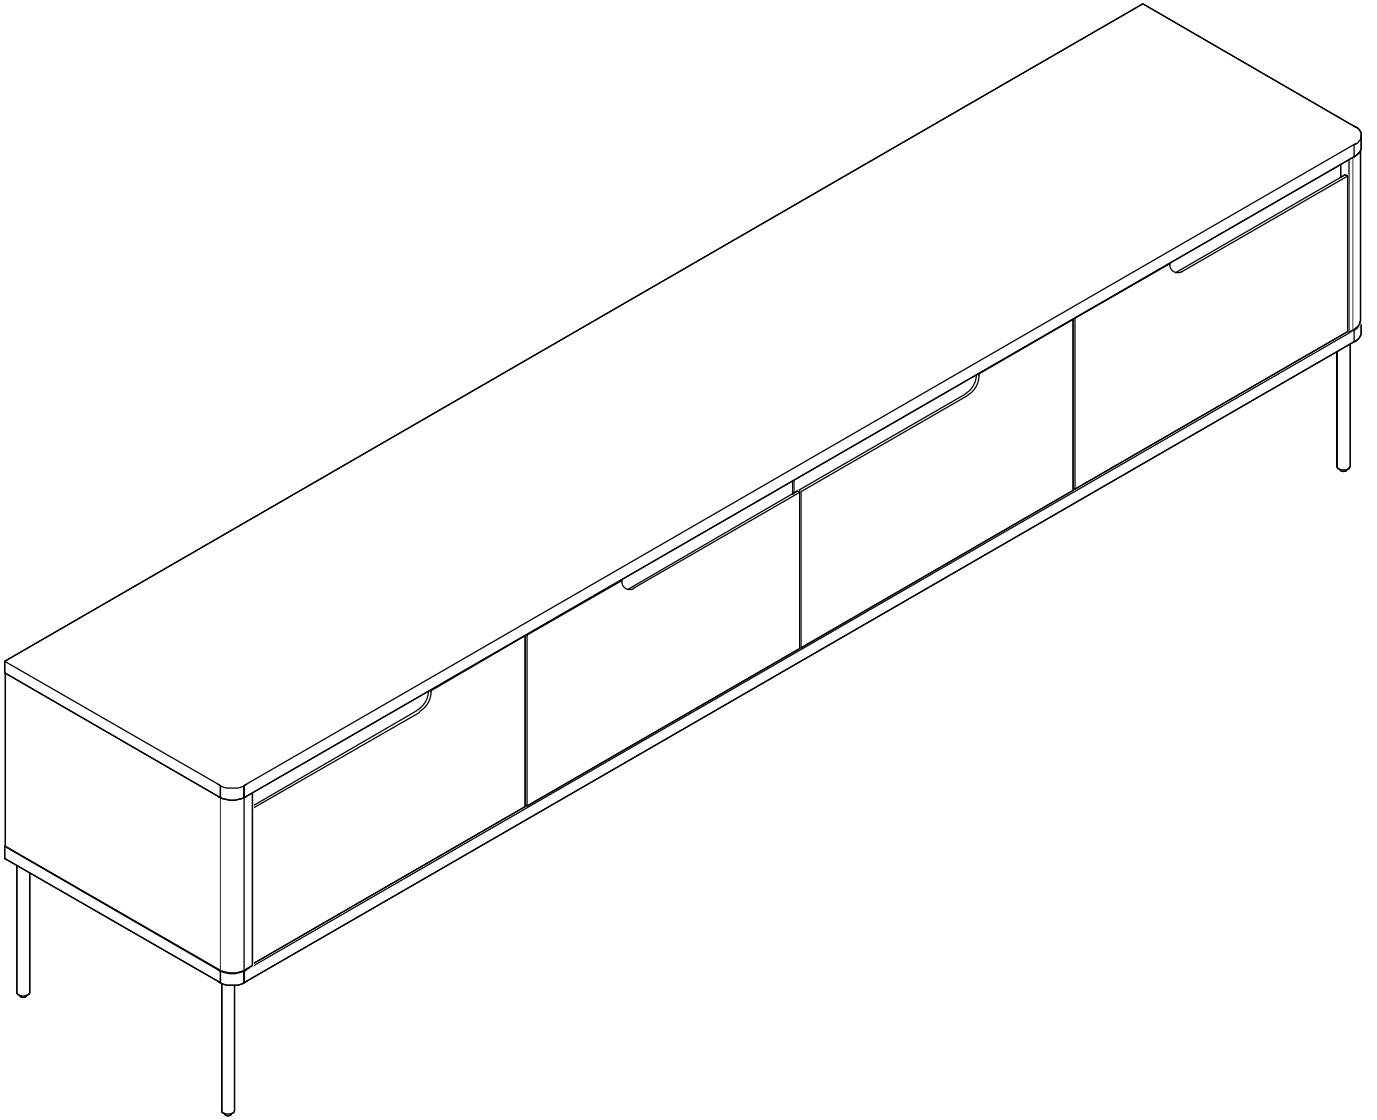

Finish