

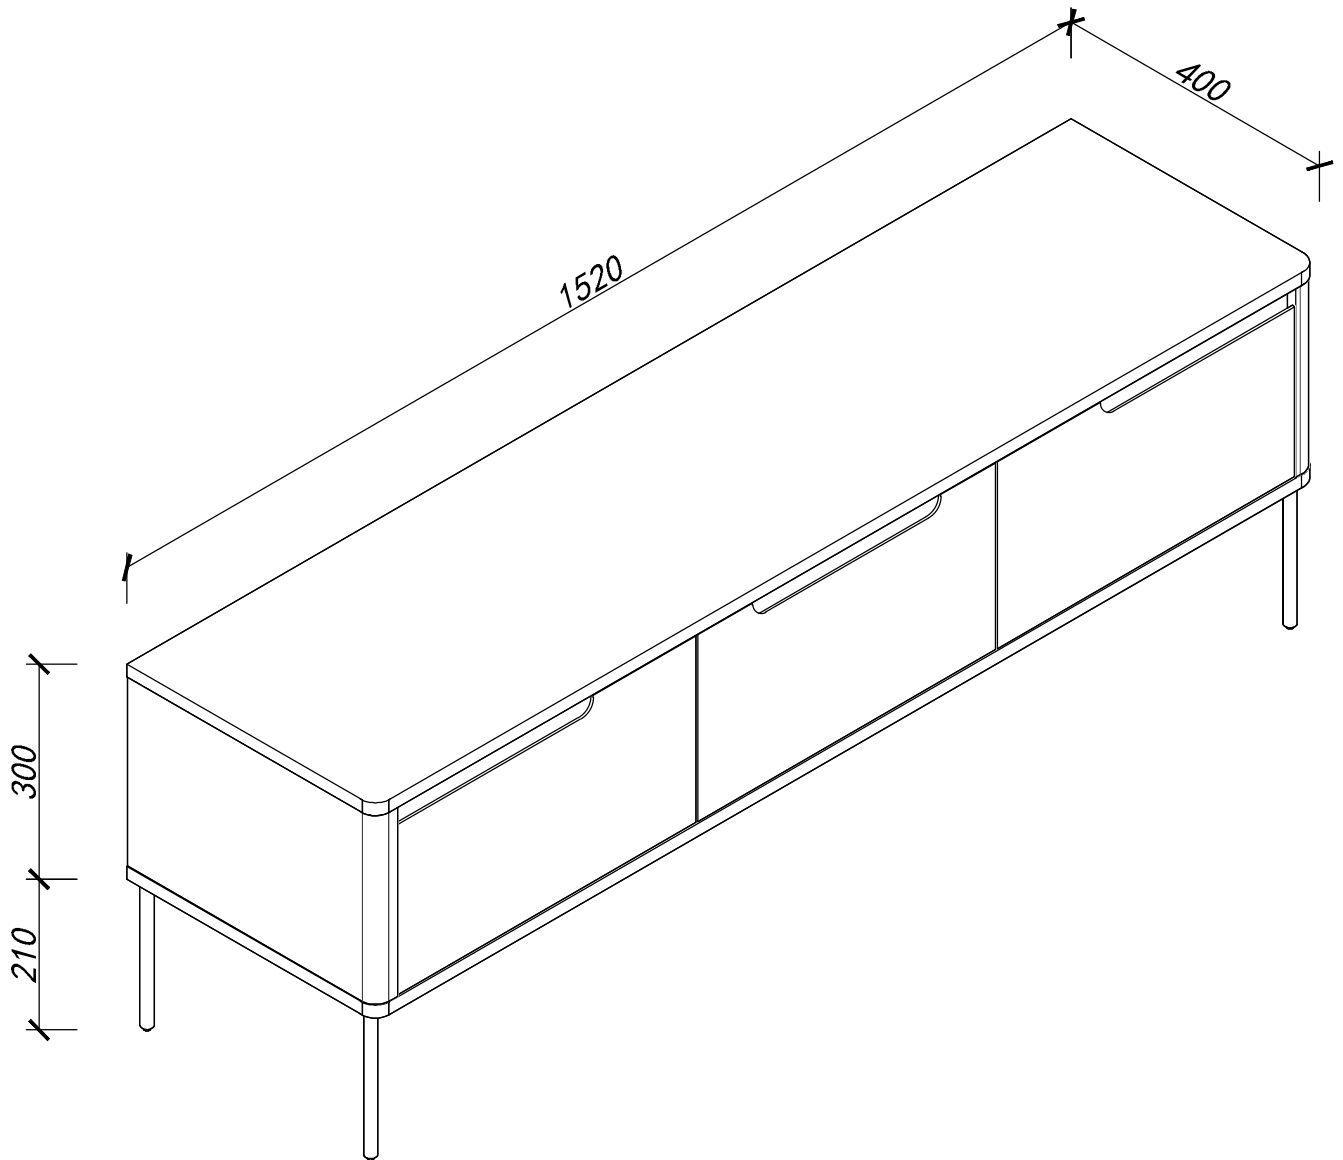
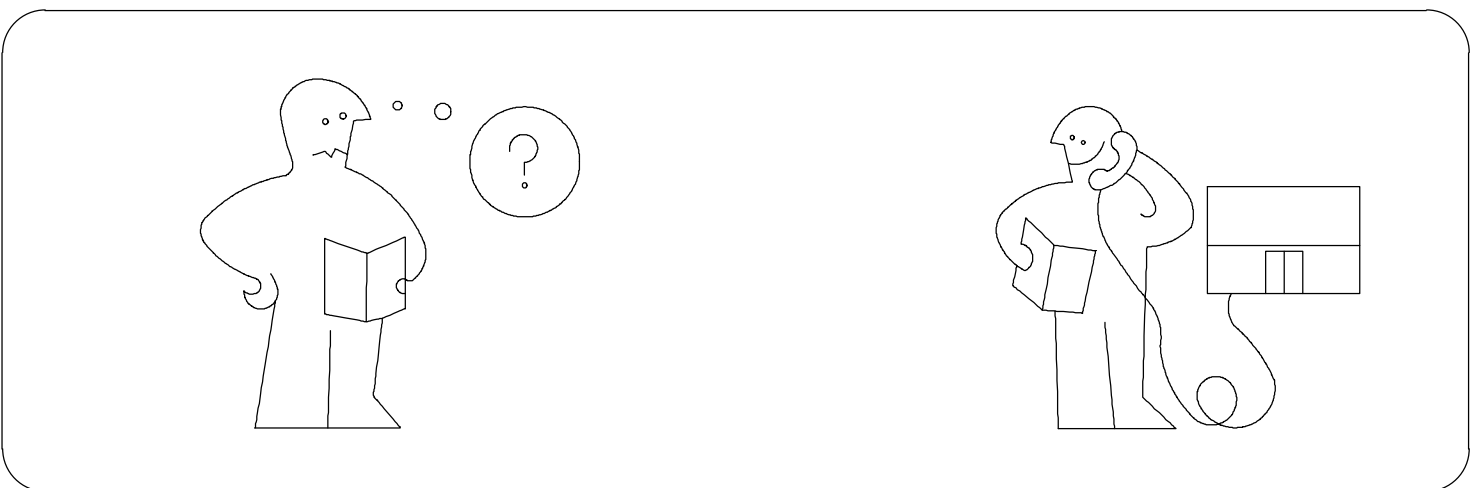
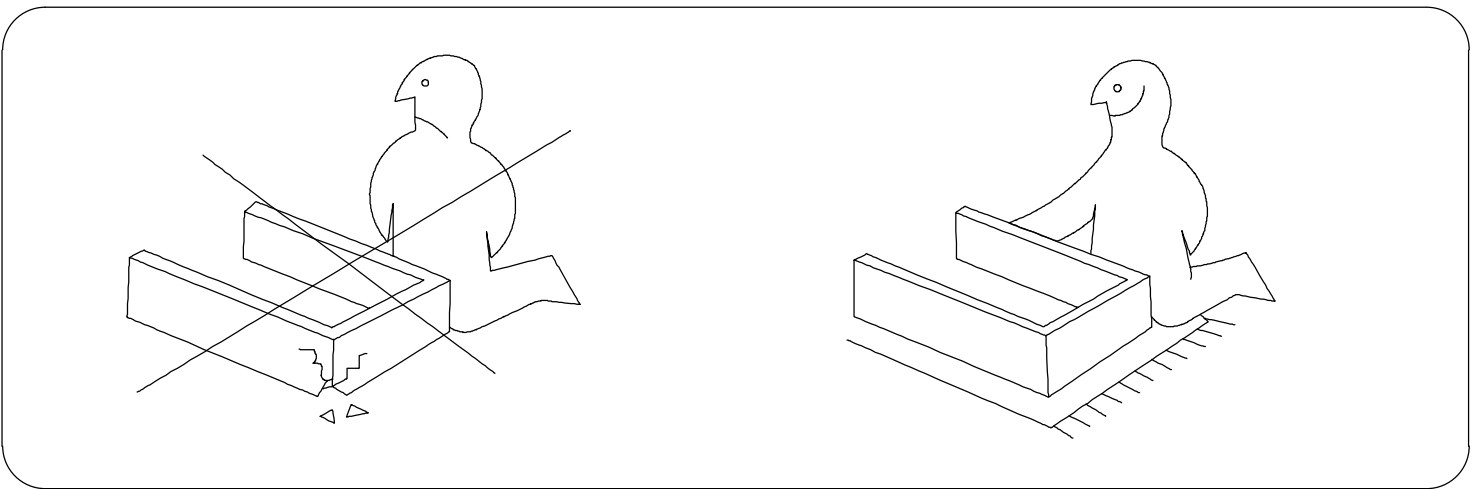


sømcasa


Assembly Instruction

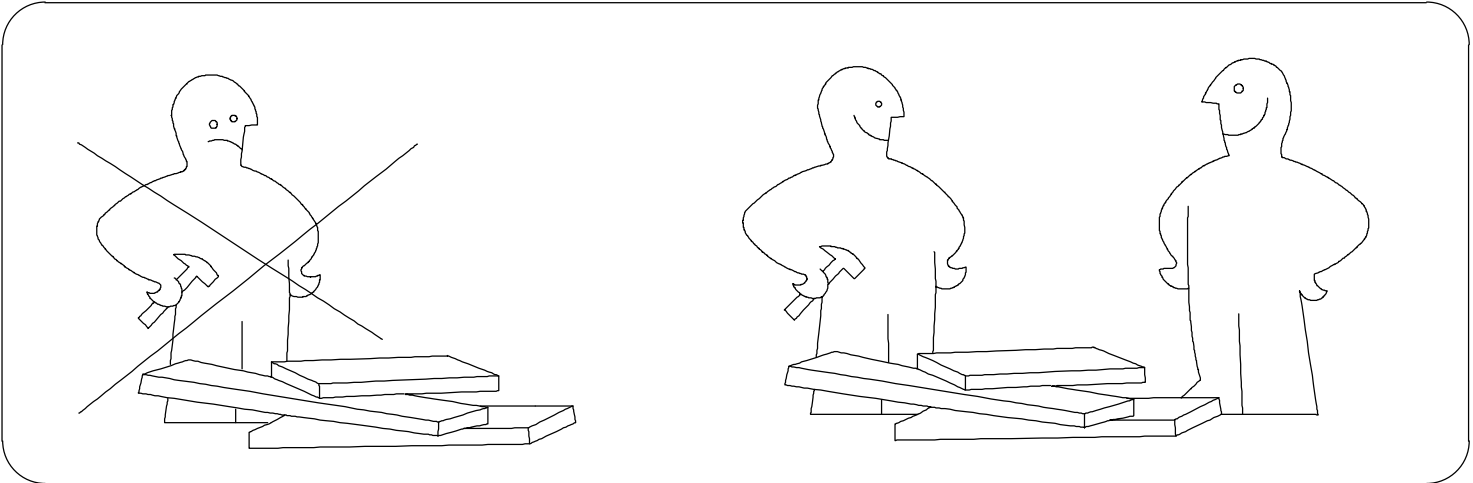

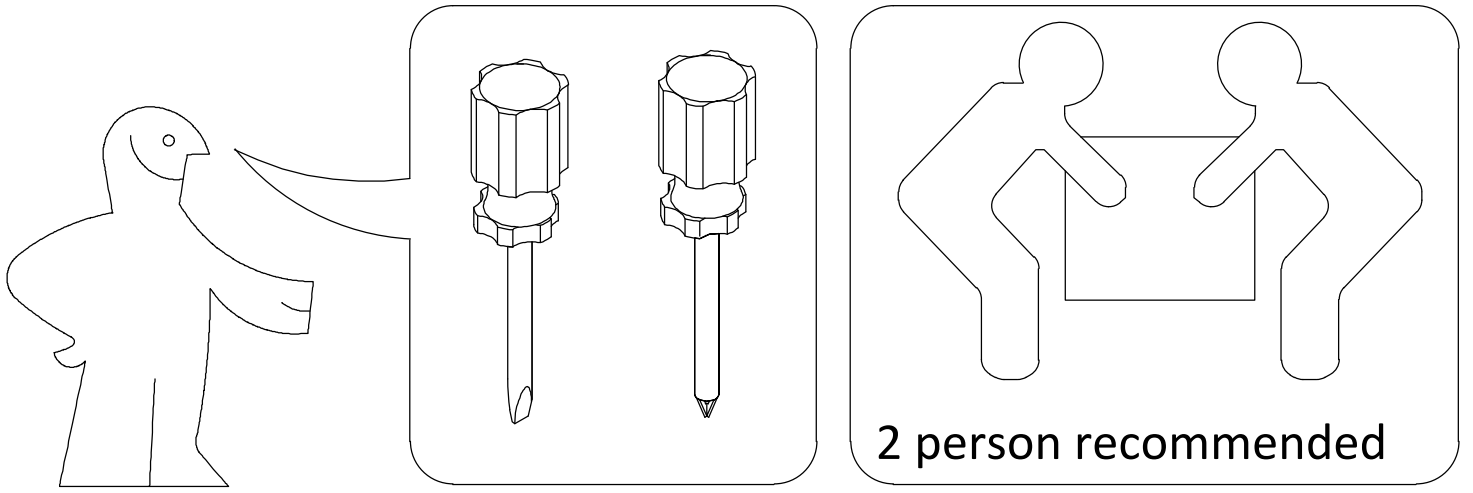


Panel No	Panel Sizes	Quantity
1	1520*400*18	1
2	1520*400*18	1
3	264*399*36	1
4	264*399*36	1
5	264*360*16	1
6	264*360*16	1

Panel No	Panel Sizes	Quantity
7	1456*274*5	1
8	471*350*16	2
9	463*350*16	1
10	479*260*18	1
11	479*260*18	1
12	479*260*18	1

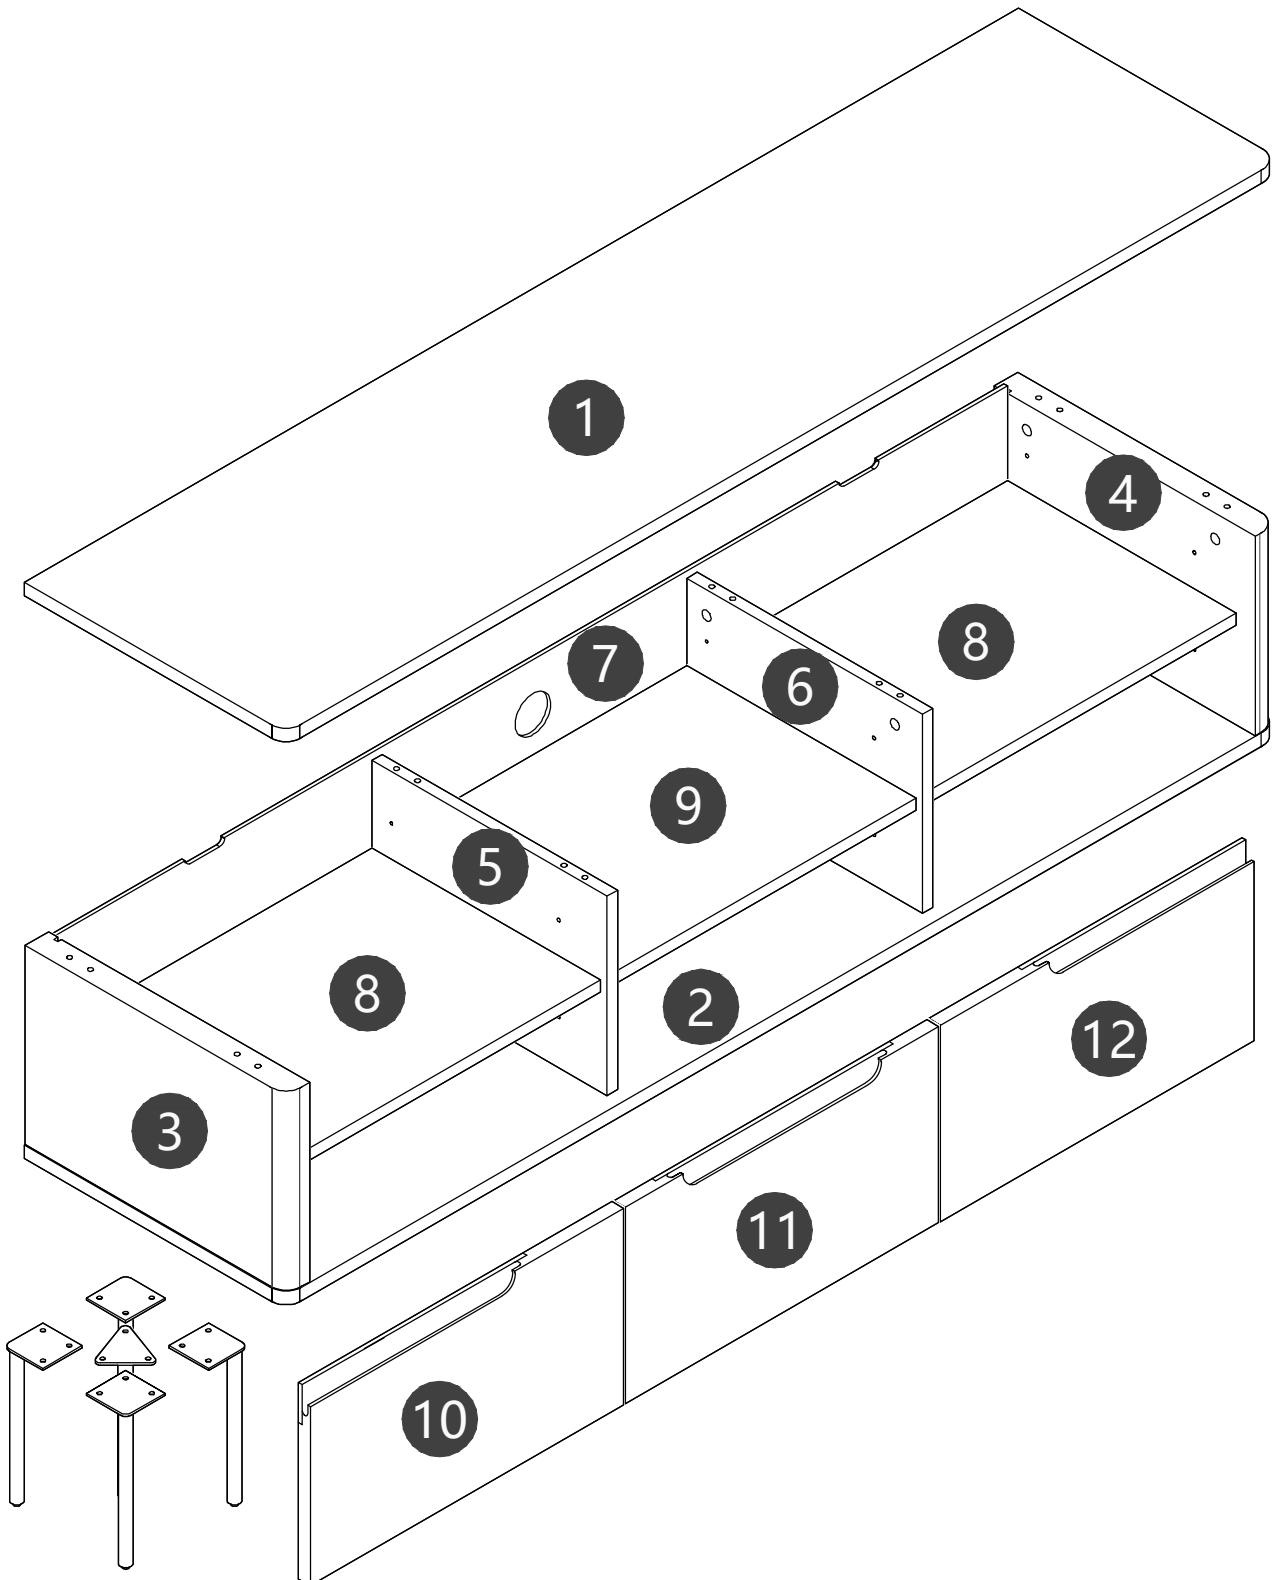


Fittings




M6*40

A=8



Φ8*30

B=16

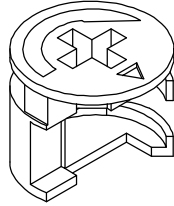


Φ15*12

C=8




Φ21


D=8

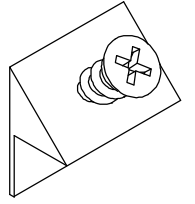

E=10

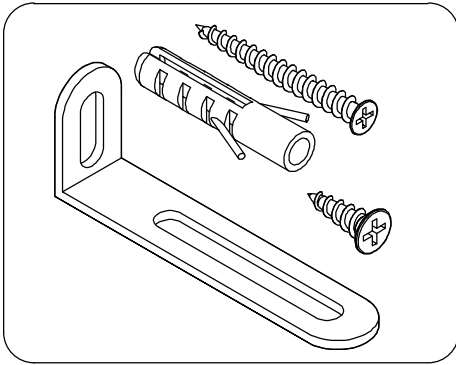


F=2




M6*16

G=15

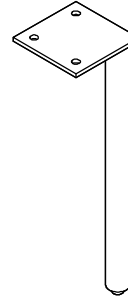

J1=4




J2=1




M4


H=1

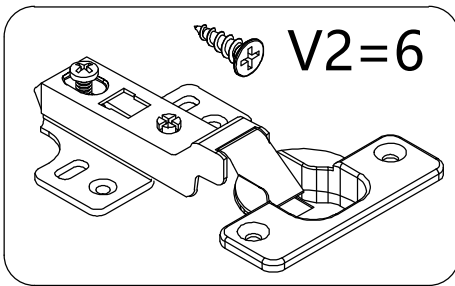

I2=2

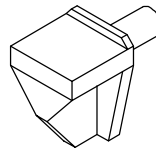


L=12

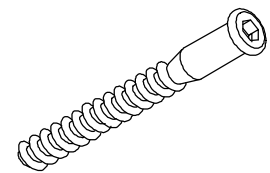

Φ7*50

Q=8

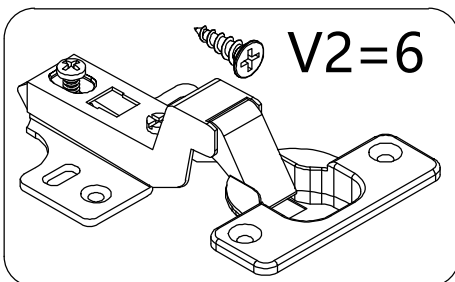

I3=4



M4


Z1=15




M4

Z2=15


STEP 1

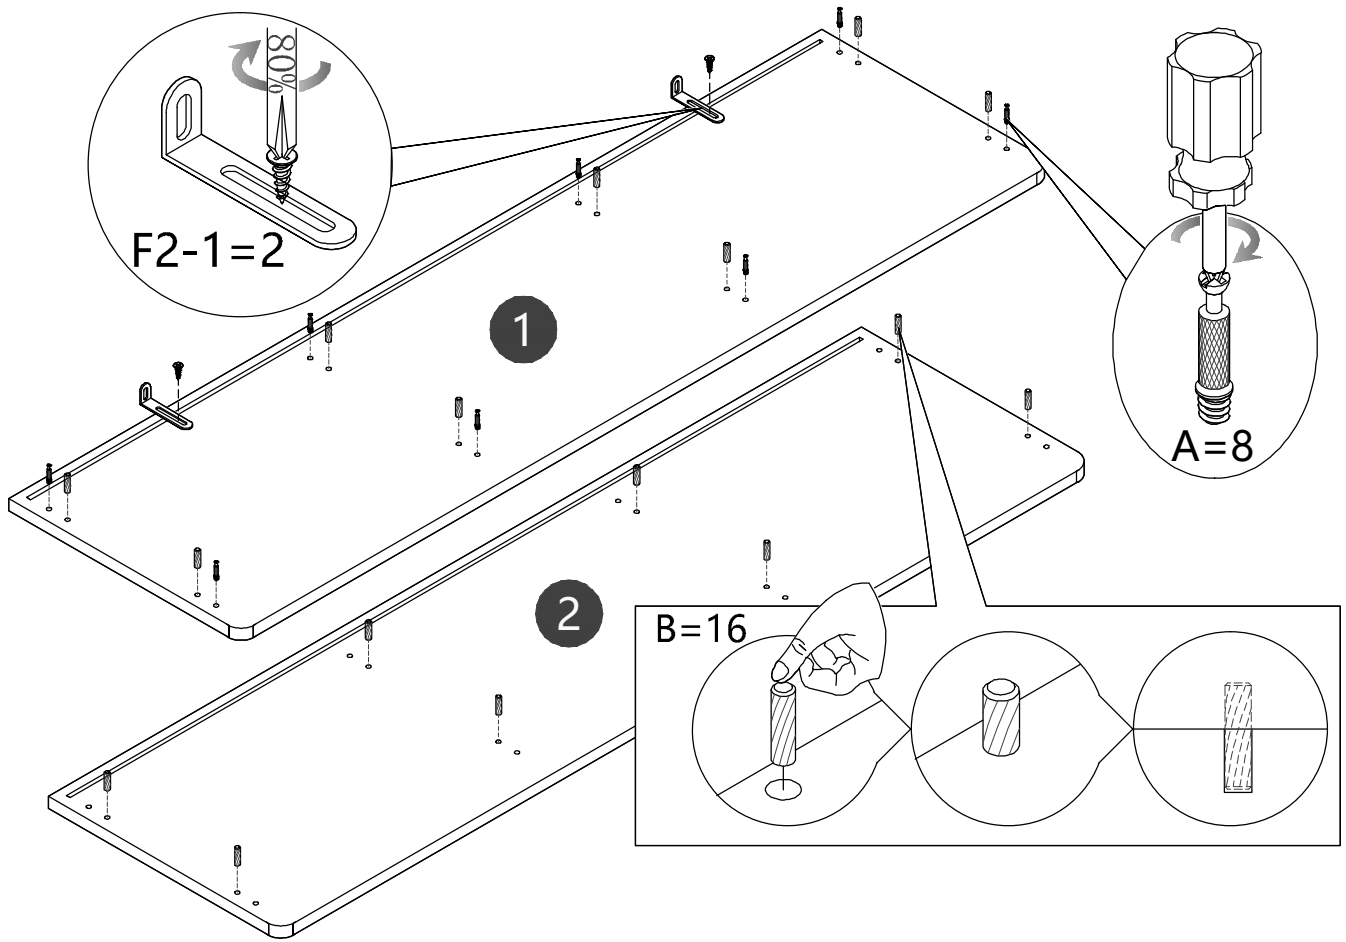


STEP 2

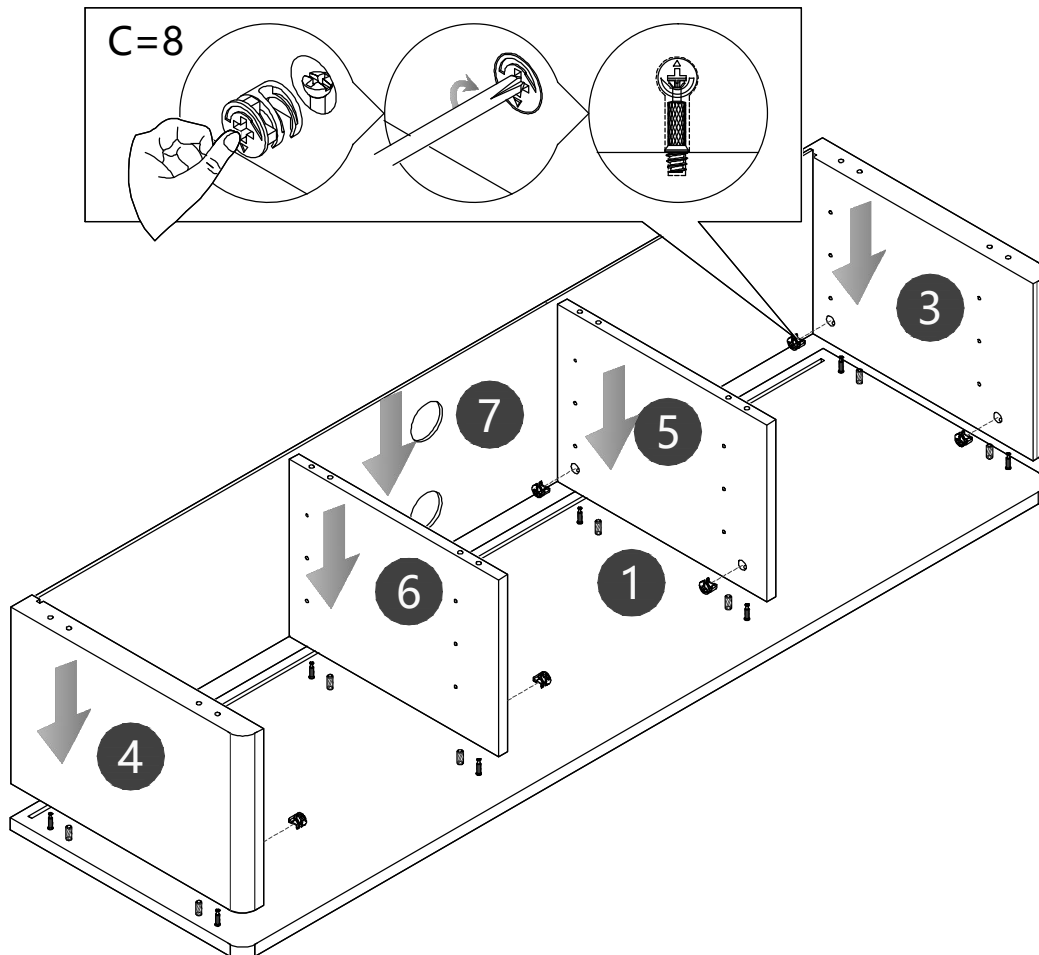


STEP 3

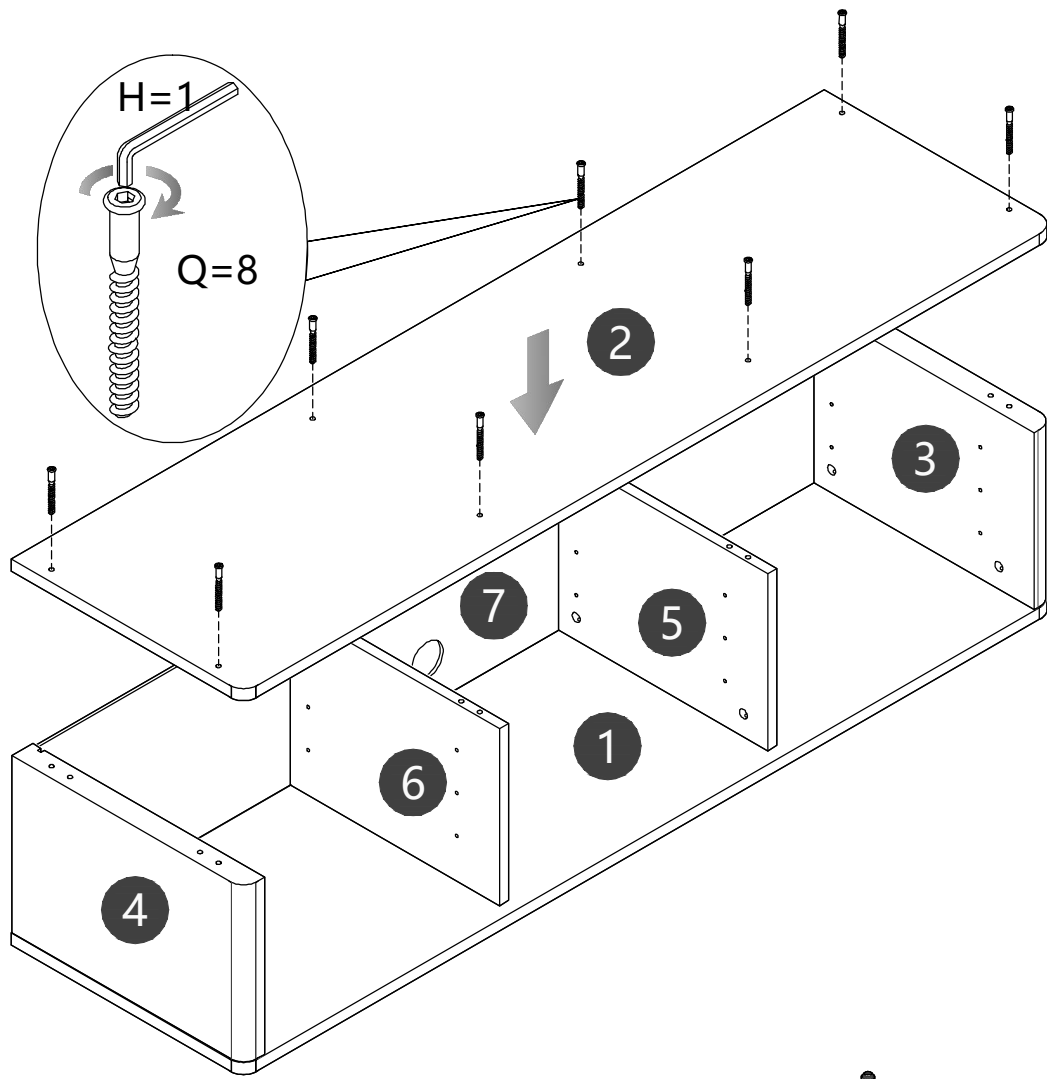


STEP 4

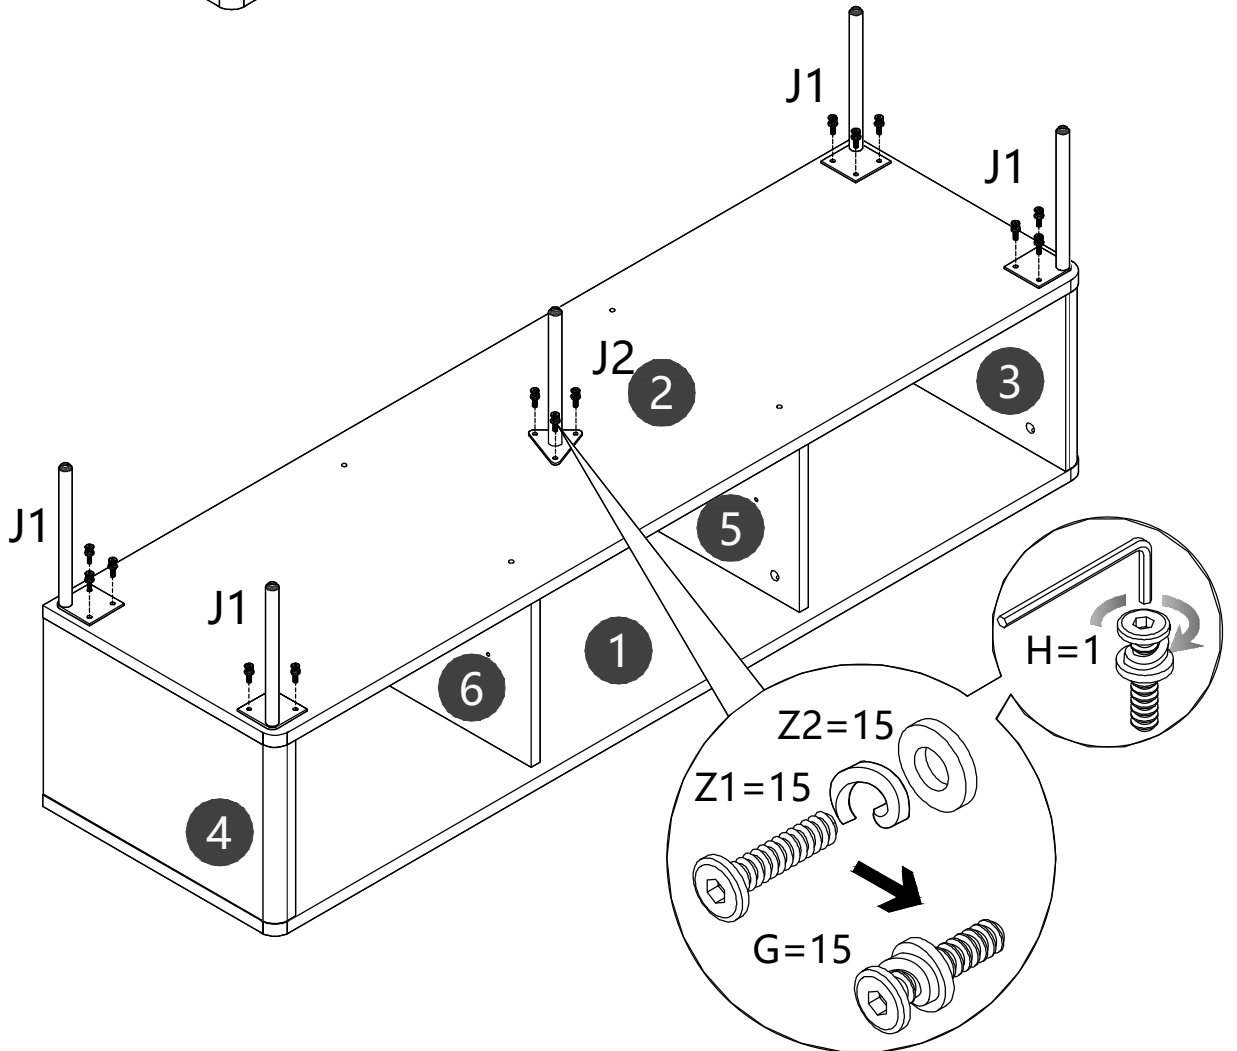


STEP 5

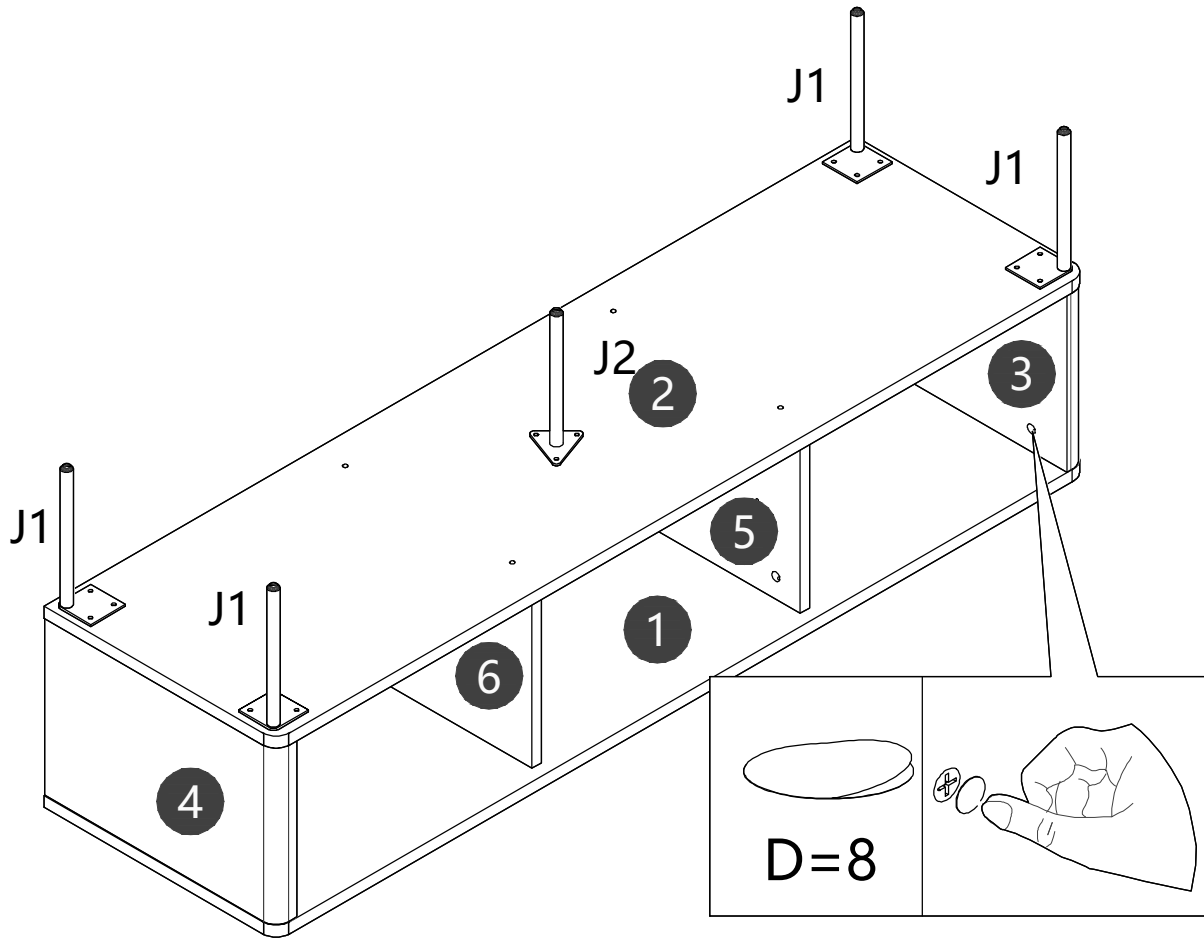


STEP 6

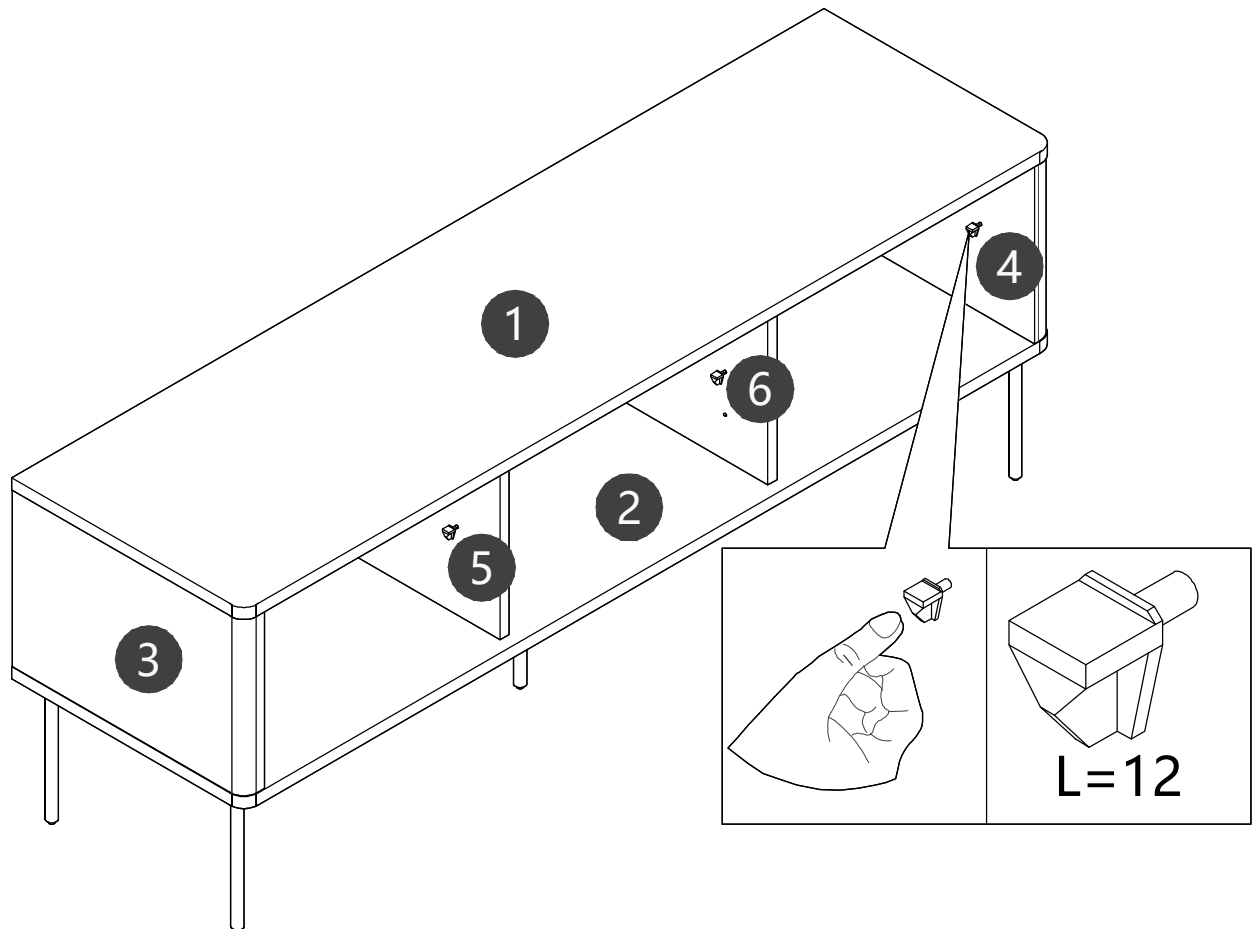


STEP 7

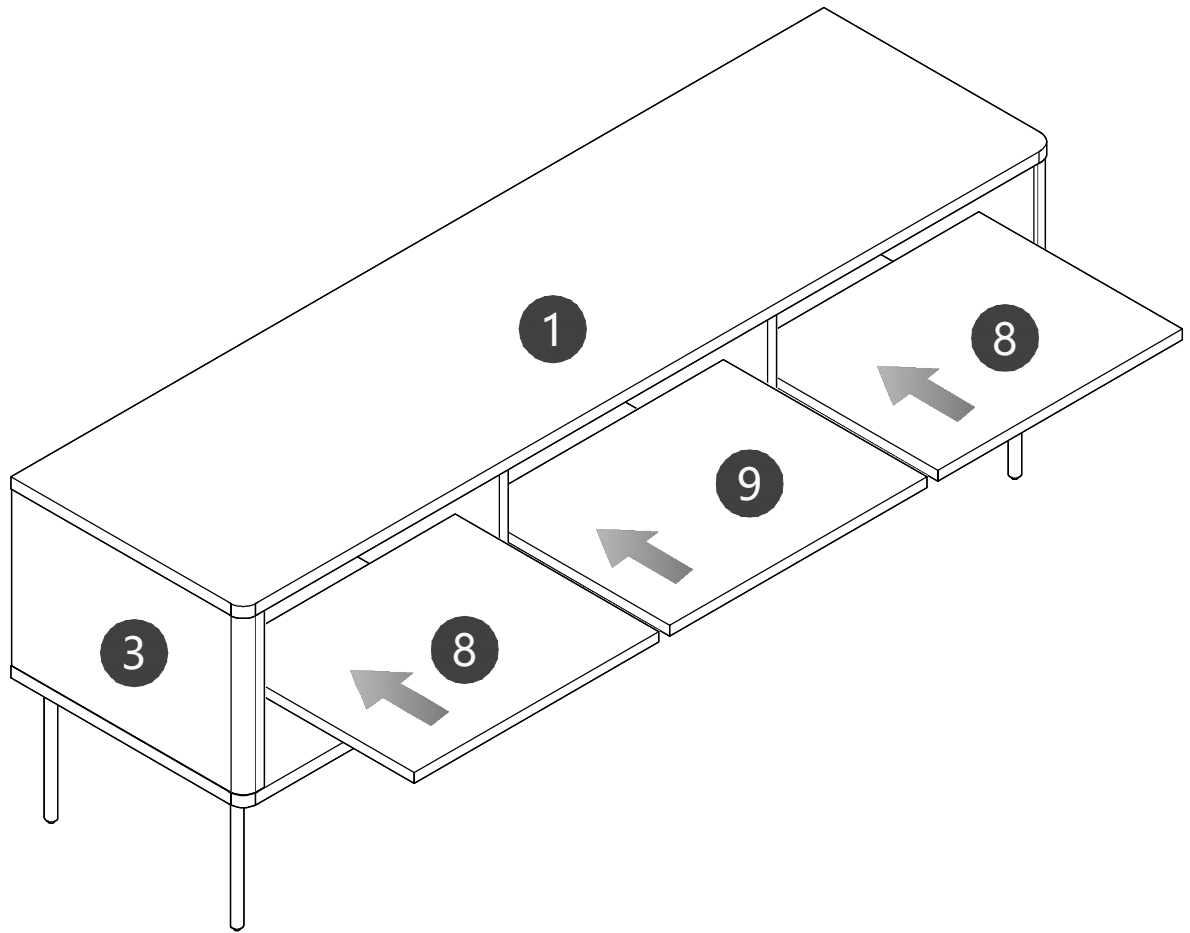





STEP 8

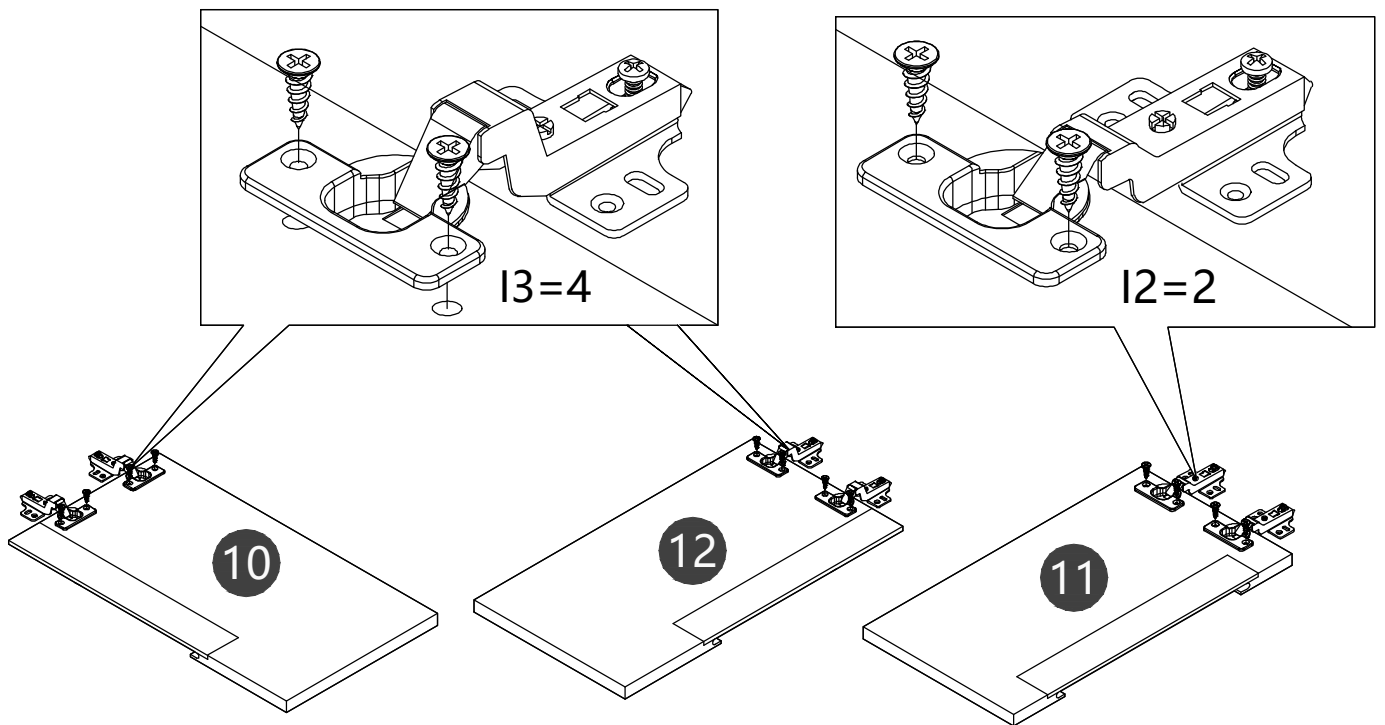


STEP 9

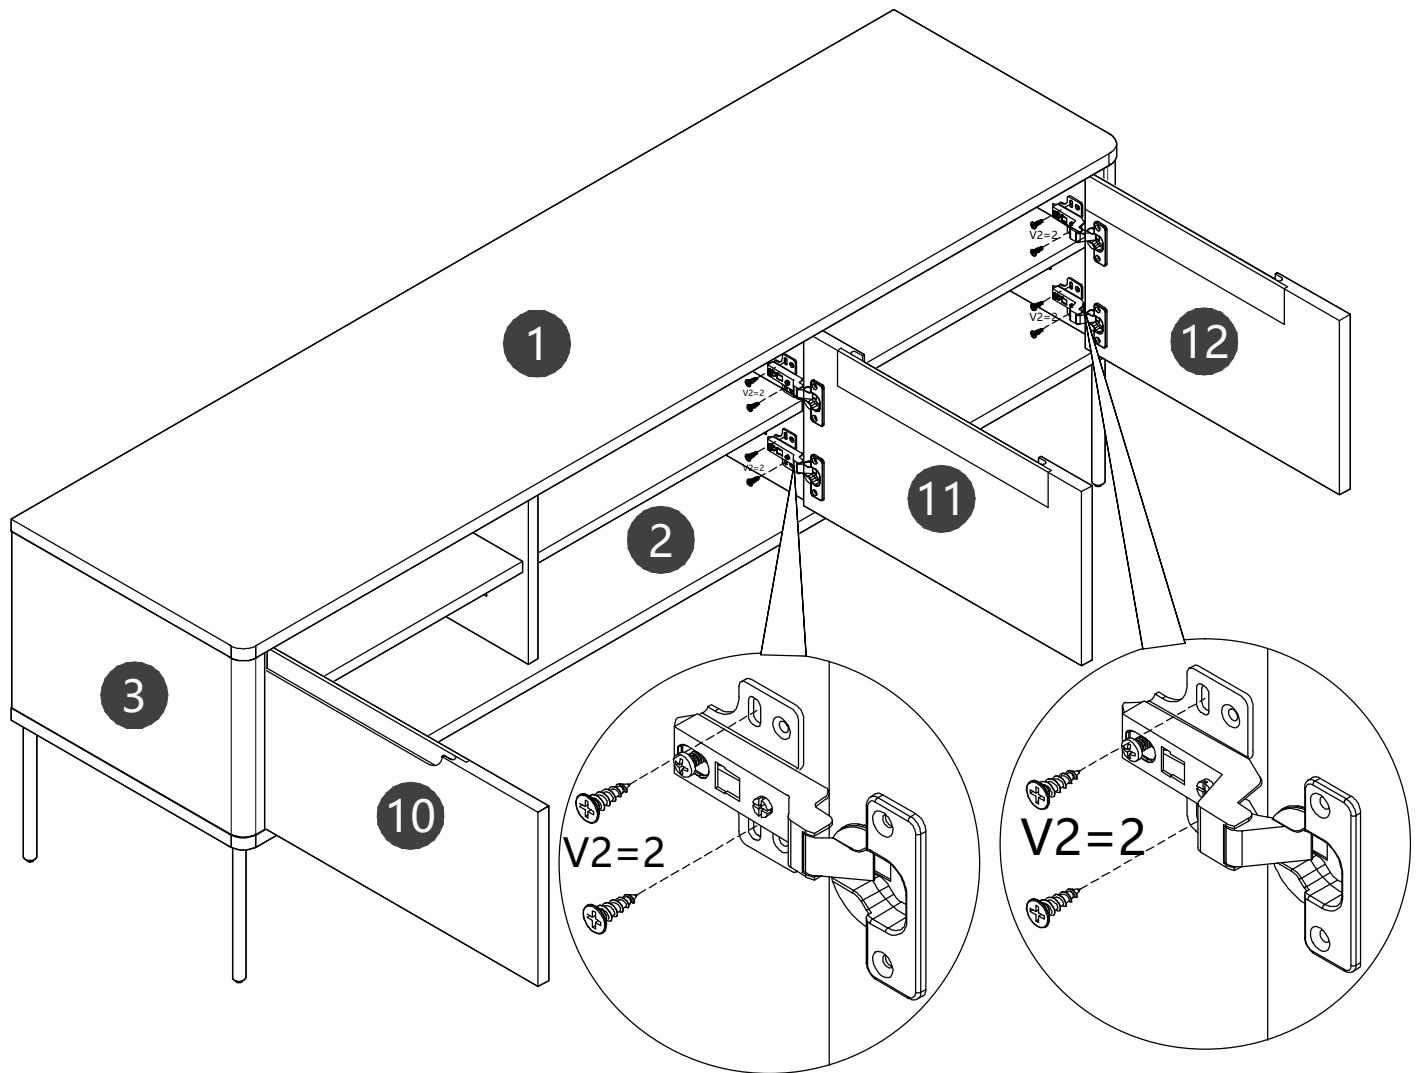


STEP 10

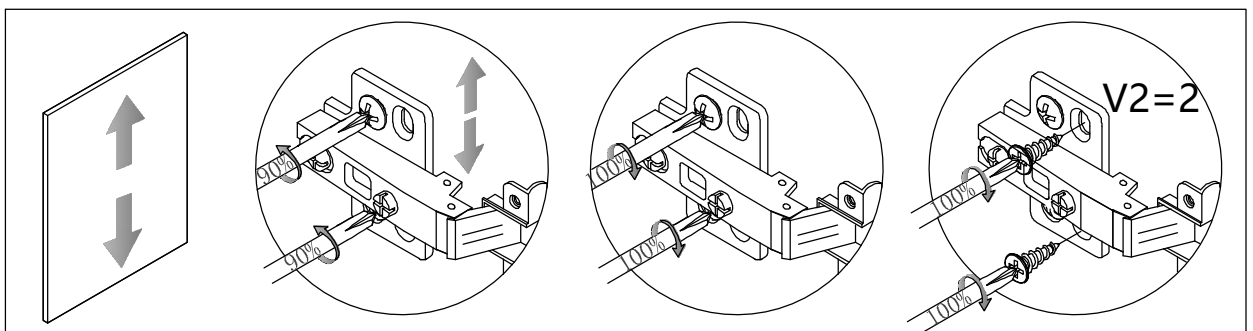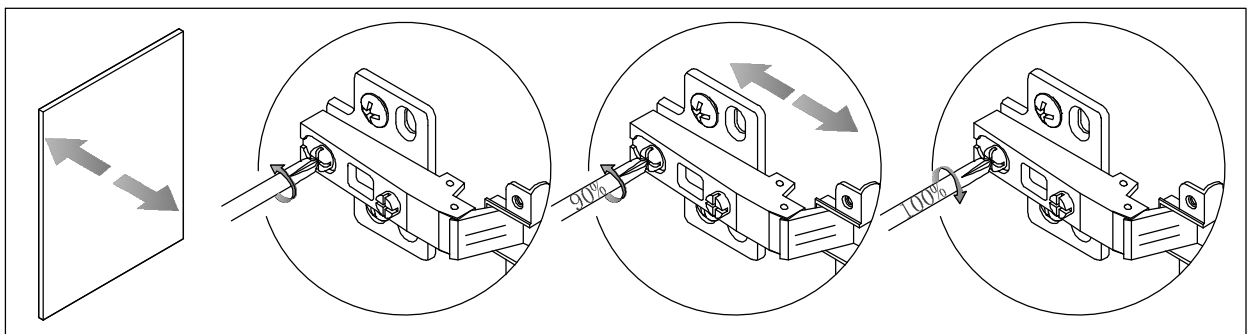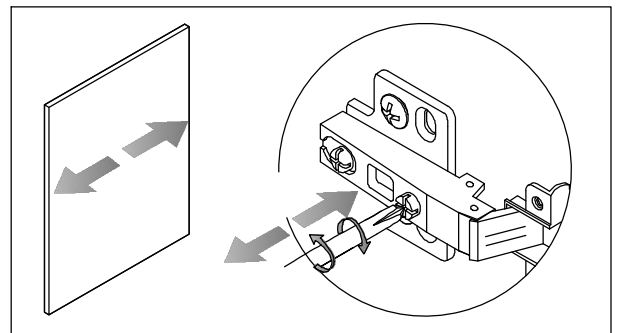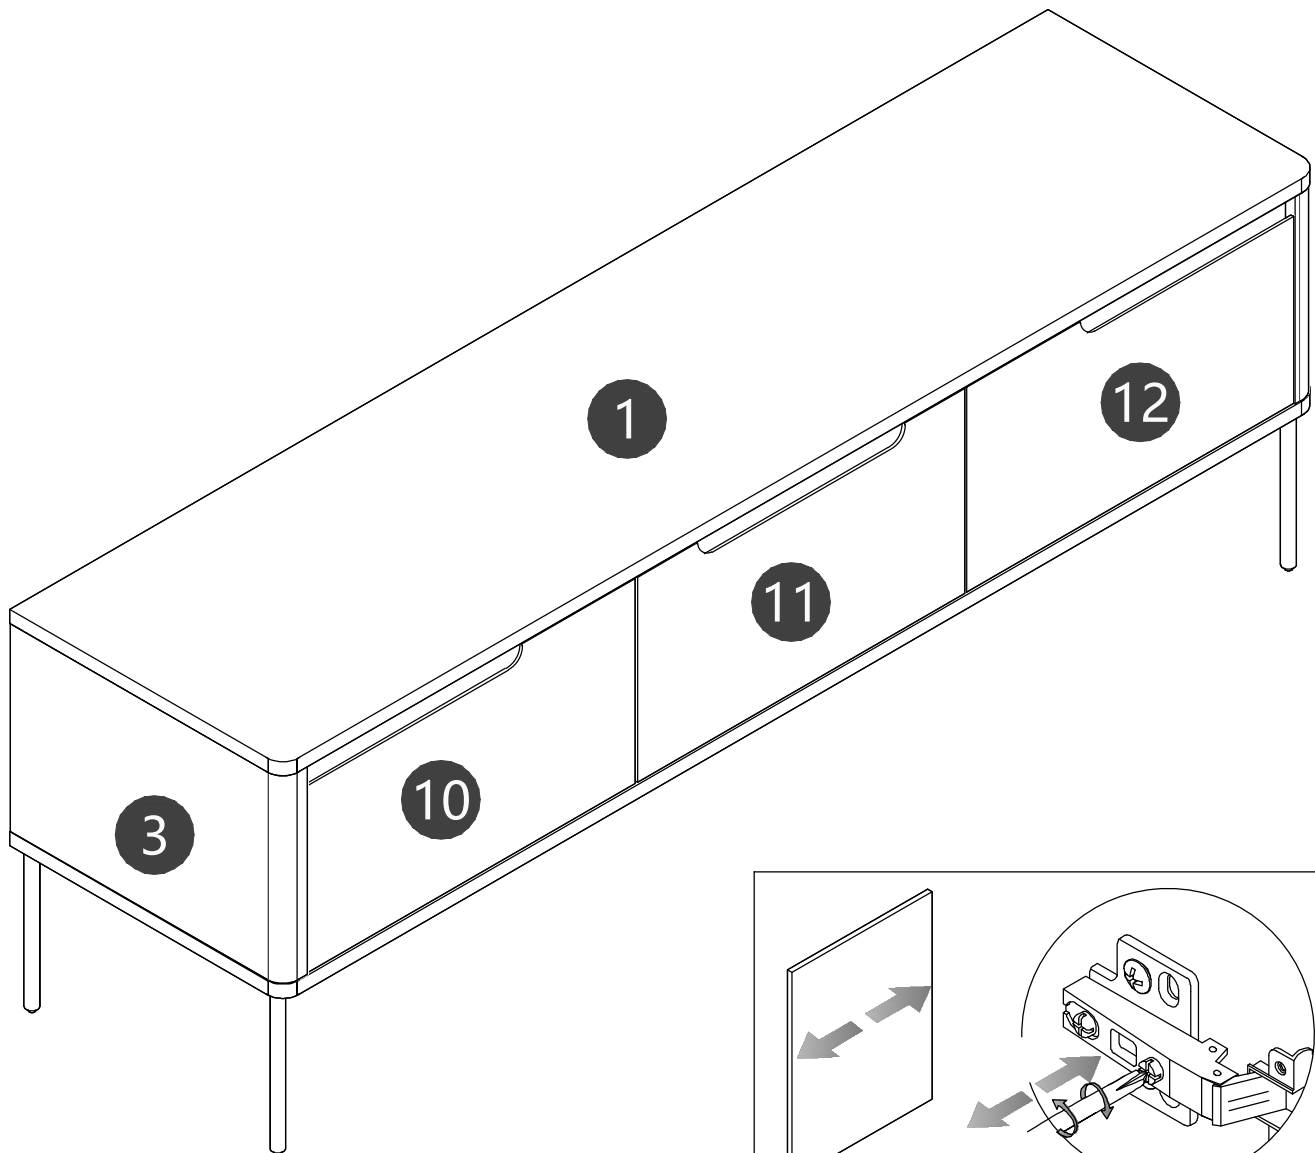


STEP 11

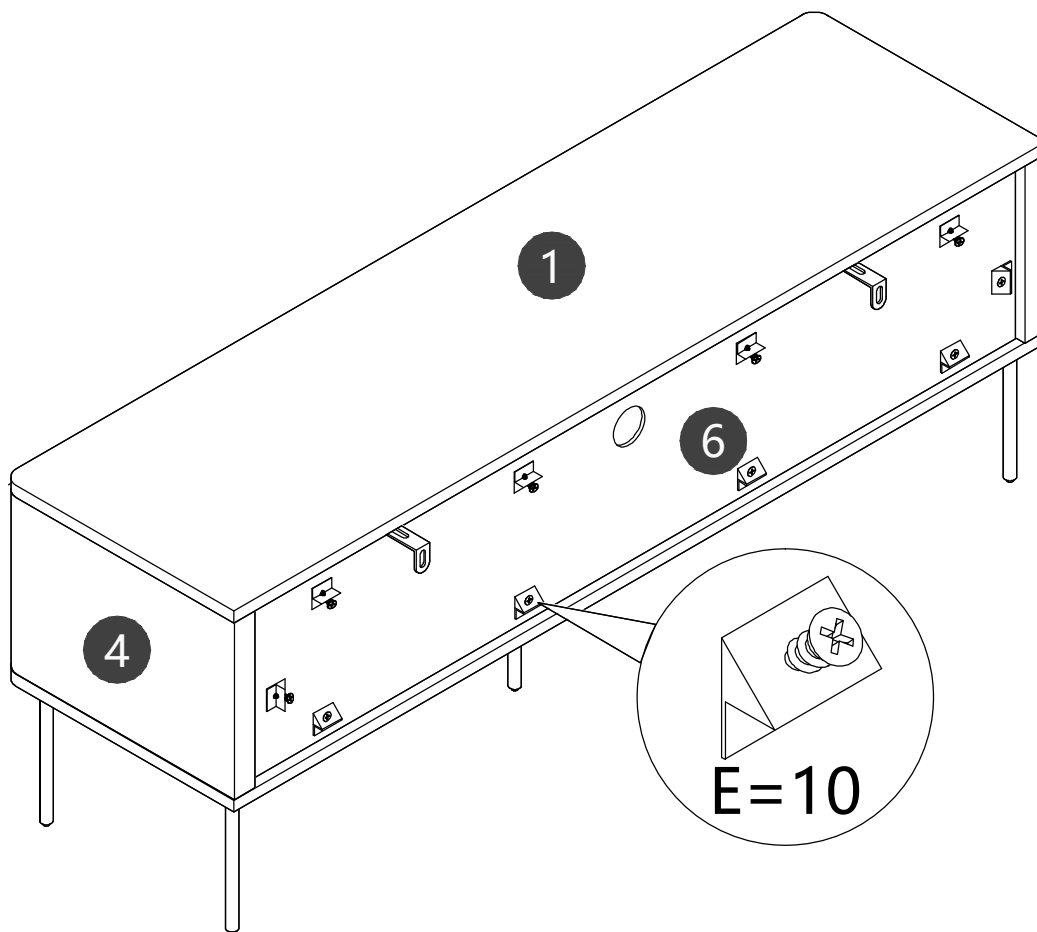

STEP 12

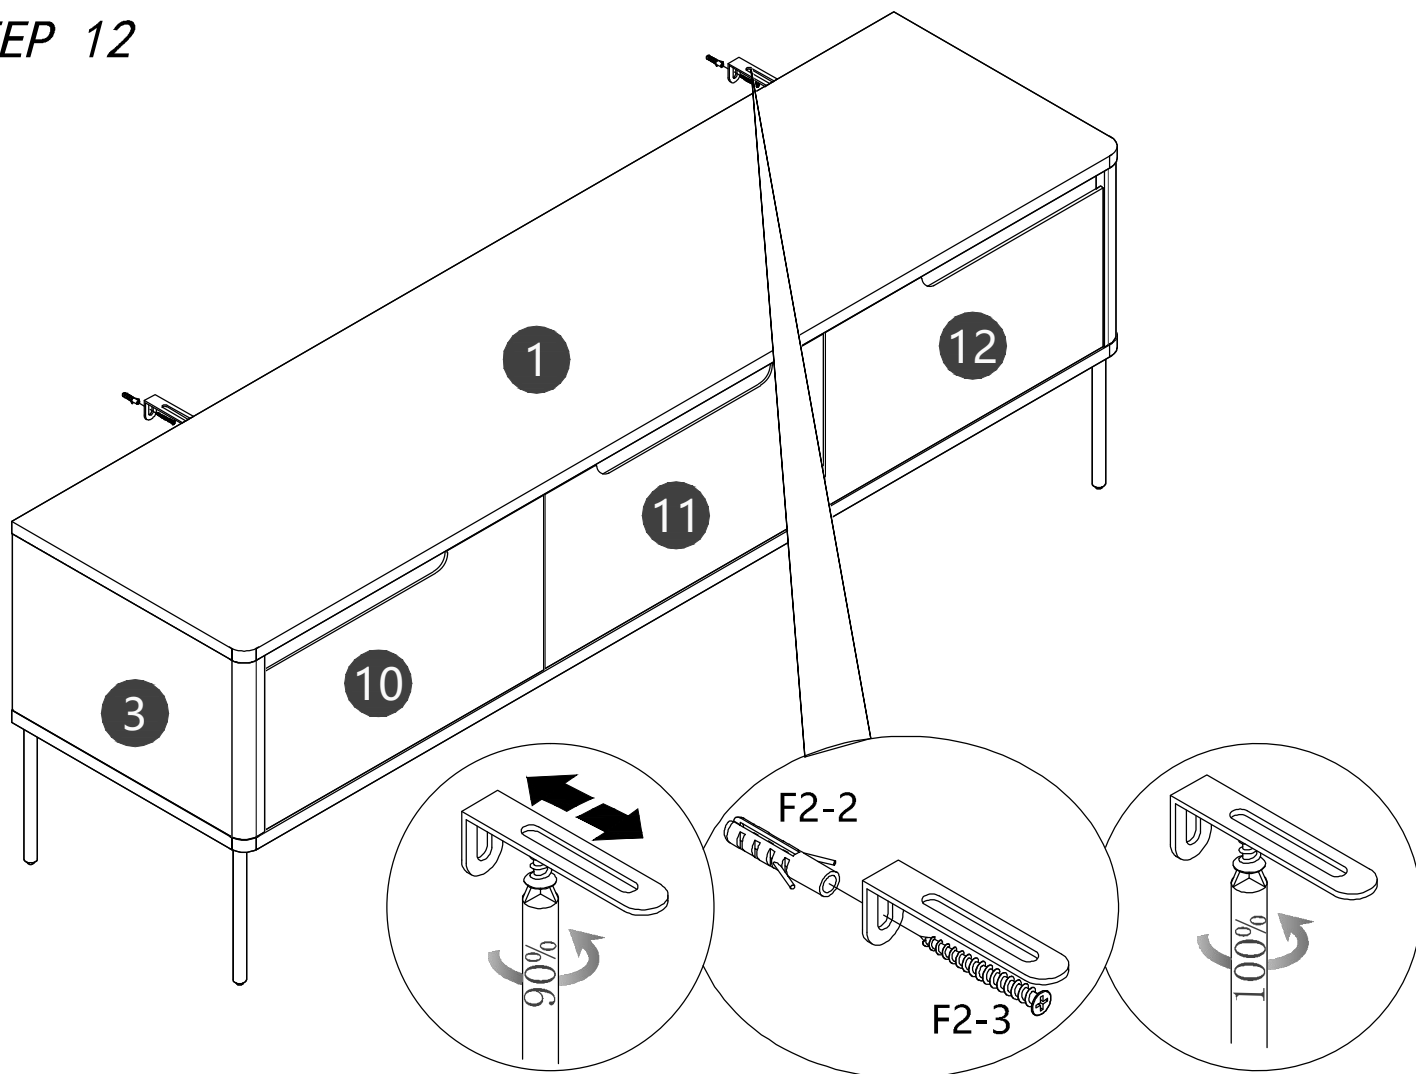

STEP 13

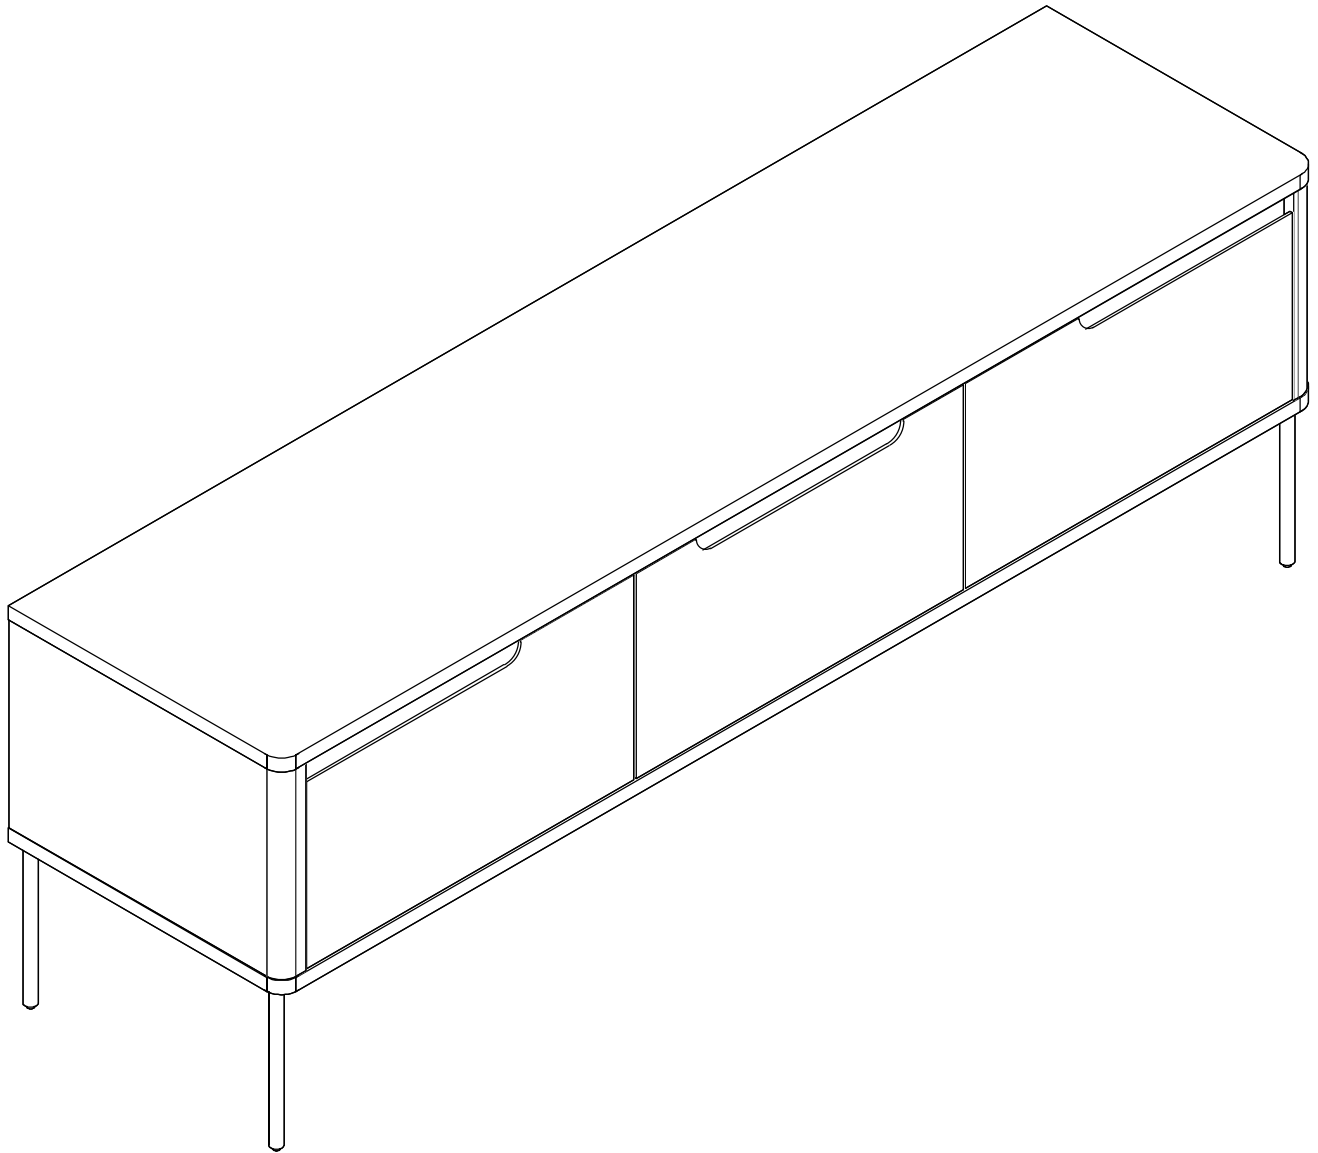

Finish