

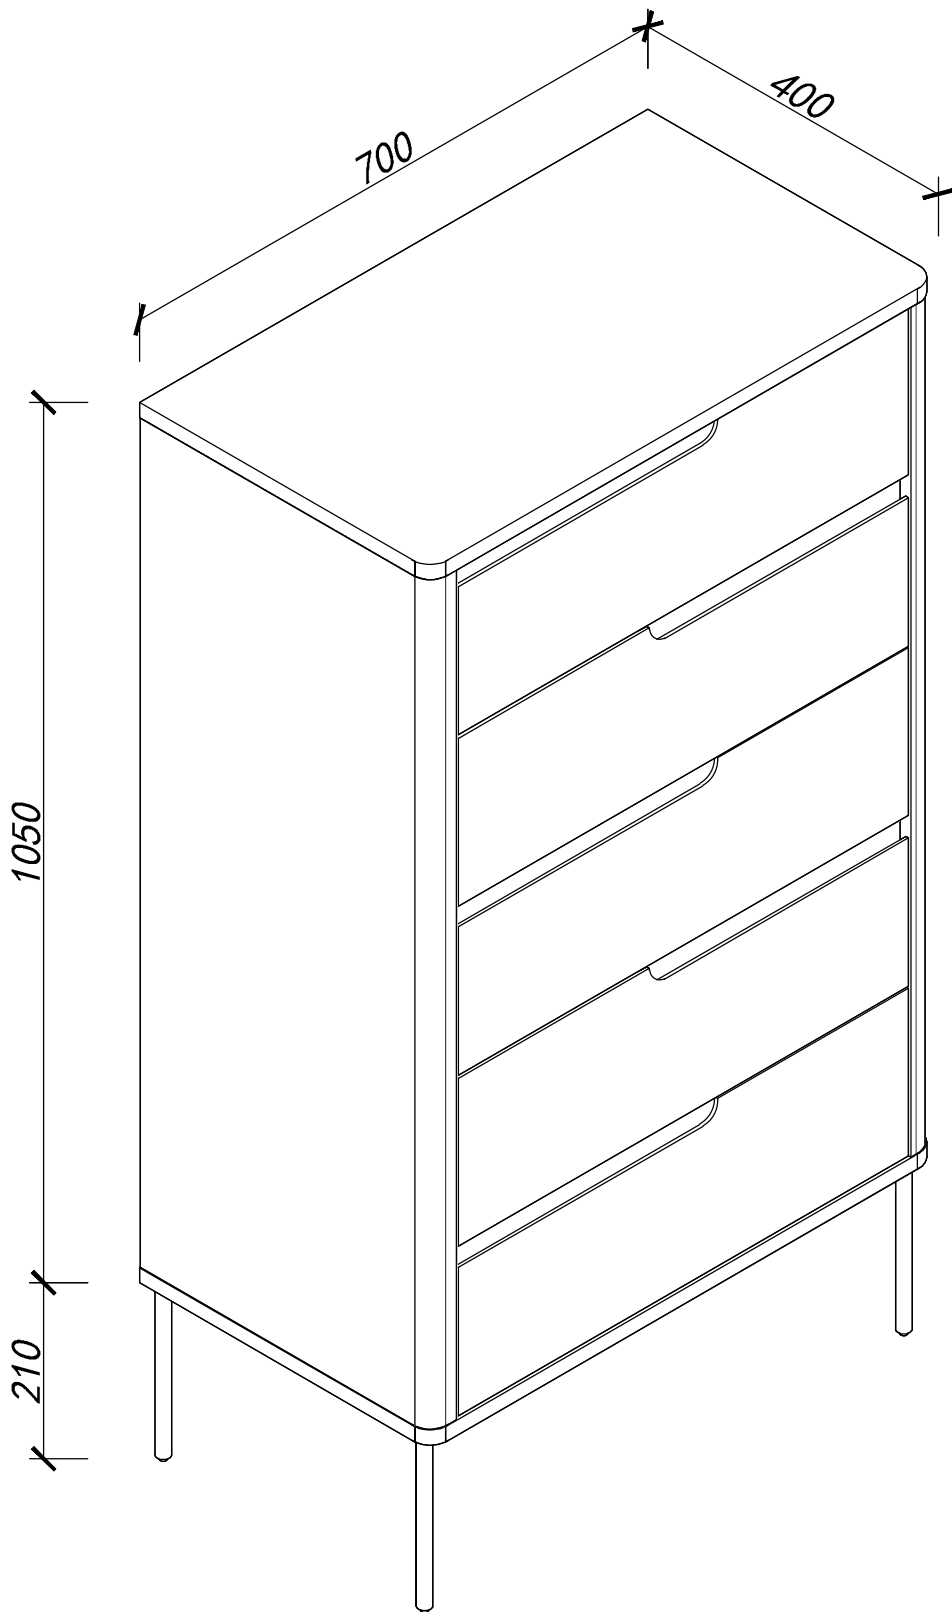
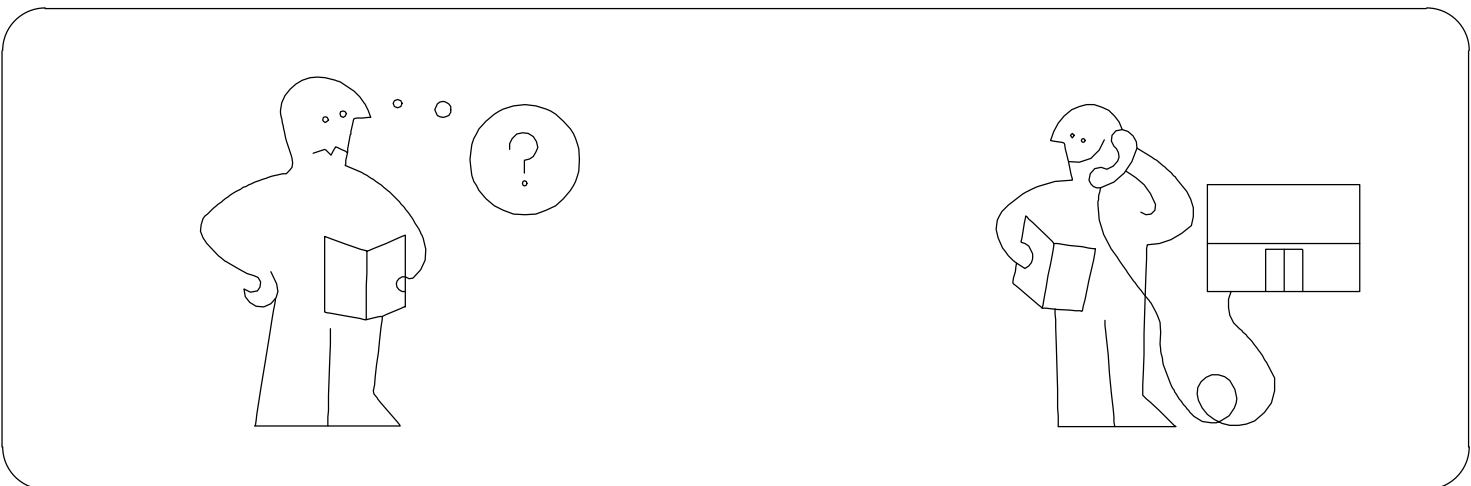
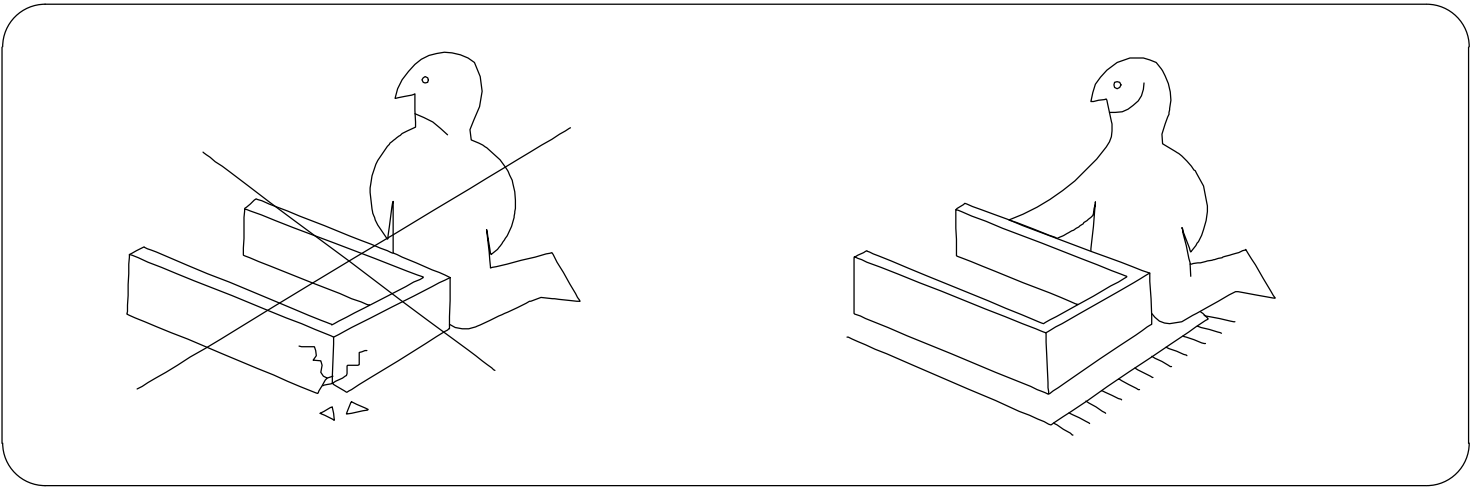


sømcasa


Assembly Instruction

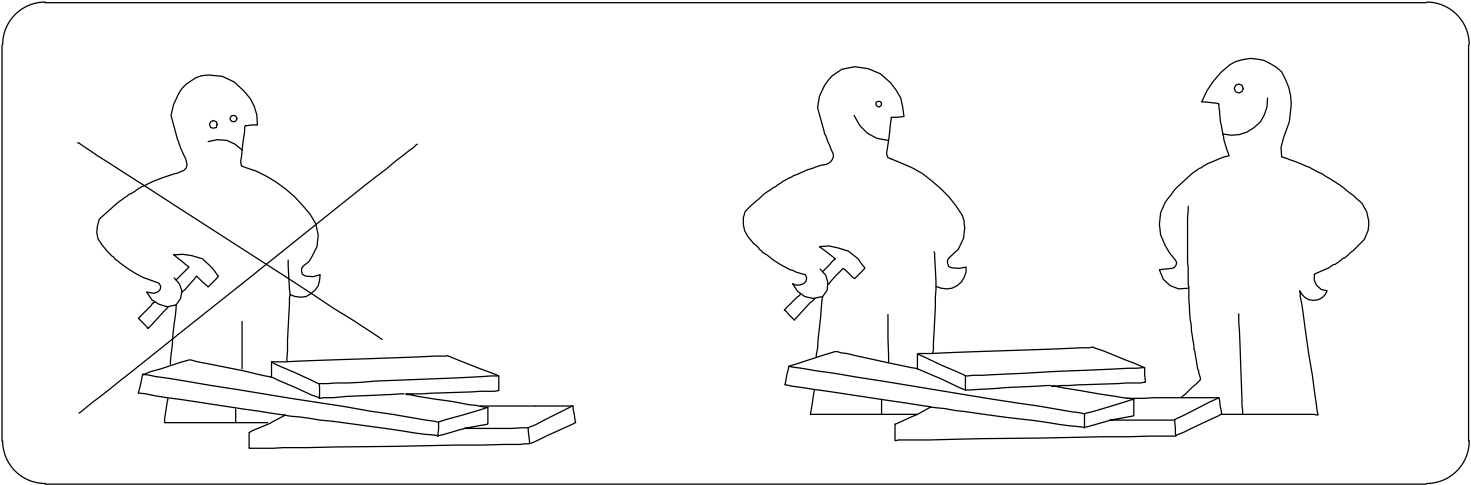

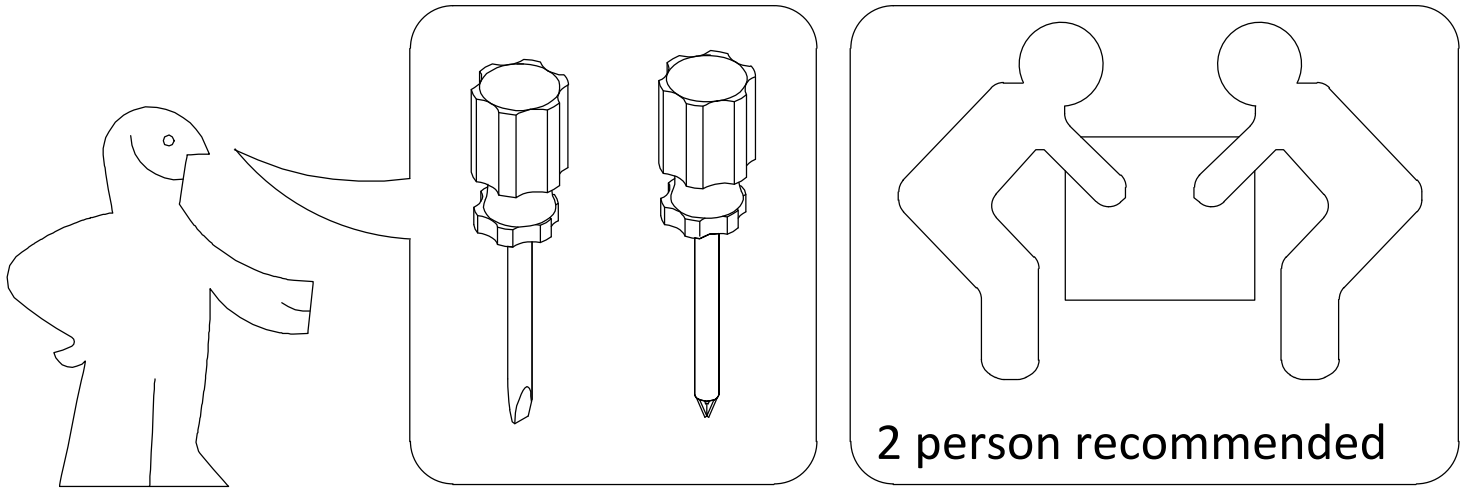


Panel No	Panel Sizes	Quantity
1	700*400*18	1
2	700*400*18	1
3	1014*399*36	1
4	1014*399*36	1
5	626*60*16	1
6	1014*100*16	1
7	1024*273*5	2

Panel No	Panel Sizes	Quantity
8	620*200*18	3
9	620*200*18	2
10	582*150*12	5
11	350*150*12	5
12	350*150*12	5
13	337*100*12	5
14	592*348*5	5

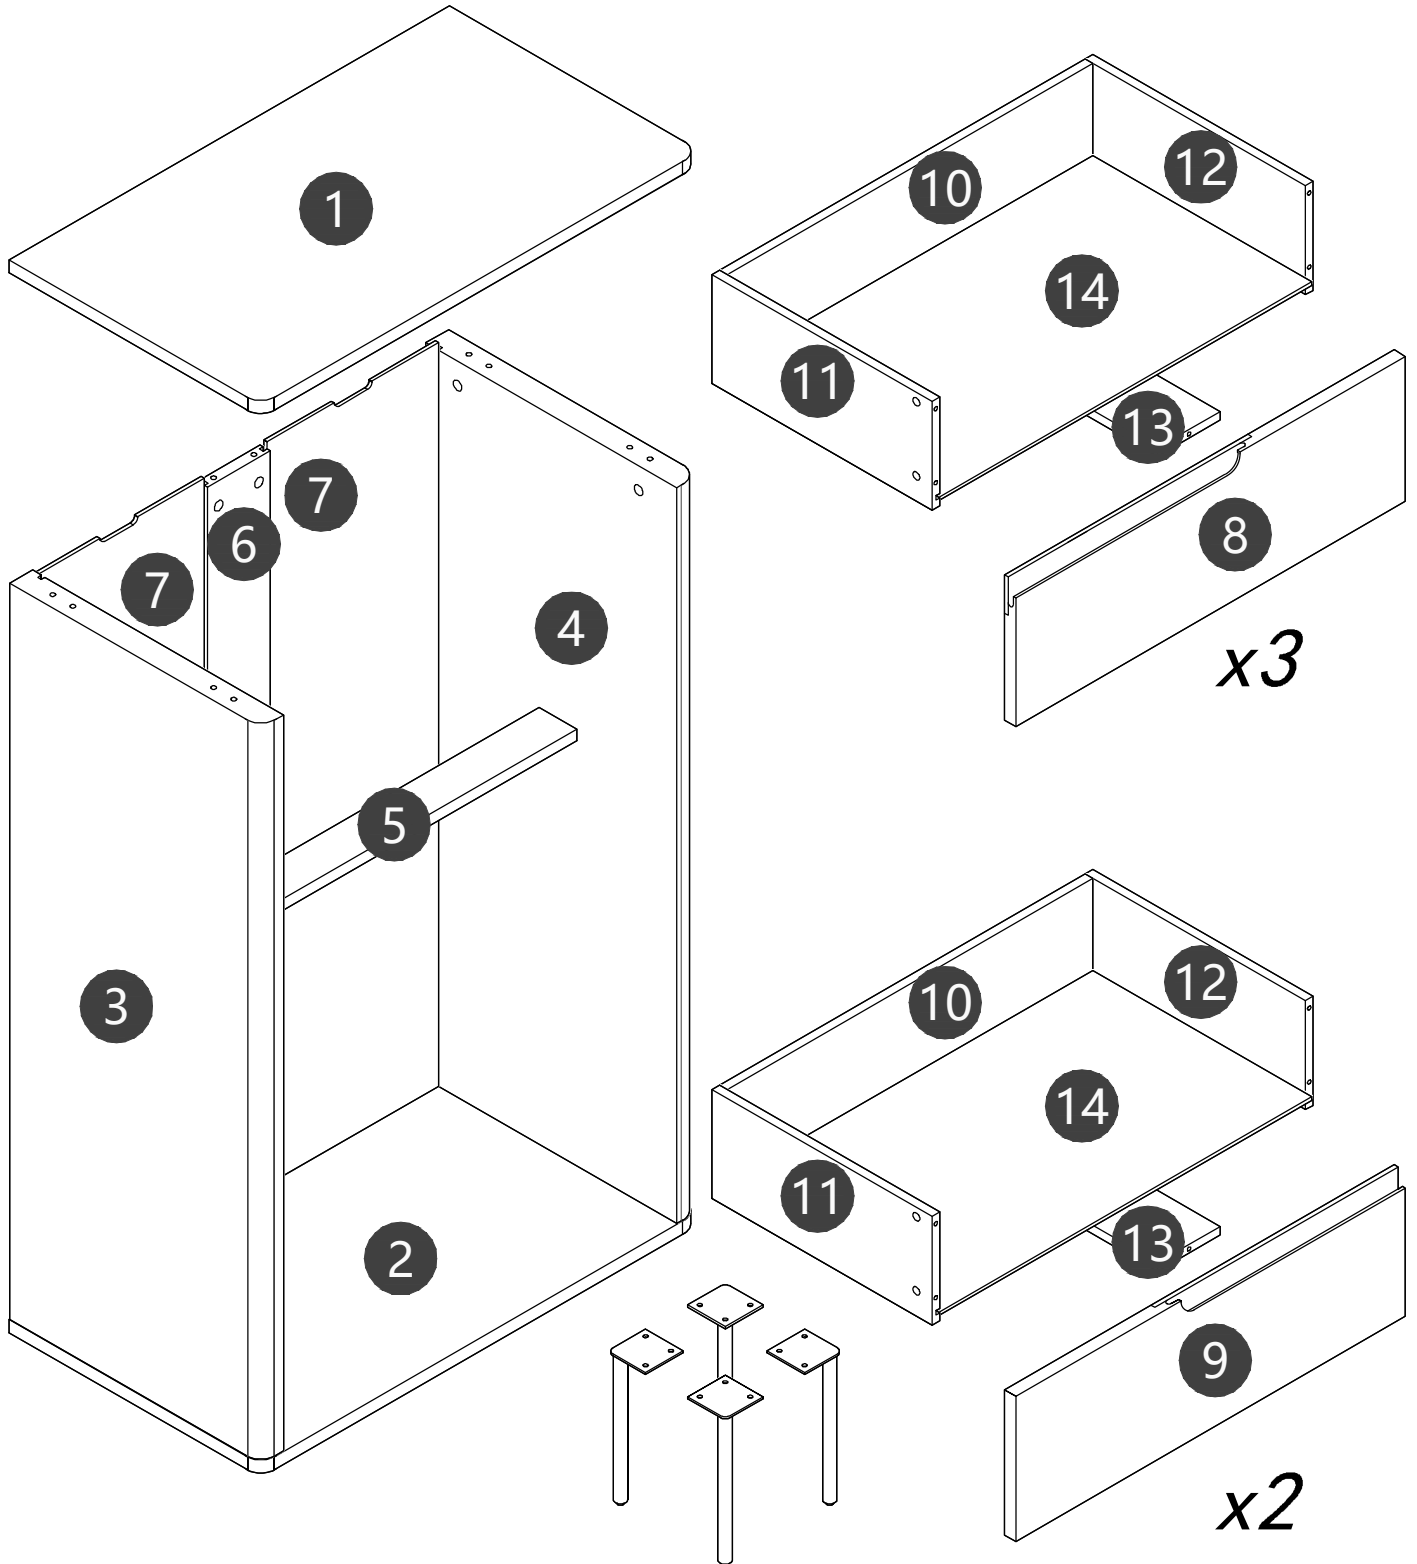


Fittings




M6*40

A=8



Φ8*30

B=10

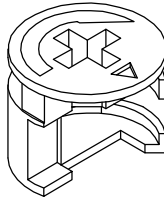


Φ15*12

C=8




Φ21


D=58

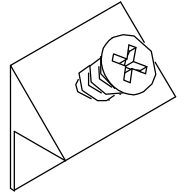

E=16

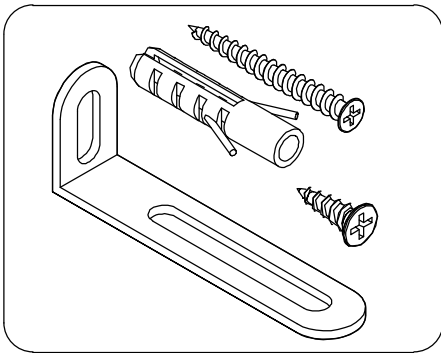


F=2



M6*16

G=12

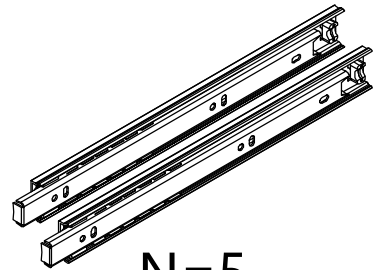

N=5




M4

H=1




M6*34

O=50




Φ12*10.5

P=50

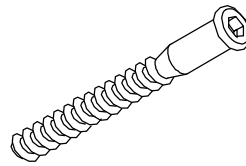

Φ7*50

Q=6

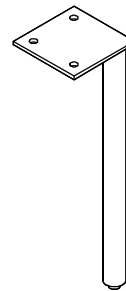

J=4




M3.5*12

V1=40



M4







Z1=12









M4

Z2=12


STEP 1

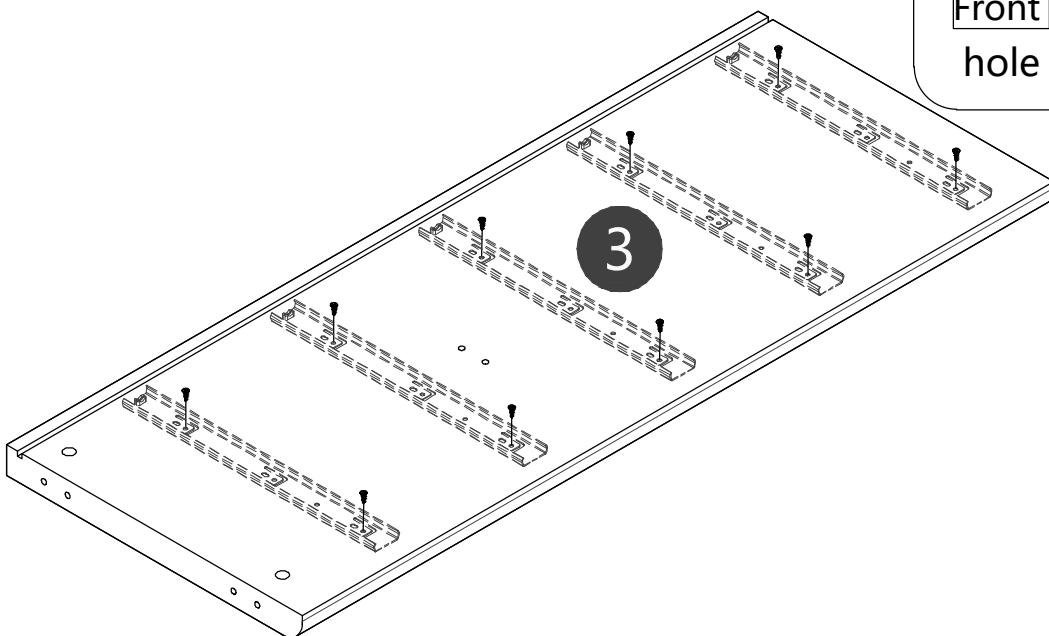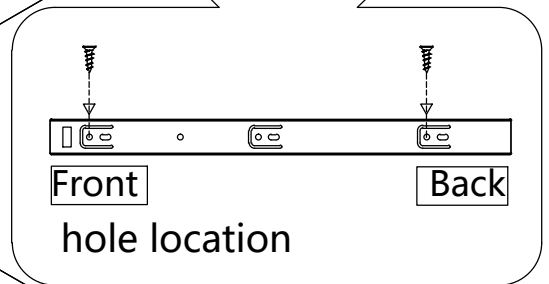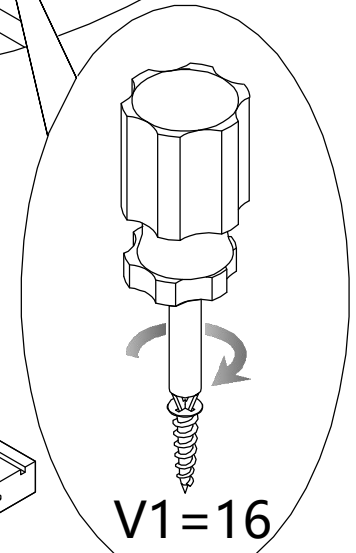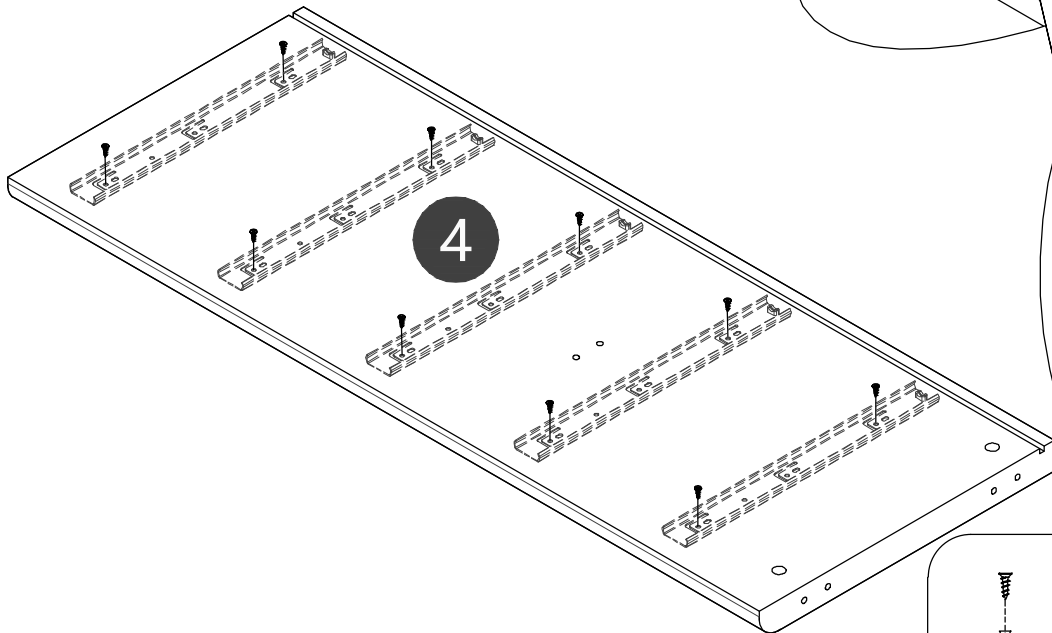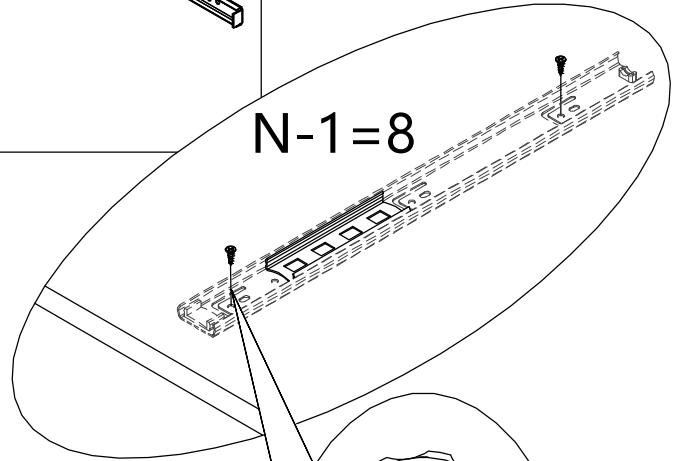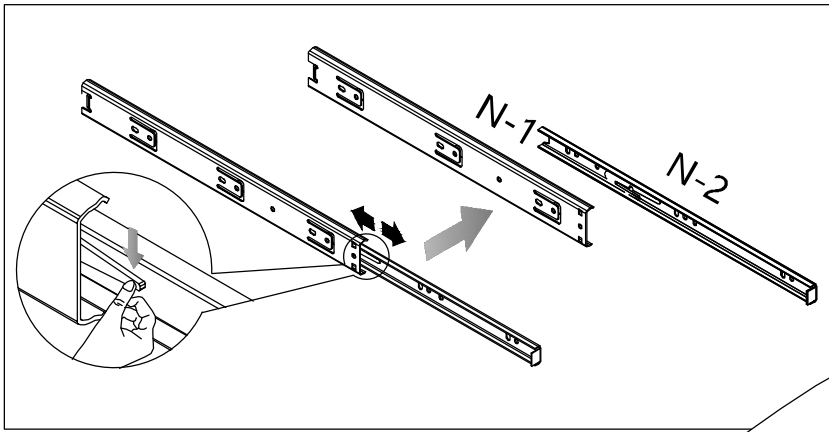


STEP 2

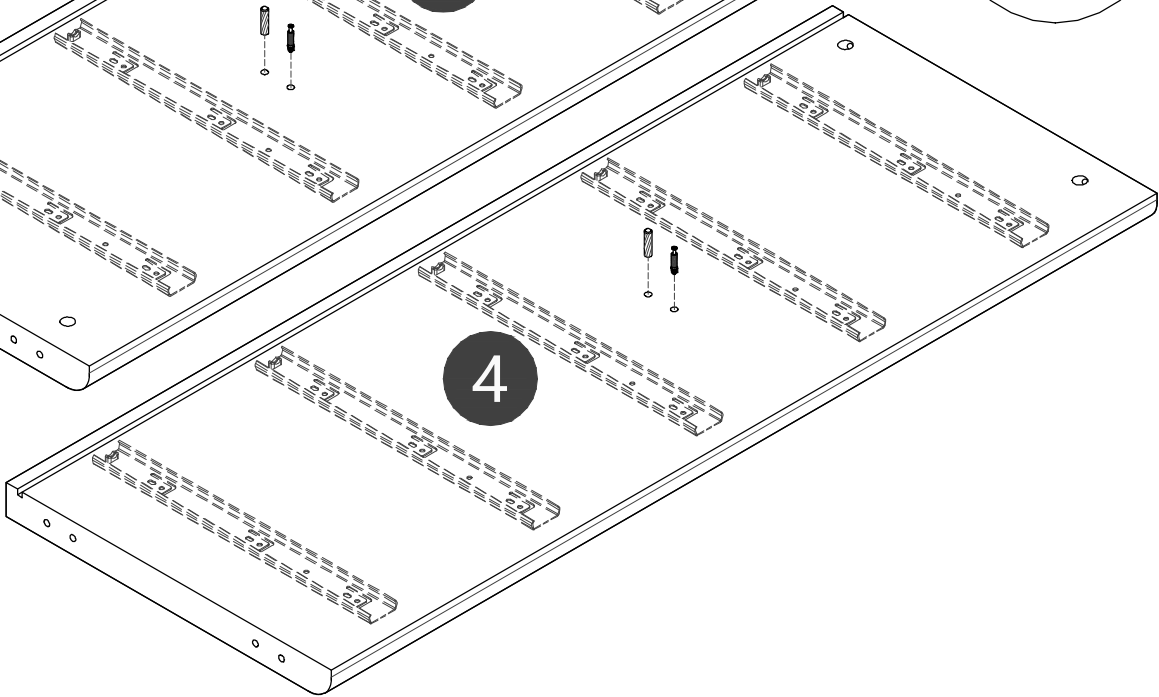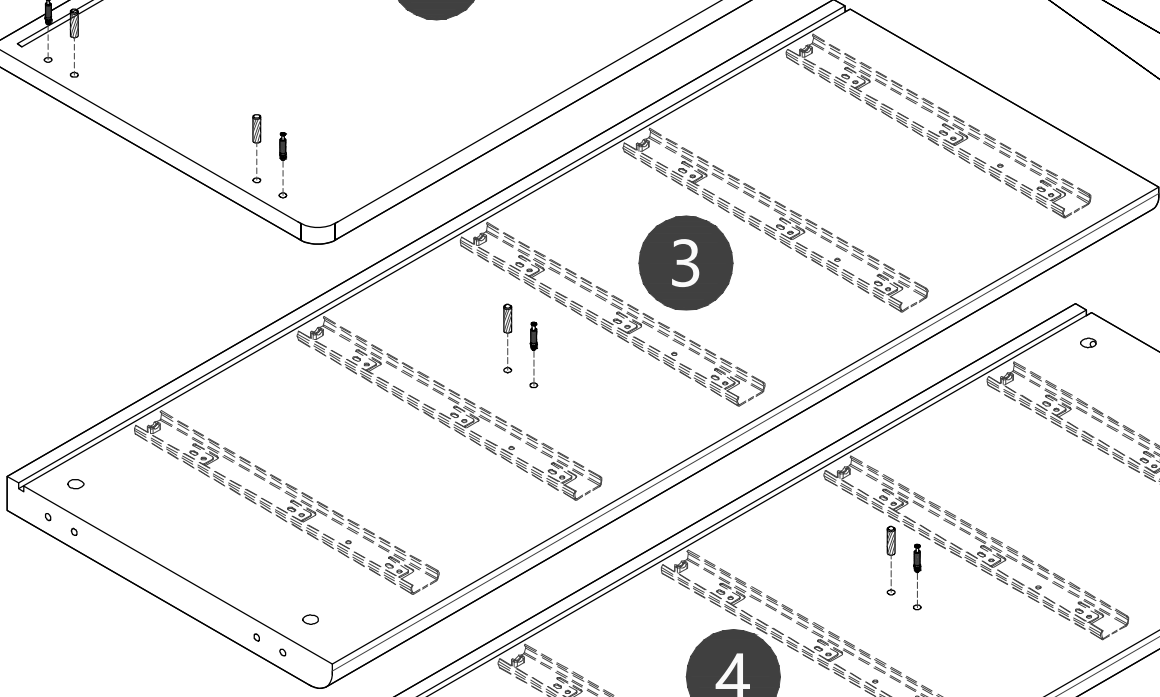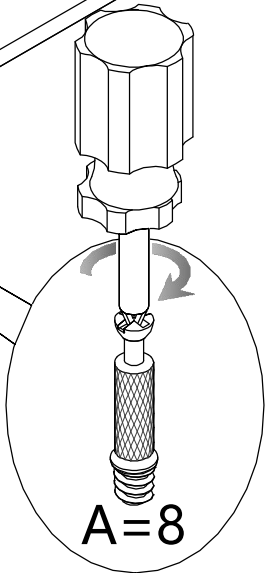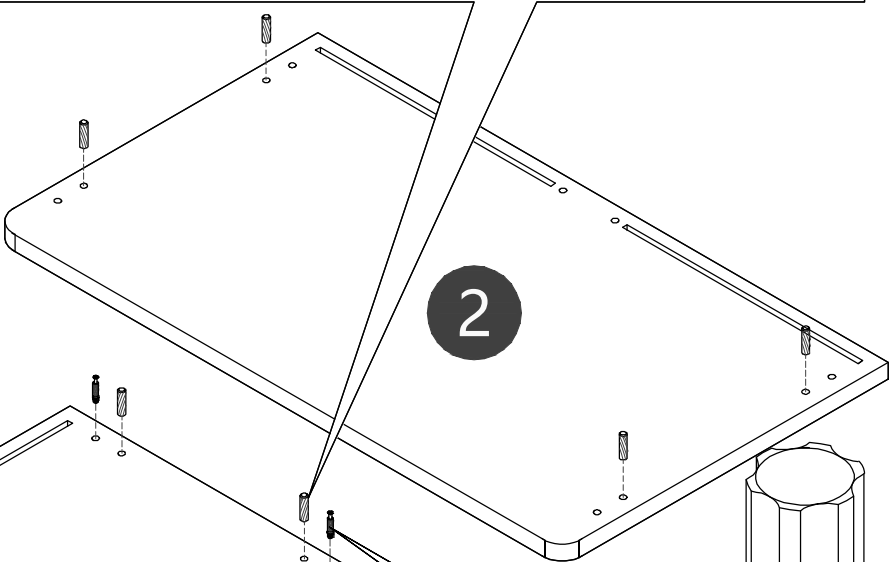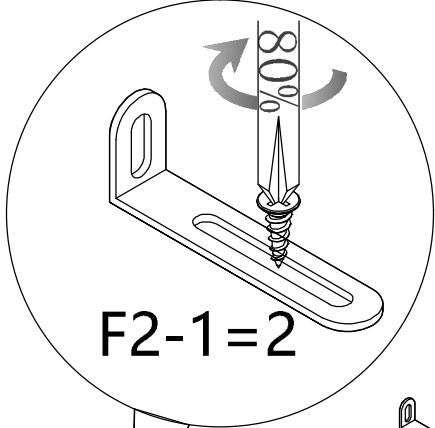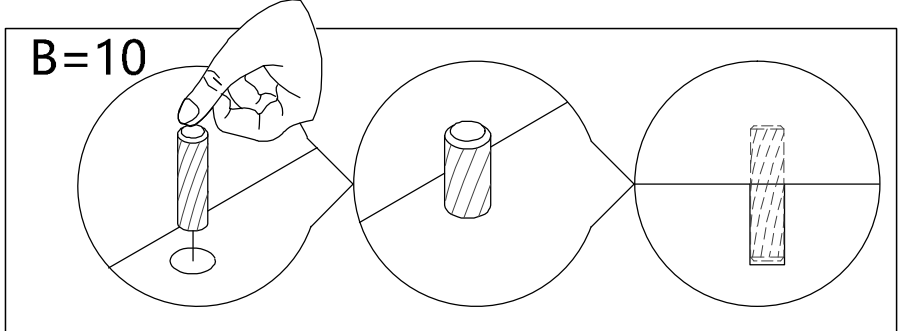


STEP 3

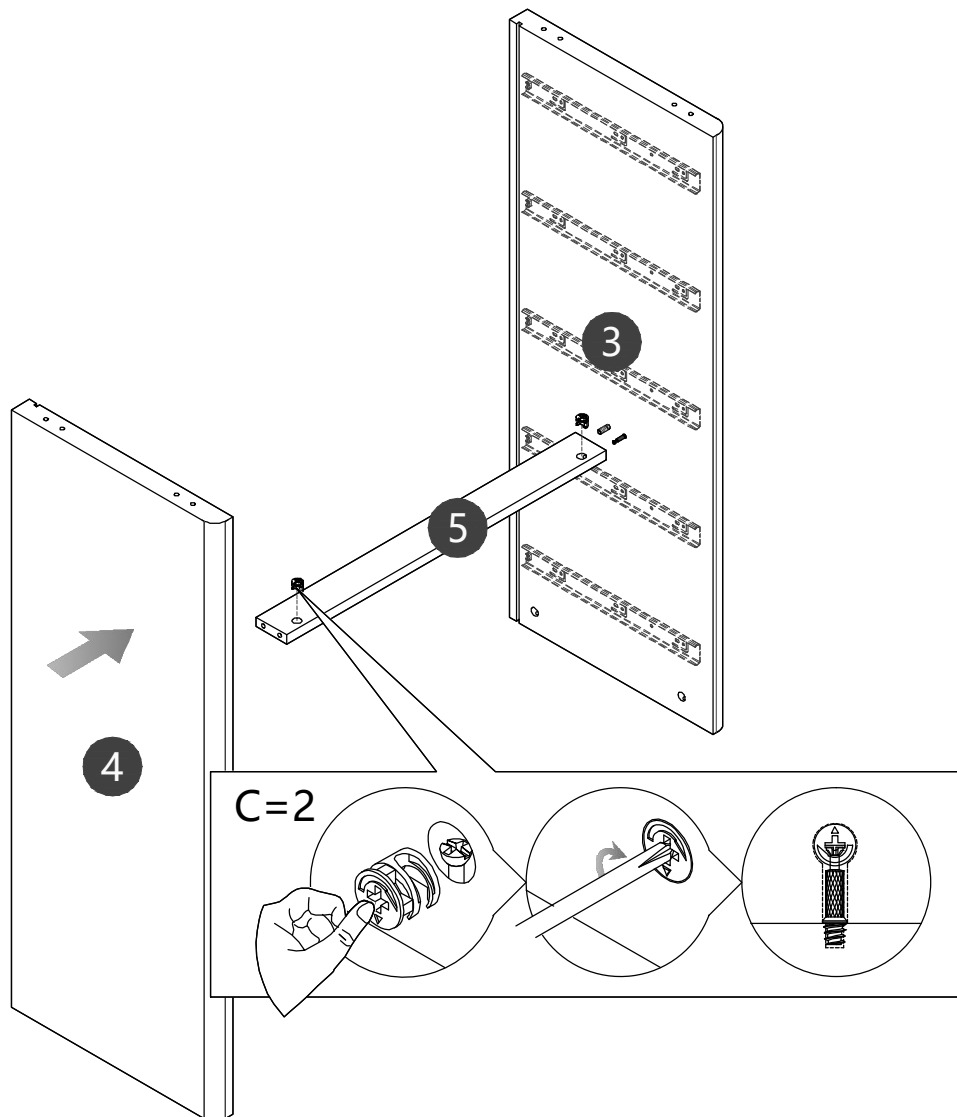


STEP 4

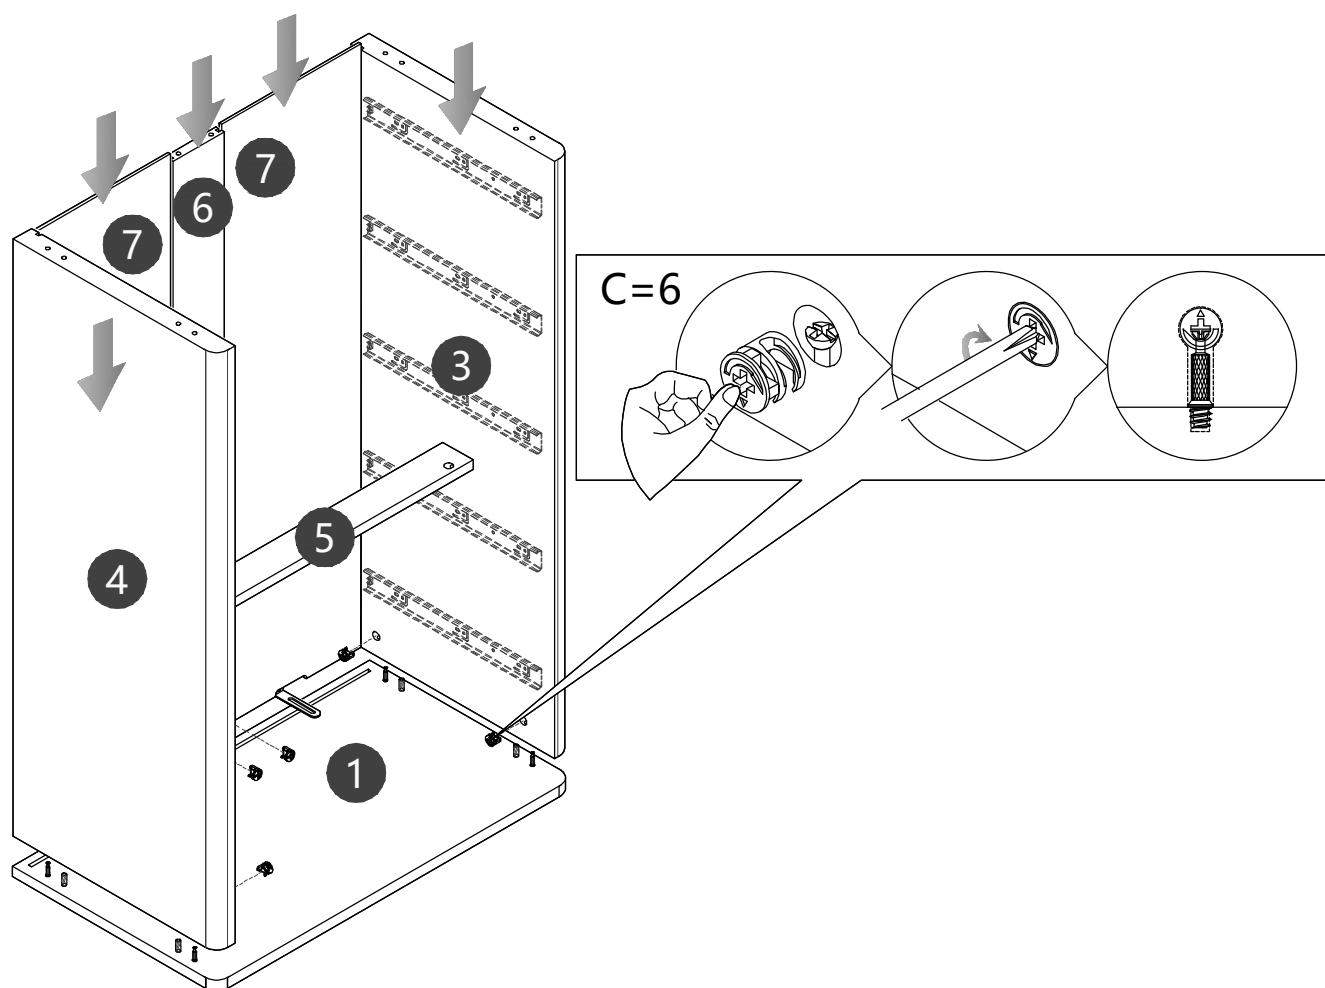


STEP 5

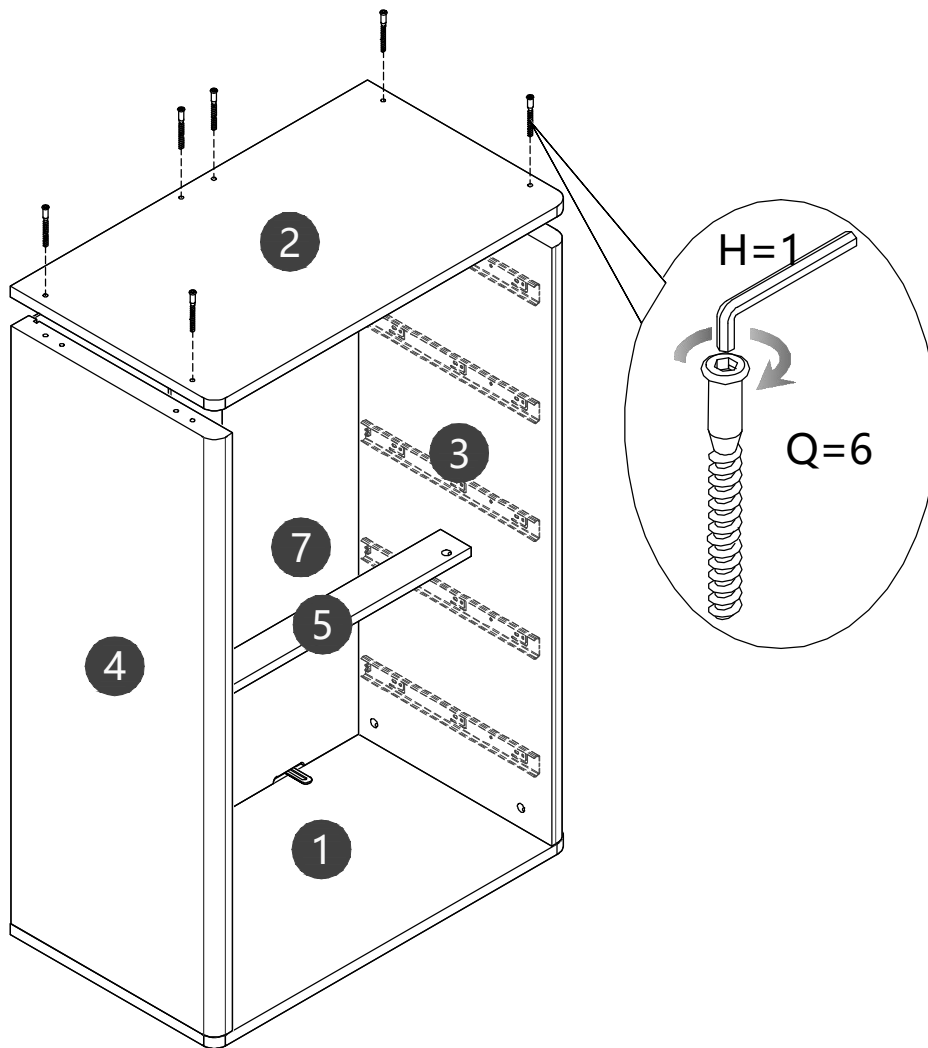


STEP 6

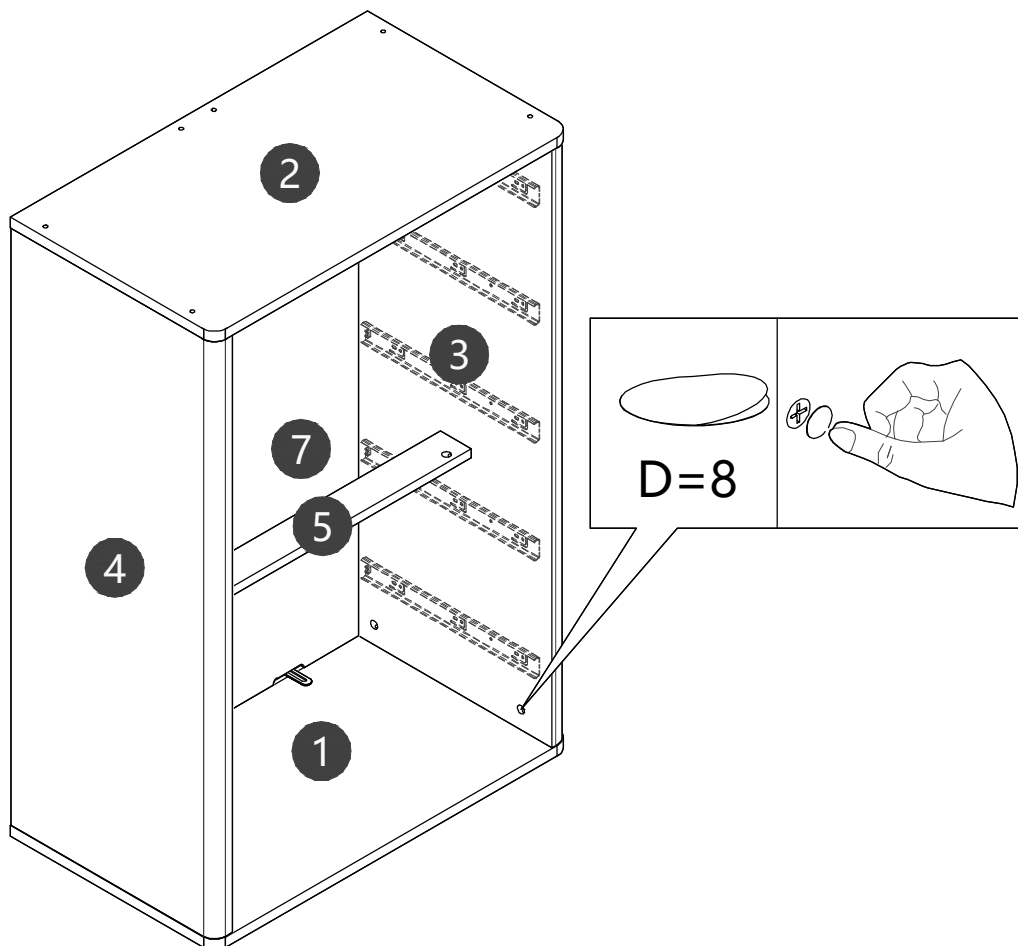





STEP 7

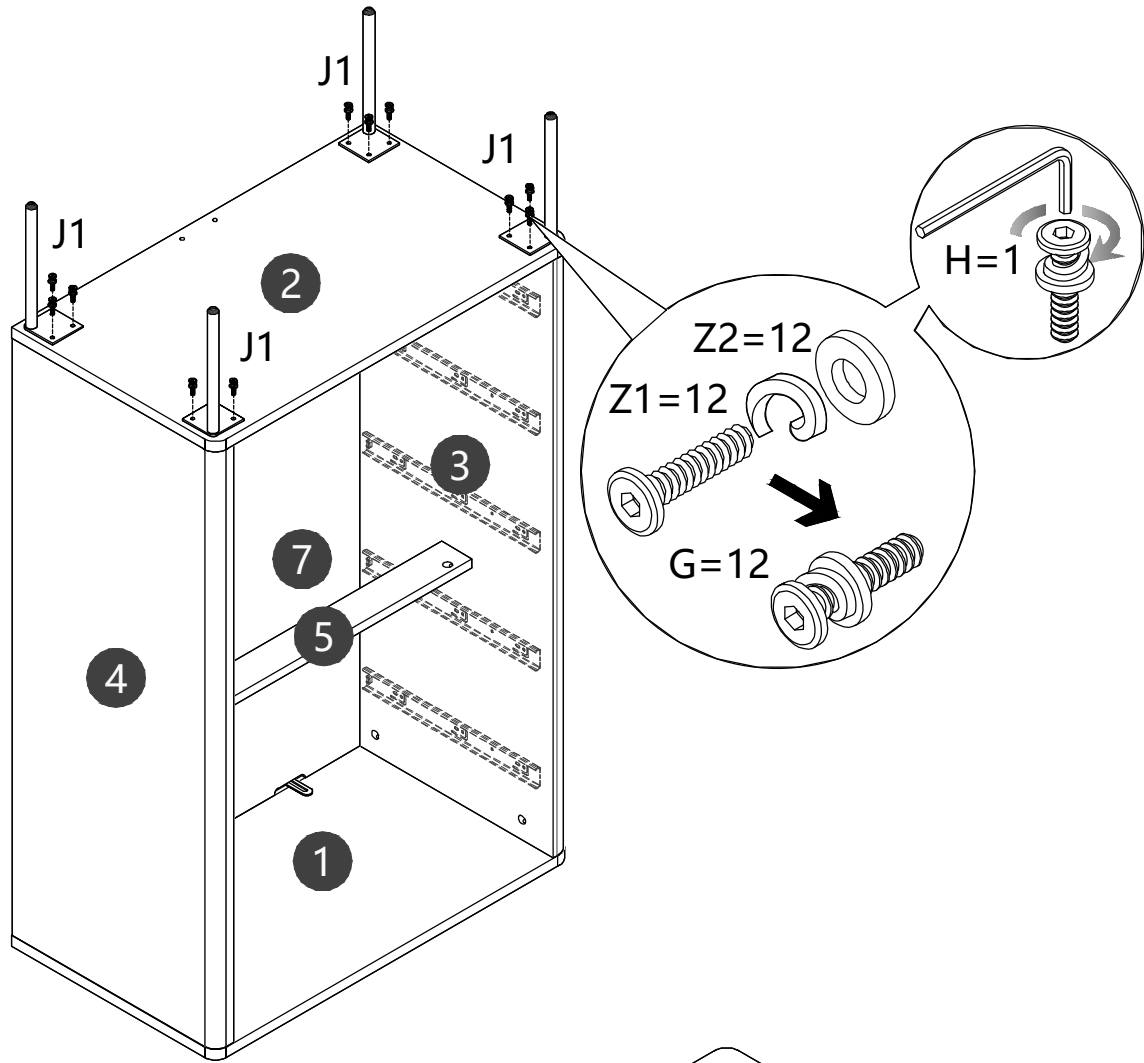

STEP 8

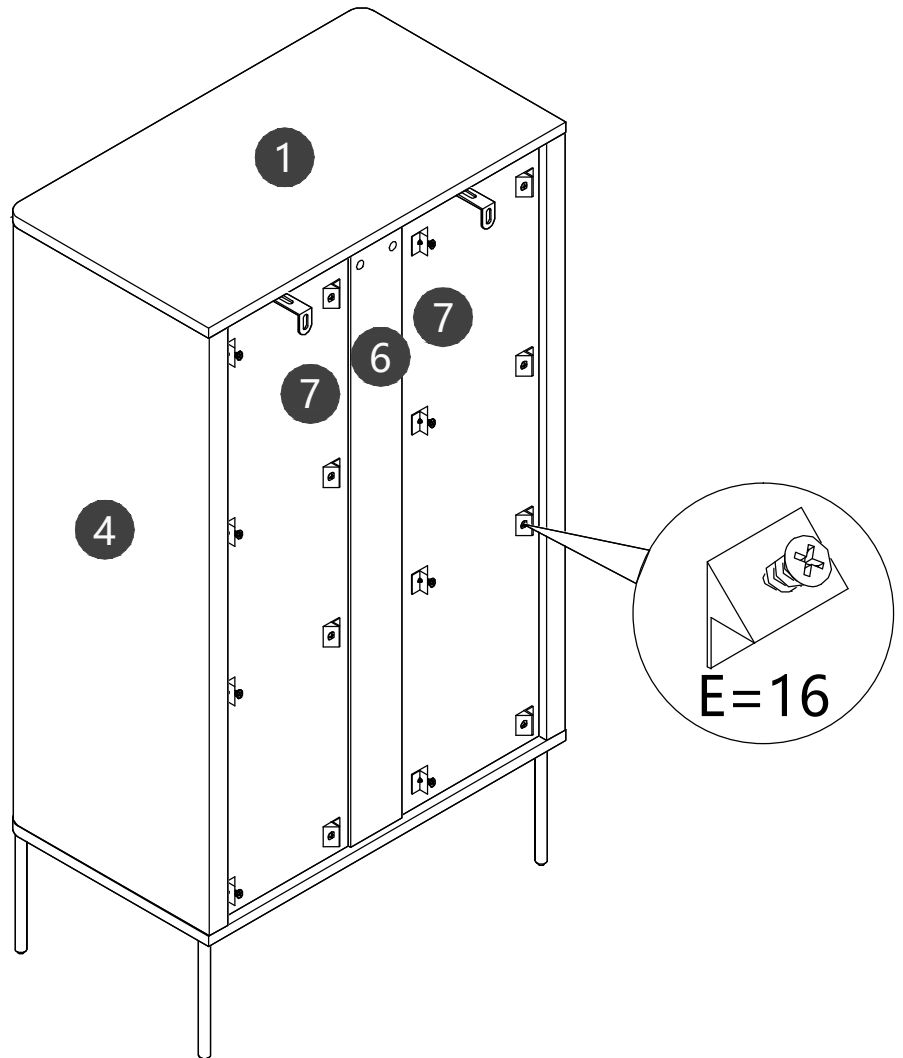


STEP 9

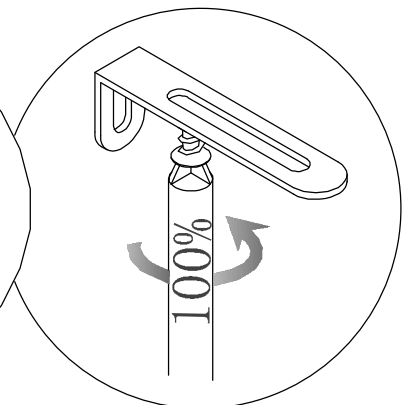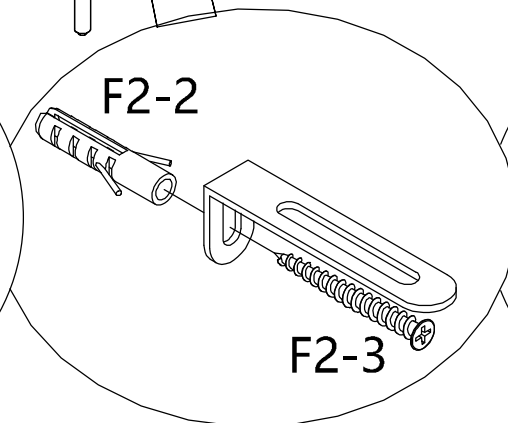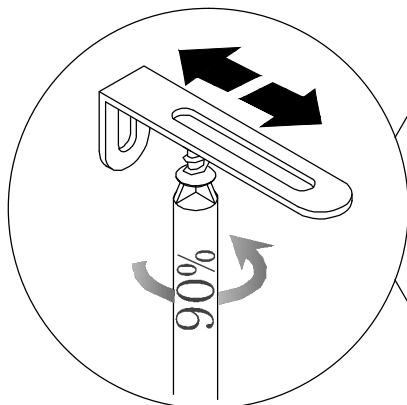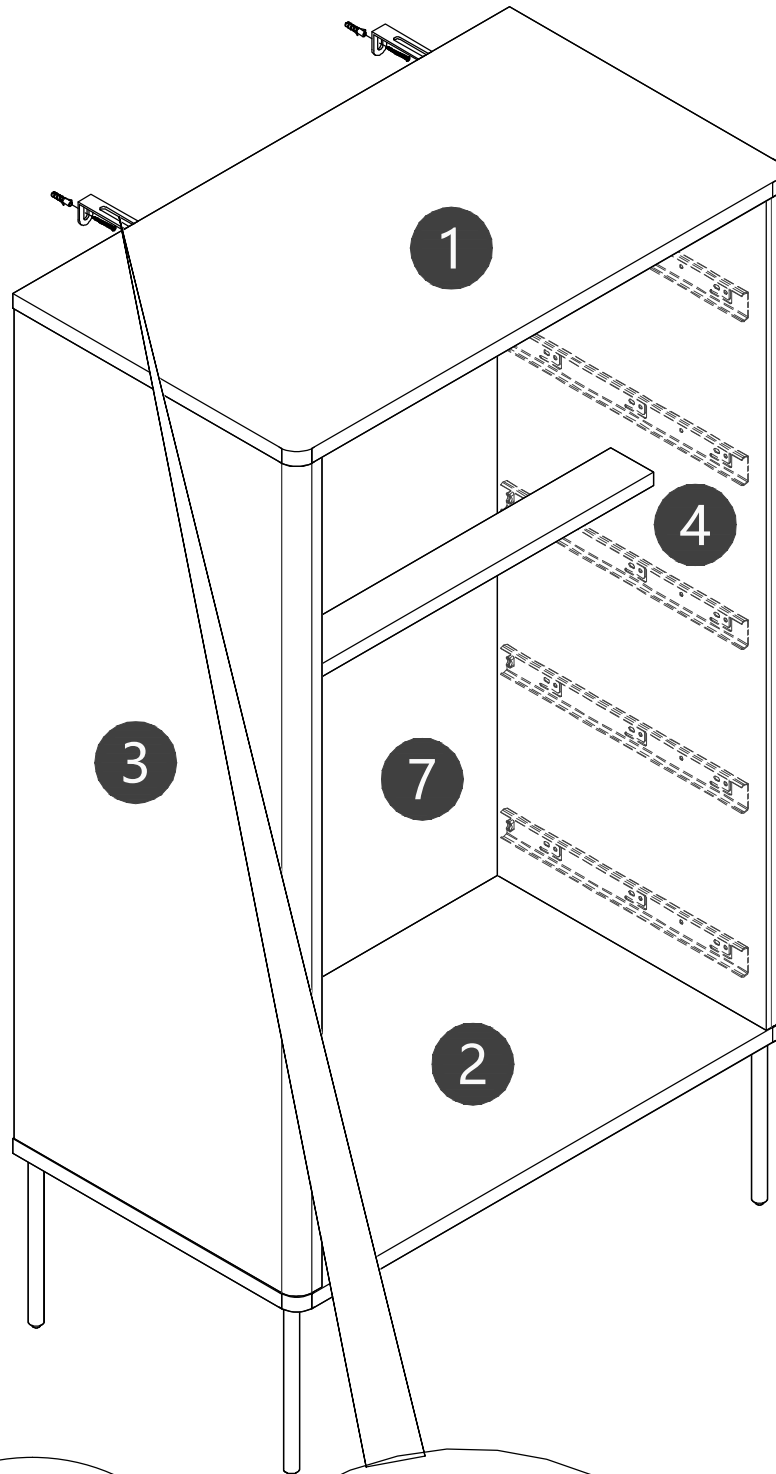


STEP 10


10-1

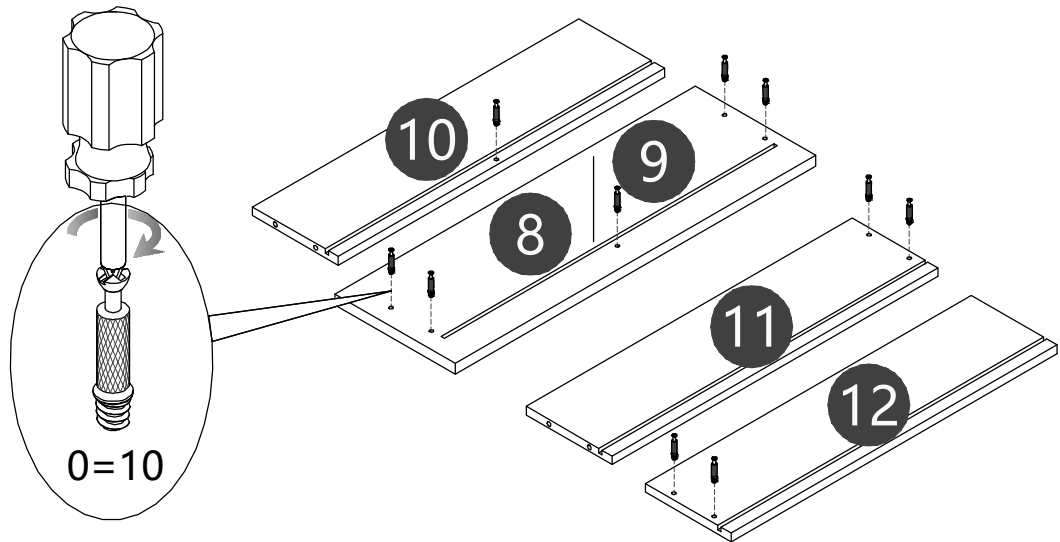


10-2

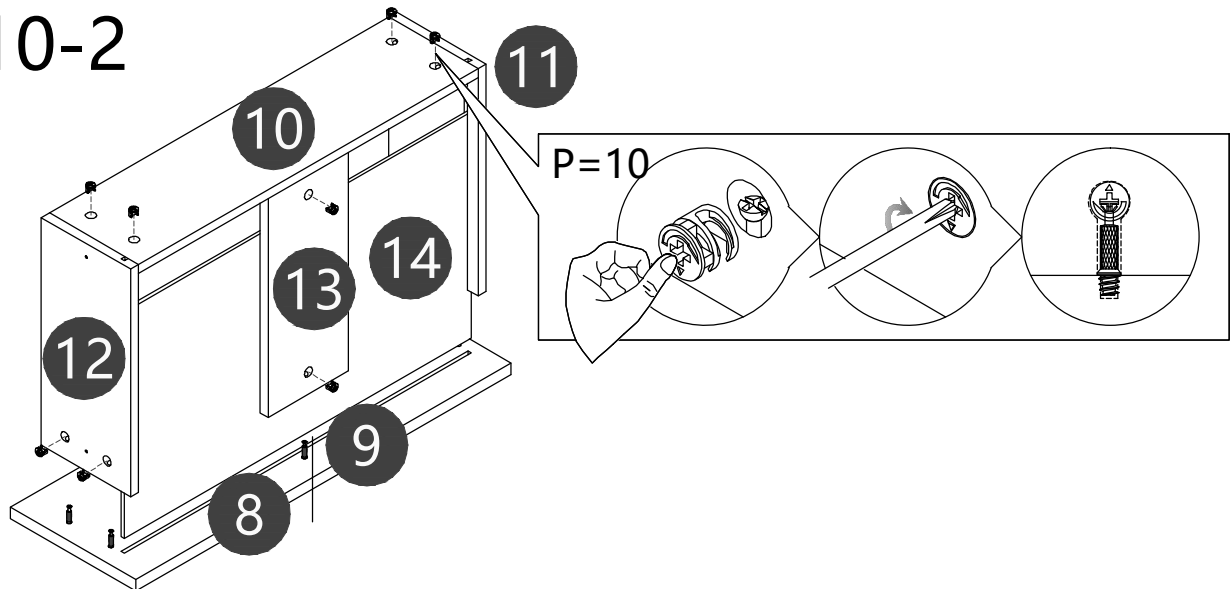

10-3

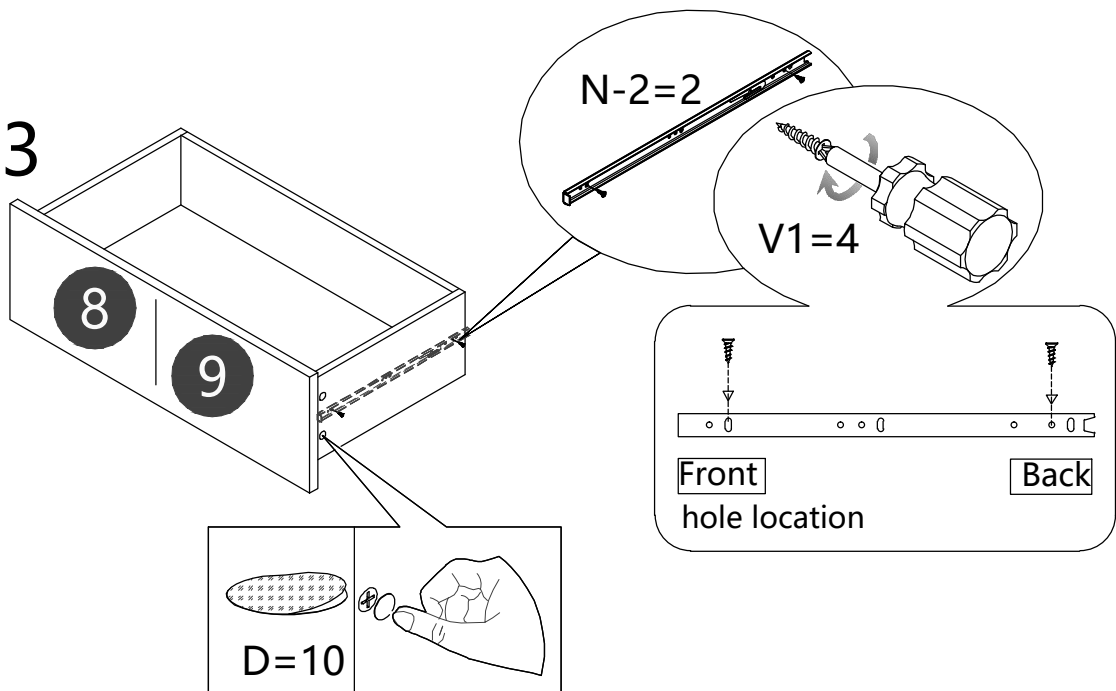

STEP 11

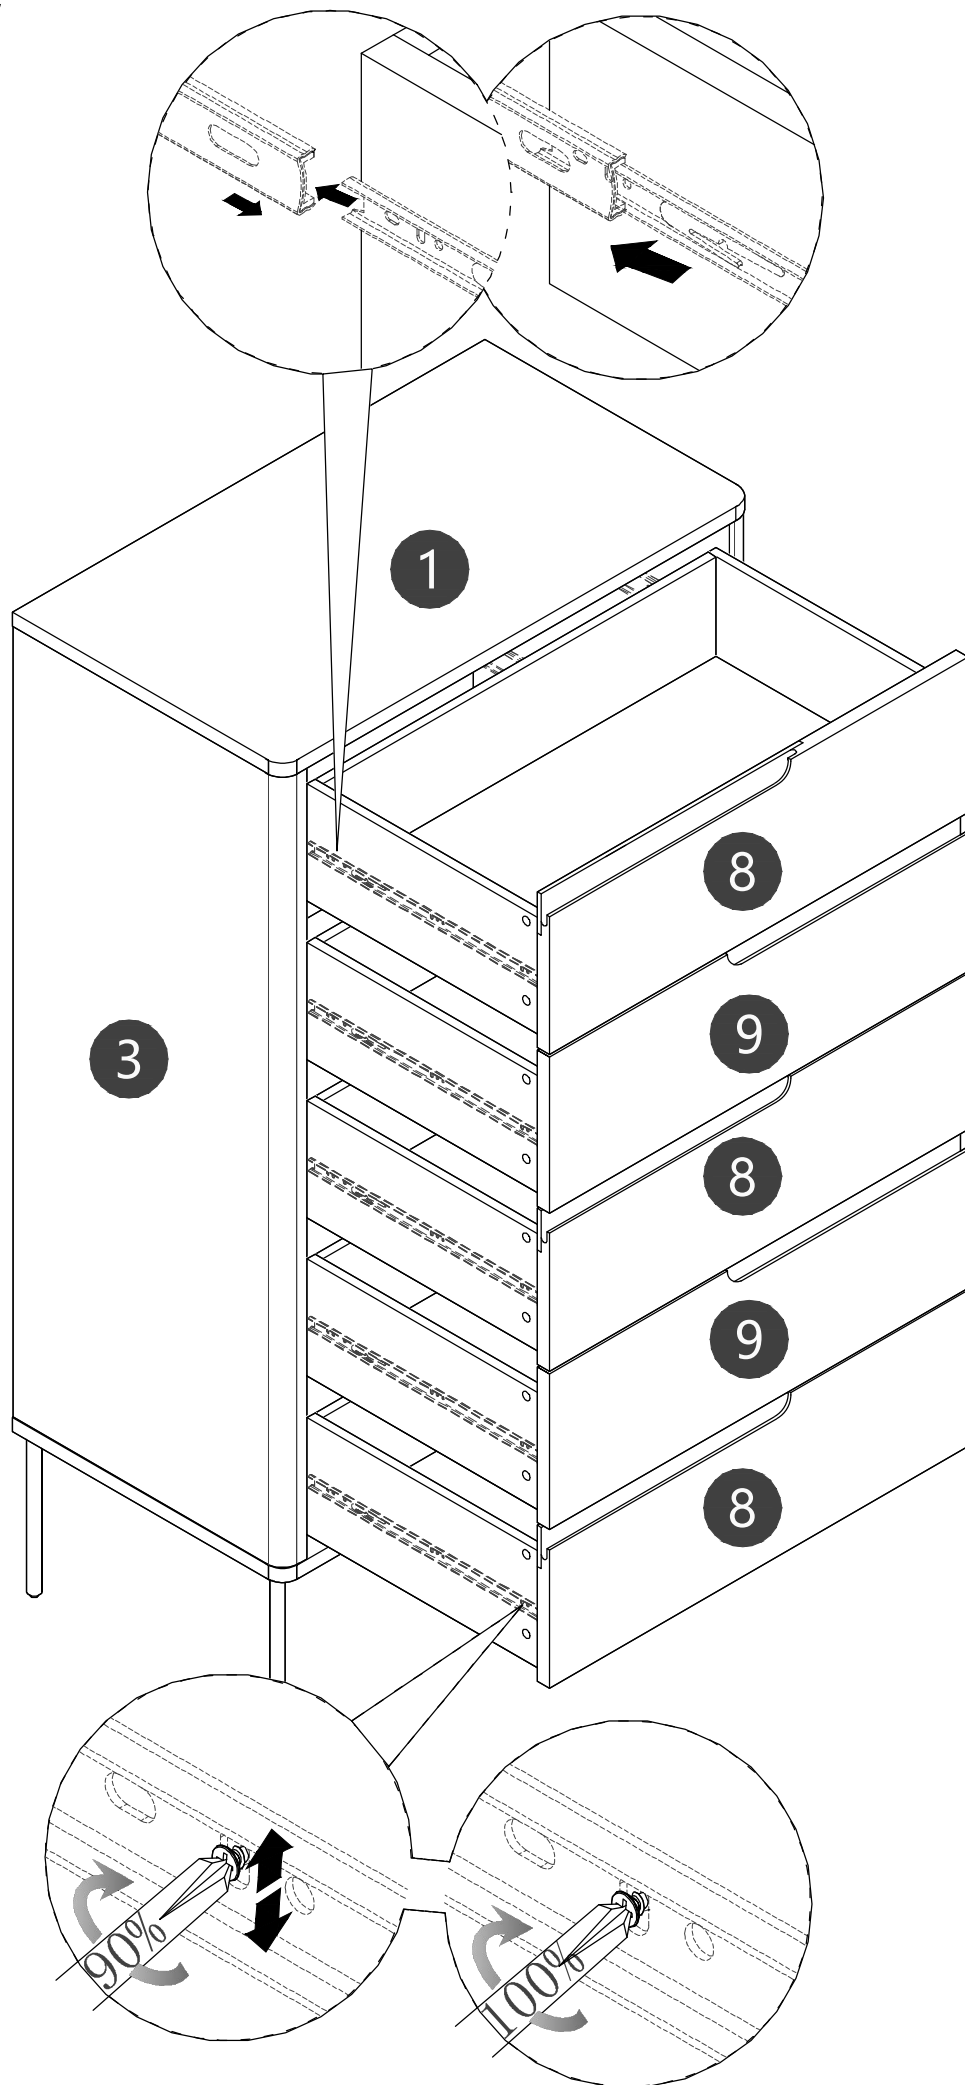

STEP 12



Finish